

Downloaded from Dealers Industrial Equipment -- Visit https://DealersElectric.com or call (908) 688-1966 for all of your Teco needs!

TECO Westinghouse

ISSUED

TYPE

8/28/2014


AEHH8B

PERFORMANCE DATA 3-PHASE INDUCTION MOTOR


ENCLOSURE TEFC CATALOG#

HB0026

HP KW POLE SIZE VOLTAGE H2 AMBIENT CLASS DESIGN RATING FACT 2 1.5 6 184T 460 60 50°C F B CONT. 1.13 VARIABLE FREQUENCY DRIVE SERVICE VARIABLE TORQUE HZ HP RPM TORQUE (Ib-ft) OHMS/PHASE EQUIVALENT WYE ((AT RATED OPERATING TEMPERATU) HZ HP RPM TORQUE (Ib-ft) R1 R2 X1 X2 HZ HP RPM TORQUE (Ib-ft) HZ HP RPM TOR HZ HP RPM TORQUE (Ib-ft) HZ HP RPM TOR HZ HP RPM TORQUE (Ib-ft) HZ HP RPM TOR GOIO3~2 60~1200 0.027-8.975 60~120 2 1200-2400 8.975 GOIO .2-2 120-1200 8.975 60-120 2 1200-2400 8.975 LOAD <td></td>	
HP KW SIZE AMBIENT CLASS DESIGN RATING FACTO 2 1.5 6 184T 460 60 50°C F B CONT. 1.1 2 1.5 6 184T 460 60 50°C F B CONT. 1.1 VARIABLE TORQUE VARIABLE TORQUE OHMS/PHASE EQUIVALENT WYE ((AT RATED OPERATING TEMPERATU) HZ HP RPM TORQUE (Ib-ft) R1 R2 X1 X2 HZ HP RPM TORQUE (Ib-ft) HZ HP RPM TOR HZ HP RPM TORQUE (Ib-ft) HZ HP RPM TOR HZ HP RPM TORQUE (Ib-ft) HZ HP RPM TOR G-60 .2-2 120-1200 8.975 60-120 2 1200-2400 8.975 LOAD FULL LOAD 3/4 LOAD 1/2 LOAD FULL LOAD 3/4 LOAD 1/	
VARIABLE FREQUENCY DRIVE SERVICE VARIABLE TORQUE OHMS/PHASE EQUIVALENT WYE ((AT RATED OPERATING TEMPERATU) HZ HP RPM TORQUE (lb-ft) R1 R2 X1 X2 3-60 0.0003-2 60~1200 0.027~8.975 2.4842 3.3568 10.221 14.583 CONSTANT TORQUE CONSTANT HORSEPOWER HZ HP RPM TORQUE (lb-ft) HZ HP RPM TORQUE (lb-ft) HZ HP RPM TORQUE (lb-ft) HZ HP RPM TOR (lb 6-60 .2-2 120~1200 8.975 60~120 2 1200-2400 8.975 TYPICAL PERFORMANCE FULL LOAD FULL LOAD 3/4 LOAD 1/2 LOAD SOL PPM MIN.% NO.MM% % % % SOL PMM FULL LOAD 3/4 LOAD 1/2 LOAD % % SOL PMM FULL LOAD FULL LOAD LOCKED ROTOR NEMA KVA 4	
VARIABLE TORQUE OHMS/PHASE EQUIVALENT WYE ((AT RATED OPERATING TEMPERATUR) HZ HP RPM TORQUE (lb-ft) R1 R2 X1 X2 3-60 0.0003-2 60~1200 0.027~8.975 2.4842 3.3568 10.221 14.583 CONSTANT TORQUE CONSTANT HORSEPOWER CONSTANT HORSEPOWER TOR (lb HZ HP RPM TOR (lb TOR (lb HZ HP RPM TOR (lb TOR (lb 6-60 .2~2 120-1200 8.975 60~120 2 1200-2400 8.975 TYPICAL PERFORMANCE FULL LOAD J/4 LOAD J/4 LOAD J/2 LOAD SOL PRES LEVEL Db I170 86.5 88.5 88.5 70.5 63 50.5 55 CURRENTS VOLAD FULL LOAD LOCKED ROTOR NEMA KVA 460 SAFI XVA XE AT AT AT AT AT AT SAFI XVA SAFI MIN.0 VOLT <t< td=""><td></td></t<>	
HZ HP RPM TORQUE (lb-ft) R1 R2 X1 X2 3-60 0.0003-2 60~1200 0.027~8.975 2.4842 3.3568 10.221 14.583 CONSTANT TORQUE CONSTANT TORQUE CONSTANT HORSEPOWER HZ HP RPM TORQUE (lb-ft) HZ HP RPM TORQUE (lb-ft) HZ HP RPM TORQUE (lb-ft) HZ HP RPM TOR (lb HZ HP RPM TORQUE (lb-ft) HZ HP RPM TOR (lb HZ HP RPM TOR (lb-ft) HZ HP RPM TOR (lb G-60 .2-2 120~1200 8.975 60-120 2 1200-2400 8.975 FULL LOAD FULL LOAD 3/4 LOAD 1/2 LOAD SOL PRES SOL RPM MIN.% NOM.% % 86.5 70.5 63 50.5 55 I170 86.5 88.5 86.5 70.	
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	
CONSTANT TORQUE CONSTANT HORSEPOWER HZ HP RPM TORQUE (lb-ft) HZ HP RPM TOR (lb 6-60 .2-2 120-1200 8.975 60-120 2 1200-2400 8.975 TYPICAL PERFORMANCE FULL LOAD FULL LOAD 3/4 LOAD 1/2 LOAD FULL LOAD 3/4 LOAD 1/2 LOAD SOL RPM MIN.% NOM.% % 1/2 LOAD FULL LOAD 3/4 LOAD 1/2 LOAD SOL ITTO 86.5 88.5 86.5 70.5 63 50.5 5 ITTO ICOAD FULL LOAD FULL LOAD ICOAD FULL LOAD ICOAD SAFI NO LOAD FULL LOAD ICOAD EUL LOAD ICOCKED ROTOR NEMA KVA CODE SAFI AT AT AT AT CODE COLOAD COLOAD GOL COLOAD GOL COLOAD COLOAD COLOAD COLOAD COLOAD COLOAD COLOAD	X _m
HZ HP RPM TORQUE (lb-ft) HZ HP RPM TOR (lb 6~60 .2~2 120~1200 8.975 60~120 2 120~2400 8.975 TYPICAL PERFORMANCE FULL LOAD RPM FULL LOAD 3/4 LOAD 1/2 LOAD FULL LOAD 3/4 LOAD FULL LOAD 3/4 LOAD PRES LEVEL SOL 1170 86.5 88.5 88.5 86.5 70.5 63 50.5 5 CURRENTS SAFE NO LOAD FULL LOAD LOCKED ROTOR NEMA KVA CODE LETTER AT AT AT AT CODE 460 CODE 460 CODE 460 CODE	146.9
HZ HP RPM TORQUE (lb-ft) HZ HP RPM TOR (lb 6~60 .2~2 120~1200 8.975 60~120 2 1200~2400 8.975 TYPICAL PERFORMANCE FULL LOAD RPM FULL LOAD 3/4 LOAD 1/2 LOAD FULL LOAD 3/4 LOAD FULL LOAD 3/4 LOAD PRES LEVEL SOL 1170 86.5 88.5 88.5 86.5 70.5 63 50.5 5 CURRENTS SAFE NO LOAD FULL LOAD LOCKED ROTOR NEMA KVA CODE LETTER COLD AT AT AT AT CODE 460 CODE 460 CODE 460 CODE CODE COLD CODE	
6~60 .2~2 120~1200 8.975 60~120 2 120~2400 8.975 TYPICAL PERFORMANCE TYPICAL PERFORMANCE FULL Colspan="4">COLSPANCE SOU FULL COLSPAN 3/4 LOAD 1/2 LOAD SOU PRES SOU FULL FULL LOAD 3/4 LOAD 1/2 LOAD FULL LOAD 3/4 LOAD 1/2 LOAD SOU PRES RPM FULL LOAD 3/4 LOAD 1/2 LOAD % 3/4 LOAD 1/2 LOAD % <td< td=""><td></td></td<>	
TYPICAL PERFORMANCEFULL LOADEFFICIENCYPOWER FACTORSOU PRES LEVELFULL LOAD3/4 LOAD1/2 LOAD3/4 LOAD1/2 LOADPRES LEVELRPMMIN.%NOM.%%%%3/4 LOAD1/2 LOADPRES LEVEL117086.588.588.586.570.56350.551170AftFULL LOADFULL LOADLOCKED ROTORNEMA KVA CODE LETTERNEMA KVA CODE LETTERNEMA CODE LETTERNEMA CODE LETTERNEMA CODE LETTERTI SEC CODE LETTER	/
FULL LOAD FILL LOAD FILL LOAD SOU PRES LEVEL DB RPM FULL LOAD 3/4 LOAD 1/2 LOAD SOU % SOU % PRES % SOU % PRES % SOU % PRES % SOU % PRES % SOU % PRES % SOU % </td <td>1.100</td>	1.100
FULL LOAD RPMFULL LOAD3/4 LOAD %1/2 LOAD %FULL LOAD %3/4 LOAD %1/2 LOAD %PRES LEVEL Db117086.588.588.586.570.56350.55117086.588.588.586.570.56350.55CURRENTSLOCKED ROTORNEMA KVA CODE LETTERNEMA KVA CODE LETTERNEMA KVA CODE LETTERSAFI TI SECATATAT 460 VOLTAT VOLTAT VOLTAT CODE LETTERCODE COLD	
$\begin{tabular}{ c c c c c c c } \hline IOAD & FULL UOAD & 3/4 LOAD & 1/2 LOAD & VOLT & V$	
MIN.% NOM.% % % % % Db 1170 86.5 88.5 88.5 86.5 70.5 63 50.5 5 1170 86.5 88.5 88.5 86.5 70.5 63 50.5 5 VOLOAD FULL LOAD LOCKED ROTOR NEMA KVA CODE LETTER NEMA KVA CODE LETTER TI SEC AT AT AT AT CODE LETTER COLD VOLT VOLT VOLT VOLT COLD COLD	
CURRENTSSAFINO LOADFULL LOADLOCKED ROTORNEMA KVATI SECATATATATCODE LETTERCODE LETTER460460460460COLTVOLTVOLTVOLTVOLTCOLD	
NO LOADFULL LOADLOCKED ROTORNEMA KVATI SECATATATATCODE LETTERCODE LETTERCOLD460460460LETTERCOLDVOLTVOLTVOLTVOLTCOLD	3
NO LOADFULL LOADLOCKED ROTORNEMA KVATI SECATATATATCODE LETTERCODE LETTERCOLD460460460COLTCOLD	
NO LOADFULL LOADLOCKED ROTORKVASECATATATCODE460460460LETTERCOLDVOLTVOLTVOLTVOLTCOLD	STALL
ATATATCODE460460460LETTERCOLDVOLTVOLTVOLTVOLTCOLD	IE IN ONDS
VOLT VOLT VOLT	
	HOT
	67
TORQUE INERTIA ACCEL TIME (DOL) ST	WABLE ARTS HOUR
FULL LOAD (lb-ft)LOCKED ROTOR %FLTPULL UP %FLTBREAK DOWN %FLTROTOR WR2 (lb-ft2)NEMA LOAD ALLOWABLE WK2MAX LOAD MAX ALLOWABLE WK2NEMA LOAD MAX MAX (lb-ft2)NEMA LOAD WK2NEMA LOAD WK2NEMA LOAD MAX MAX (lb-ft2)NEMA LOAD WK2NEMA LOAD WK2NEMA LOAD WK2NEMA LOAD WK2NEMA LOAD MAX MAX MAX LOADMAX ALLOWABLE WK2MAX COLD	НОТ
8.98 180 150 270 0.423 30 219 6.08 43.88 2	1
APPROVED: M. PRATER DRAWING NO. 31057HB0026 REVISION	1

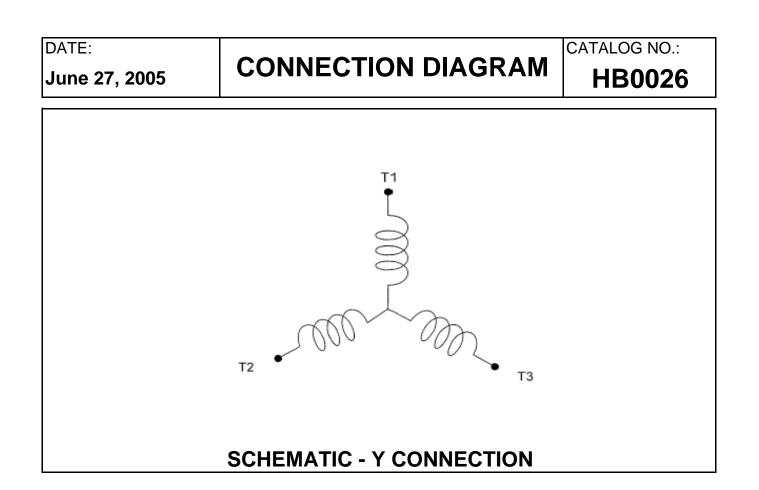

ACROSS THE LINE CONNECTION

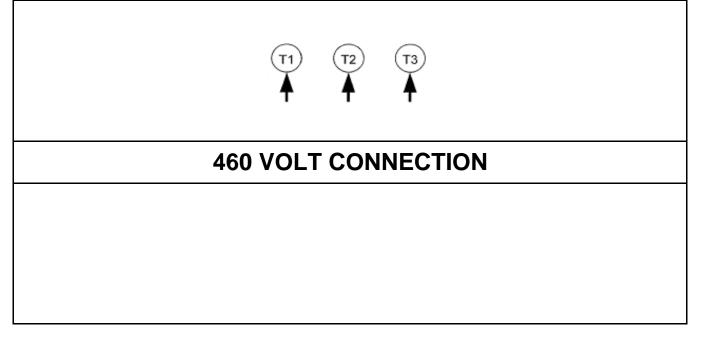



DWG NO.

DAC-1548-2

Downloaded from Dealers Industrial Equipment -- Visit https://DealersElectric.com or call (908) 688-1966 for all of your Teco needs!

TECO Westinghouse

INSTALLATION AND MAINTENANCE INSTRUCTIONS FOR THREE PHASE INDUCTION MOTORS

Frames 143T - 449TZ



5100 North IH 35 Round Rock, Texas 78681

Downloaded from Dealers Industrial Equipment -- Visit https://DealersElectric.com or call (908) 688-1966 for all of your Teco needs

RECEIVING

- 1. Check nameplate data.
- 2. Check whether any damage has occurred during transportation.
- 3. After removal of shaft clamp, turn shaft by hand to check that it turns freely.
- 4. If motor is to be reshipped (alone or installed to another piece of equipment) the shaft must again be clamped to prevent axial movement.

Note: Remove the bearing clamp before turning the shaft on 284T-449TZ frame motors.

WARNING

THE FOLLOWING SAFETY PRECAUTIONS MUST BE OBSERVED:

- 1. Electric rotating machinery and high voltage can cause serious or fatal injury if improperly installed, operated or maintained. Responsible personnel should be familiarized with NEMA MG-1; Safety Standards for Construction and Guide Selection. Installation and Use of Electric Motors and Generators; National Electric Code and all local safety requirements.
- 2. When servicing, all power sources to the motor and to the accessory devices should be de-energized and disconnected and all rotating parts should be at standstill.
- 3. Lifting means, when supplied, are intended for lifting the motor only. When two lifting devices are supplied with the motor a dual chain must be used.
- 4. Suitable protection must be used when working near machinery with high noise levels.
- 5. Safeguard or protective devices must not be by-passed or rendered inoperative.
- 6. The frame of this machine must be grounded in accordance with the National Electric Code and applicable local codes.
- 7. A suitable enclosure should be provided to prevent access to the motor by other than authorized personnel. Extra caution should be observed around motors that are automatically or have automatic re-setting relays as they may restart unexpectedly.
- 8. Shaft key must be fully captive or removed before motor is started.
- 9. Provide proper safeguards for personnel against possible failure of motor-mounted brake, particularly on applications involving overhauling loads.
- 10. Explosion proof motors are constructed to comply with the label service procedure manual, repair of these motors must be made by TECO-Westinghouse Motor Company or U/L listed service center in order to maintain U/L listing.

LOCATION

- 1. Drip-proof motors are intended for use where atmosphere is relatively clean, dry, well ventilated and non-corrosive.
- 2. Totally enclosed motors may be installed where dirt, moisture, or dust are present and in outdoor locations.
- 3. Explosion-proof motors are built for use in hazardous locations as indicated by Underwriters' label on the motor.
- 4. Chemical duty enclosed motors are designed for installation in high corrosion or excessive moisture locations.

Note: in all cases, no surrounding structure should obstruct normal flow or ventilating air through or over the motor.

MOUNTING

- 1. Mount motor securely on a firm, flat base. All ball bearing normal thrust motors up to and including 256T frame size may be side-wall or ceiling mounted; all others check nearest TECO-Westinghouse office for mounting recommendations.
- 2. Align motor accurately, using a flexible coupling if possible. For drive recommendations, consult with drive or equipment manufacturer, or TECO-Westinghouse.
- 3. Mounting bolts must be carefully tightened to prevent changes in alignment and possible damage to the equipment. The recommended tightening torque's for medium carbon steel bolts, identified by three radial lines at 120 degrees on the head, are:

Bolt Size	Recommended	Torque (Ft-lb.)
Bolt Size	Minimum	Maximum
2/8	25	37
1/2	60	90
5/8	120	180
3/4	210	320

- 4. V-belts Sheave Pitch Diameters should not be less than those shown in Table 1 (NEMA recommended values)
- 5. Tighten belts only enough to prevent slippage. Belt speed should not exceed 5000 ft. per min.

TABLE 1. V-Belt Sheave Pitch Diameters (MG1-14.42)

					V-Belt	Sheave		
				ntional D AND E		rrow AND 8V		
Frame Number	3600		oower at s Speed, RPN 1200	<u>л</u> 900	Minimum Pitch Diameter Inches	*Maximum Width Inches	Minimum Outside Diameter Inches	**Maximum Width Inches
143T	1.5	1	.75	.5	2.2	4.25	2.2	2.25
145T	2-3	1.5-2	1	.75	2.4	4.25	2.4	2.25
182T	3	3	1.5	1	2.4	5.25	2.4	2.75
182T	5				2.6	5.25	2.4	2.75
184T			2	1.5	2.4	5.25	2.4	2.75
184T	5				2.6	5.25	2.4	2.75
184T	7.5	5			3.0	5.25	3.0	2.75
213T	7.5-10	7.5	3	2	3.0	6.5	3.0	3.375
215T	10		5	3	3.0	6.5	3.0	3.375
215T	15	10			3.8	6.5	3.8	3.375
254T	15		7.5	5	3.8	7.75	3.8	4
254T	20	15			4.4	7.75	4.4	4
256T	20-25		10	7.5	4.4	7.75	4.4	4
256T		20			4.6	7.75	4.4	4
284T			15	10	4.6	9	4.4	4.625
284T		25			5.0	9	4.4	4.625
286T		30	20	15	5.4	9	5.2	4.625

		V-Belt Sheave						
					Conventional A, B, C, D AND E		Narrow 3V, 5V, AND 8V	
Frame Number	3600		power at s Speed, RPM 1200	1 900	Minimum Pitch Diameter Inches	*Maximum Width Inches	Minimum Outside Diameter Inches	**Maximum Width Inches
324T		40	25	20	6.0	10.25	6.0	5.25
326T		50	30	25	6.8	10.25	6.8	5.25
364T			40	30	6.8	11.5	6.8	5
364T		60			7.4	11.5	7.4	5.785
365T			50	40	8.2	11.5	8.2	5.785
365T		75			9.0	11.5	8.6	5.785
404T			60		9.0	14.25	8.0	7.25
404T				50	9.0	14.25	8.4	7.25
404T		100			10.0	14.25	8.6	7.25
405T			75	60	10.0	14.25	10.0	7.25
405T		100			10.0	14.25	8.6	7.25
405T		125			11.5	14.25	10.5	7.25
444T			100		11.0	16.75	10.0	8.5
444T				75	10.5	16.75	9.5	8.5
444T		125			11.0	16.75	9.5	8.5
444T		150				16.75	10.5	8.5
445T			125		12.5	16.75	12.0	8.5
445T				100	12.5	16.75	12.0	8.5
445T		150				16.75	10.5	8.5

TABLE 1. V-Belt Sheave Pitch Diameters (MG1-14.42)

*Max. Sheave width = 2(N-W) - .25

**Max Sheave width = N-W

***Sheave ratios grater than 5:1 and center-to-center distance less than the diameter of the large sheave should be referred to TECO-Westinghouse.

POWER SUPPLY & CONNECTIONS

- 1. Wiring of motor and control, overload protection and grounding should be in accordance with National Electrical Code and all local safety requirements.
- Nameplate voltage and frequency should agree with power supply. Motor will operate satisfactorily on line voltage within ±10% of nameplate voltage; or frequency with ±5% and with a combined variation not to exceed ±10%. 230-volt motors can be used on 208-volt network systems, but with slightly modified performance characteristics as shown on the nameplate.
- 3. Dual voltage and single voltage motors can be connected for the desired voltage by following connection diagram shown on the nameplate or inside of the conduit box.
- 4. All Explosion Proof motors have Temperature Limiting Devices in the motor enclosure to prevent excessive external surface temperature of the motor in accordance with U/L standards. Terminals of thermal protectors (P1 & P2) should be connected to the motor control equipment, according to the connection diagram inside of the conduit box.
- 5. Standard connection diagram for three phase, not thermally protected, dual rotation motors are shown in diagrams A through E. (Note: To change rotation, Interchange any two line leads)

A. 3 Lead, Single Voltage



B. 6 Lead, Dual Voltage & Voltage Ration 1 to 3

B-1 Across the Line Start & Run





C. 9 Leads; Dual Voltage & Voltage Ratio 1 to 2, Wye Connected

C-1 Across the Line Start & Run

LowV	bhage	н	igh Vol	tage
11 I.	2 L3	L1	L3	13
11 * 72*	TSe	T1 &	T2 .	130
17 • 18 •	194	17 1	т8 Ф	19 ¶
ī4 ī	5 T6	T4 •	r5 o	T64



D. 9 Leads; Dual Voltage & Voltage Ration 1 to 2, Delta Connected

	D-1	Across	the	Line	Start	&	Run
--	-----	--------	-----	------	-------	---	-----

LOW VOLTAGE (2.4)	HIGH VOLTAGE (△)
L1 L3 L2	1 13 L2
T1 0 T3 0 T2 0	1 1 13 120
T7 0 T5 0 T8 0	170 150 120



E. 12 Leads, Dual Voltage

E-1 Across the Line Star	ιà	Run
--------------------------	----	-----

Low	Voltage	High Voltage
L1	12 L3	L1 12 L3
TI 0 T2	т	ינד ינד יוד
17 78	н тро	T12 T10 T11
тб т4	о т 5 о	16 14 15
T12 T10	D T110	





E-2-2 Wye Start & Delta Run (High Voltage only)





*Important: For Part Winding Start, M2 contactor should be closed within two (2) seconds after M1 contactor is closed. Only 4 pole and above (e.g., 6P, 8P...) motors are satisfactory for Part Winding Start at low voltage.

START UP

- Disconnect load and start motor. Check direction of rotation. If rotation must be changed, ALLOW THE MOTOR TO STOP COMPLETLEY. Interchange any two leads of a three-phase motor.
- 2. Connect load. The motor should start quickly and run smoothly. If no, shut power off at once. Recheck the assembly including all connections before restarting.
- 3. If excessive vibration is noted, check for loose mounting bolts too flexible motor support structure or transmitted vibration from adjacent machinery. Periodic vibration checks should be made; foundations often settle.
- 4. Operate under load for short period of time and check operating current against nameplate.

TESTING

If the motor has been in storage for an extensive period or has been subjected to adverse moisture conditions, it is best to check the insulation resistance of the stator winding with a megometer. Depending on the length and conditions of storage it may be necessary to regrease or change rusted bearings.

If the resistance is lower than one megohm the windings should be dried in one of the following two ways:

- 1. Bake in oven at temperatures not exceeding 194°F until insulation resistance becomes constant.
- 2. With rotor locked, apply low voltage and gradually increase the current through windings until temperature measured with a thermometer reaches 194°F. Do not exceed this temperature.

MAINTENANCE

INSPECTION

Inspect motor at regular intervals. Keep motor clean and ventilation openings clear.

LUBRICATION

- 1. Frame 143T-256T: Double shielded and pre-lubricated ball-bearing motors without grease fittings and don't need re-lubrication, except on MAX-E1[®] and MAX-E2[®] products which have re-greasable features.
- Frames 280TS, 320-449TZ(TS): Motors having grease fittings and grease discharge devices at brackets. Motors are shipped with grease for initial running. It is necessary to re-lubricate anti-friction bearing motors periodically, depending on size and type of service. See Table 2 to provide maximum bearing life. Excessive or too frequent lubrication may damage the motor.

TABLE 2

Horsepower	Standard Conditions	Severe Conditions	Extreme Conditions
1 Thru 30 Hp, 1800 rpm and below	7 years	3 years	180 days
40 Thru 75 Hp, 1800 rpm and below	210 days	70 days	30 days
100 Thru 150 Hp, 1800 rpm and below	90 days	30 days	15 days
1 Thru 20 Hp, 3600 rpm	5 years	2 years	90 days
25 Thru 75 Hp, 3600 rpm	180 days	60 days	30 days
100 Thru 150 Hp, 3600 rpm	90 days	30 days	15 days

Note:

- A. Standard conditions: 8 hours operation per day, normal or light loading, clear and 40°C ambient conditions.
- B. Severe conditions: 24-hour operation per day or light shock loading, vibration or in dirty or dusty conditions.
- C. Extreme conditions: With heavy shock loading or vibration or dusty conditions.
- D. For double shielded bearings, above data (lubrication frequency) means that the bearing must be replaced.
- 3. Be sure fittings are clean and free from dirt. Using a low-pressure grease gun, pump in the recommended grease until new grease appears at grease discharge hole.
- 4. Use the POLYUREA grease unless special grease is specified on the nameplate.
- 5. If re-lubrication is to be performed with the motor running, stay clear of rotating parts. After re-greasing, allow the motor to run for ten to thirty minutes.

RENEWAL PARTS

- 1. Use only genuine TECO-Westinghouse renewal parts or as recommended by TECO-Westinghouse Motor Company.
- 2. When you order renewal parts please specify complete information to TECO-Westinghouse office/agent such as type, frame no., poles, horsepower, voltage, series no., quantity, etc.

FOR FURTHER INFORMATION PLEASE CONTACT TECO-WESTINGHOUSE MOTOR COMPANY

Round Rock, TX 800-873-8326