

## INVERTER

# E510

### START-UP AND INSTALLATION MANUAL

230V Class 1~

IP66/NEMA 4X

0.4 - 2.2 kW / 0.5 - 3 HP

230V Class 3~

IP66/NEMA 4X

0.4 - 15 kW / 0.75 - 20 HP

460V Class 3~

IP66/NEMA 4X

0.45- 18.5 kW / 1 - 25 HP



■ Read all operating instructions before installing, connecting (wiring), operating, servicing, or inspecting the inverter.

■ Ensure that this manual is made available to the end user of the inverter.

■ Store this manual in a safe, convenient location.

■ The manual is subject to change without prior notice.

■ Refer to the E510 Instruction Manual ([www.tecowestinghouse.com](http://www.tecowestinghouse.com)).

**\*\*\*\* STATEMENT \*\*\*\***

Si Desea descargar el manual en español diríjase a este Link: [www.tecowestinghouse.com](http://www.tecowestinghouse.com)

## Table of Contents

|   |            |
|---|------------|
| Preface .....                                     | 0-1        |
| <b>1 Safety Precautions .....</b>                 | <b>1-1</b> |
| 1.1 Before Supplying Power to the Inverter .....  | 1-1        |
| 1.2 Wiring .....                                  | 1-2        |
| 1.3 Before Operation .....                        | 1-3        |
| 1.4 Parameters Setting .....                      | 1-3        |
| 1.5 Operation .....                               | 1-4        |
| 1.6 Maintenance, Inspection and Replacement ..... | 1-5        |
| 1.7 Disposal of the Inverter .....                | 1-5        |
| <b>1 Consignes de sécurité (Français) .....</b>   | <b>1-6</b> |
| 1.1 Avant d'alimenter le disque dur .....         | 1-6        |
| 1.2 Câblage .....                                 | 1-6        |
| 1.3 Avant l'opération .....                       | 1-7        |
| 1.4 Configuration Paramètre .....                 | 1-7        |
| 1.5 Opération .....                               | 1-8        |
| 1.6 Entretien, Inspection et remplacement .....   | 1-8        |
| 1.7 Mise au rebut du variateur .....              | 1-9        |
| <b>2 Model Description .....</b>                  | <b>2-1</b> |
| 2.1 Nameplate Data .....                          | 2-1        |
| 2.2 Inverter Models – Motor Power Rating .....    | 2-2        |
| <b>3 Environment and Installation .....</b>       | <b>3-1</b> |
| 3.1 Environment .....                             | 3-1        |
| 3.2 Warning Labels .....                          | 3-2        |
| 3.3 Removing the Front Cover and Keypad .....     | 3-3        |

|  |            |
|--|------------|
| 3.4 Inverter Exterior.....   | 3-5        |
| 3.5 Wire Gauges, Tightening Torque and Short Circuit Rating .....      | 3-8        |
| 3.6 Wiring Peripheral Power Devices .....                              | 3-9        |
| 3.7 General Wiring Diagram.....  | 3-11       |
| 3.8 User Terminals.....  | 3-12       |
| 3.9 Power Terminals .....  | 3-15       |
| 3.10 Inverter Wiring.....  | 3-17       |
| 3.11 Input Power and Motor Cable Length .....                          | 3-19       |
| 3.12 Cable Length vs, Carrier Frequency .....                          | 3-19       |
| 3.13 Installing an AC Line Reactor .....                               | 3-19       |
| 3.14 Power Input Wire Size and NFB .....                               | 3-20       |
| 3.15 Control Circuit Wiring .....                                      | 3-20       |
| 3.16 Inverter Specifications.....                                      | 3-21       |
| 3.17 General Specifications .....                                      | 3-24       |
| 3.18 Inverter De-rating Based on Carrier Frequency.....                | 3-26       |
| 3.19 Inverter Dimensions .....   | 3-27       |
| <br>   |            |
| <b>4. Keypad and Programming Functions .....</b>                       | <b>4-1</b> |
| 4.1 LED Keypad .....   | 4-1        |
| 4.2 Parameters.....  | 4-8        |
| 4.3 Description of Parameters .....                                    | 4-27       |
| <br>   |            |
| <b>5. Check Motor Rotation and Direction.....</b>                      | <b>5-1</b> |
| <br>   |            |
| <b>6. Speed Reference Command Configuration.....</b>                   | <b>6-1</b> |
| 6.1 Reference from the Keypad .....                                    | 6-1        |
| 6.2 Reference from an Analog Signal (0-10V / 4-20mA) / Speed Pot ..... | 6-2        |
| 6.3 Reference from Serial Communication RS485.....                     | 6-4        |
| 6.4 Reference from Pulse Input .....                                   | 6-6        |
| 6.5 Change Frequency Unit from Hz to rpm .....                         | 6-7        |

|   |             |
|---|-------------|
| <b>7. Operation Method Configuration (Run / Stop)</b> .....                 | <b>7-1</b>  |
| 7.1 Run / Stop from the Keypad.....   | 7-1         |
| 7.2 Run / Stop from External Switch / Contact or Pushbutton .....           | 7-2         |
| 7.3 Run / Stop from Serial Communication RS485 .....                        | 7-4         |
| <br>  |             |
| <b>8. Motor and Application Specific Settings</b> .....                     | <b>8-1</b>  |
| 8.1 Set Motor Nameplate Data .....  | 8-1         |
| 8.2 Acceleration and Deceleration Time .....                                | 8-2         |
| 8.3 Volt/Hz Curve Modification (Torque Boost).....                          | 8-3         |
| 8.4 Rapid Stop .....  | 8-4         |
| 8.5 Forward and Reverse Jog.....  | 8-5         |
| 8.6 Analog Output Setup.....  | 8-6         |
| <br>  |             |
| <b>9. Using PID Control for Constant Flow / Pressure Applications</b> ..... | <b>9-1</b>  |
| 9.1 What is PID Control.....  | 9-1         |
| 9.2 Connect Transducer Feedback Signal .....                                | 9-3         |
| 9.3 Engineering Units.....  | 9-4         |
| 9.4 Sleep / Wakeup Function .....   | 9-5         |
| <br>  |             |
| <b>10 Troubleshooting, Fault Diagnostics and Maintenance</b> .....          | <b>10-1</b> |
| 10.1 General .....  | 10-1        |
| 10.2 Fault Detection Function .....   | 10-1        |
| 10.3 General Troubleshooting .....  | 10-6        |
| 10.4 Routine and Periodic Inspection .....                                  | 10-7        |
| 10.5 Routine Maintenance .....  | 10-10       |
| <br>  |             |
| <b>14. Commonly Used Parameters</b> .....                                   | <b>11-1</b> |
| 00-02 Run command selection .....   | 11-1        |
| 00-05 Main Frequency Command Source Selection .....                         | 11-3        |
| 00-14 Acceleration time 1 .....   | 11-5        |

|  |           |
|--|-----------|
| 00-15 Deceleration time 1 .....                                | 11-5      |
| 01-00 V/f curve selection.....                                 | 11-6      |
| 03-00 ~ 03-05 Multi-function terminal function.....            | 11-9      |
| 03-11 ~ 03-12 Relay (R1A-R1C / R2A-R2C) output.....            | 11-18     |
| 03-13 Frequency detection level.....                           | 11-20     |
| 03-14 Frequency detection width.....                           | 11-20     |
| 04-11 Analog Voltage & Current Input Selections AI1/AI2 .....  | 11-21     |
| 04-02 ~ 04-10 Analog Input Parameters.....                     | 11-22     |
| 04-11 Analog Output A01 Function Selection.....                | 11-25     |
| <br>   |           |
| 07-00 Momentary Power Loss and Restart .....                   | 11-26     |
| 07-01 Auto Restart Delay Time.....                             | 11-26     |
| 07-02 Number of Auto Restart Attempts.....                     | 11-26     |
| 08-00 Trip Prevention Selection.....                           | 11-27     |
| 08-01 ~ 08-05 Trip Prevention Parameters .....                 | 11-27     |
| 12-00 Display Mode .....                                       | 11-28     |
| 12-01 ~ 12-05 Display Scaling and Custom Unit Parameters ..... | 11-28     |
| 13-02 Fault Log Display / Fault Log Clearance Function.....    | 11-30     |
| 13-08 Reset Drive to Factory Settings .....                    | 11-30     |
| <br>   |           |
| <b>Appendix A: UL Instructions.....</b>                        | <b>A1</b> |

# 1. Safety Precautions (English)

## 1.1 Before supplying Power to the Inverter



### Warning

The main circuit must be correctly wired. For single phase supply use input terminals (R/L1, T/L3) and for three phase supply use input terminals (L1(L), L2, L3(N)). Terminals T1, T2, T3 must only be used to connect the motor. Connecting the input supply to any of the T1, T2 or T3 terminals will cause damage to the inverter.



### Caution

- To avoid the front cover from disengaging or other physical damage, do not carry the inverter by its cover. Support the unit by its heat sink when transporting. Improper handling can damage the inverter or injure personnel, and should be avoided.
- To avoid the risk of fire, do not install the inverter on or near flammable objects. Install on nonflammable objects such as metal surfaces.
- If several inverters are placed inside the same control panel, provide adequate ventilation to maintain the temperature below 40°C/104°F (50°C/122°F without a dust cover) to avoid overheating or fire.
- When removing or installing the digital operator, turn off the power first, and then follow the instructions in this manual to avoid operator error or loss of display caused by faulty connections.



### Warning

This product is sold subject to IEC 61800-3. In a domestic environment this product may cause radio interference in which case the user may need to apply corrective measures.

## 1.2 Wiring



### Warning

- Always turn OFF the power supply before attempting inverter installation and wiring of the user terminals.
- Wiring must be performed by a qualified personnel / certified electrician.
- Make sure the inverter is properly grounded. (230V Class: Grounding impedance shall be less than 100Ω. 460V Class: Grounding impedance shall be less than 10Ω.)
- Please check and test emergency stop circuits after wiring. (Installer is responsible for the correct wiring.)
- Never touch any of the input or output power lines directly or allow any input or output power lines to come in contact with the inverter case.
- Do not perform a dielectric voltage withstand test (megger) on the inverter this will result in inverter damage to the semiconductor components.



### Caution

- The line voltage applied must comply with the inverter's specified input voltage. (See product nameplate section 2.1)
- Use wire gauge recommendations and torque specifications. (See Wire Gauge and Torque Specification section 3.7)
- Never connect input power to the inverter output terminals T1, T2, T3.
- Do not connect a contactor or switch in series with the inverter and the motor.
- Do not connect a power factor correction capacitor or surge suppressor to the inverter output.
- Ensure the interference generated by the inverter and motor does not affect peripheral devices.

### 1.3 Before Operation



#### Warning

- Make sure the inverter capacity matches the parameters 13-00.
- Reduce the carrier frequency (parameter 11-01) if the cable from the inverter to the motor is greater than 80 ft (25m). A high-frequency current can be generated by stray capacitance between the cables and result in an overcurrent trip of the inverter, an increase in leakage current, or an inaccurate current readout.
- Be sure to install all covers before turning on power. Do not remove any of the covers while power to the inverter is on, otherwise electric shock may occur.
- Do not operate switches with wet hands, otherwise electric shock may result.
- Do not touch inverter terminals when energized even if inverter has stopped, otherwise electric shock may result.

### 1.4 Parameter Setting



#### Caution

- Do not connect a load to the motor while performing a rotational auto-tune.
- Make sure the motor can freely run and there is sufficient space around the motor when performing a rotational auto-tune.



## 1.5 Operation



### Warning

- Be sure to install all covers before turning on power. Do not remove any of the covers while power to the inverter is on, otherwise electric shock may occur.
- Do not connect or disconnect the motor during operation. This will cause the inverter to trip and may cause damage to the inverter.
- Operations may start suddenly if an alarm or fault is reset with a run command active. Confirm that no run command is active upon resetting the alarm or fault, otherwise accidents may occur.
- Do not operate switches with wet hands, otherwise electric shock may result.
- It provides an independent external hardware emergency switch, which emergently shuts down the inverter output in the case of danger.
- If automatic restart after power recovery (parameter 07-00) is enabled, the inverter will start automatically after power is restored.
- Make sure it is safe to operate the inverter and motor before performing a rotational auto-tune.
- Do not touch inverter terminals when energized even if inverter has stopped, otherwise electric shock may result.
- Do not check signals on circuit boards while the inverter is running.
- After the power is turned off, the cooling fan may continue to run for some time.



### Caution

- Do not touch heat-generating components such as heat sinks and braking resistors.
- Carefully check the performance of motor or machine before operating at high speed, otherwise Injury may result.
- Note the parameter settings related to the braking unit when applicable.
- Do not use the inverter braking function for mechanical holding, otherwise injury may result.
- Do not check signals on circuit boards while the inverter is running.

## 1.6 Maintenance, Inspection and Replacement



### Warning

- Wait a minimum of five minutes after power has been turned OFF before starting an inspection. Also confirm that the charge light is OFF and that the DC bus voltage has dropped below 25Vdc.
- Never touch high voltage terminals in the inverter.
- Make sure power to the inverter is disconnected before disassembling the inverter.
- Only authorized personnel should perform maintenance, inspection, and replacement operations. (Take off metal jewelry such as watches and rings and use insulated tools.)



### Caution

- The Inverter can be used in an environment with a temperature range from 14° -104°F (-10-40°C) and relative humidity of 95% non-condensing.
- The inverter must be operated in a dust, gas, mist and moisture free environment.

## 1.7 Disposal of the Inverter



### Caution

- Please dispose of this unit with care as an industrial waste and according to your required local regulations.
- The capacitors of inverter main circuit and printed circuit board are considered as hazardous waste and must not be burned.
- The Plastic enclosure and parts of the inverter such as the top cover board will release harmful gases if burned.

# 1. Consignes de sécurité (Français)

## 1.1 Avant d'alimenter le disque dur



### Avertissement

- Le circuit principal doit être correctement câblée. Pour les terminaux monophasés d'approvisionnement de l'utilisation des intrants (R/L1, T/L3) et de trois bornes d'entrée de l'utilisation de l'offre de phase (R/L1, S/L2, T/L3). U/T1, V/T2, W/T3 ne doivent être utilisés pour connecter le moteur. Raccordement de l'alimentation d'entrée à l'un des U/T1, V/T2 W/T3 ou bornes risque d'endommager le lecteur.



### Attention

- Pour éviter que le couvercle ne se désengage ou de tout autre dommage physique, ne portez pas le lecteur par son couverture. Soutenir le groupe par son dissipateur de chaleur lors du transport. Une mauvaise manipulation peut endommager le lecteur ou blesser le personnel, et doit être évitée.
- Pour éviter que les risques d'incendie, ne pas installer le lecteur sur ou à proximité d'objets inflammables. Installer sur des objets ininflammables comme les surfaces métalliques.
- Si plusieurs disques sont placés dans le même panneau de contrôle, fournir une ventilation adéquate pour maintenir la température en dessous de 40 ° C/104 ° F (50 ° C/122 ° F sans housse de protection) pour éviter la surchauffe ou incendie.
- Lors d'un retrait ou d'installation de l'opérateur numérique, éteignez-le d'abord, puis de suivre les instructions de ce manuel pour éviter les erreurs de l'opérateur ou de la perte de l'affichage causé par des connexions défectueuses.



### Avertissement

- Lors d'un retrait ou d'installation de l'opérateur numérique, éteignez-le d'abord, puis de suivre les instructions de ce manuel pour éviter les erreurs de l'opérateur ou de la perte de l'affichage causé par des connexions défectueuses....

## 1.2 Câblage



### Avertissement

- Coupez toujours l'alimentation électrique avant de procéder à l'installation d'entraînement et le câblage des terminaux utilisateurs.
- Le câblage doit être effectué par un personnel qualifié / électricien certifié.
- Assurez-vous que le lecteur est correctement mis à la terre. (220V Classe: impédance de mise à la terre doit être inférieure à 100Ω Classe 440V: Impédance de mise à la terre doit être inférieure à 10Ω.)
- vérifier et tester mes circuits d'arrêt d'urgence après le câblage. (L'Installateur est responsable du câblage.)
- Ne touchez jamais de l'entrée ou de lignes électriques de sortie permettant directement ou toute entrée ou de lignes de puissance de sortie à venir en contact avec le boîtier d'entraînement.
- Ne pas effectuer un test de tenue en tension diélectrique (mégohmmètre) sur le disque dur ou cela va entraîner des dommages de lecture pour les composants semi-conducteurs.



### Attention

- La tension d'alimentation appliquée doit se conformer à la tension d'entrée spécifiée par le lecteur. (Voir la section signalétique du produit)
- Raccorder la résistance de freinage et de l'unité de freinage sur les bornes assignées.
- Ne pas brancher une résistance de freinage directement sur les bornes CC P (+) et N (-), sinon risque d'incendie.
- Utilisez des recommandations de la jauge de fil et les spécifications de couple. (Voir Wire Gauge et la section de spécification de couple) °
- Ne jamais brancher l'alimentation d'entrée aux bornes onduleur de sortie U/T1, V/T2, W/T3.
- Ne pas brancher un contacteur ou interrupteur en série avec le variateur et le moteur.
- Ne branchez pas un facteur condensateur de correction de puissance ou suppresseur de tension à la sortie du variateur °
- S'assurer que l'interférence générée par l'entraînement et le moteur n'a pas d'incidence sur les périphériques.

## 1.3 Avant l'opération



### Avertissement

- Assurez-vous que la capacité du disque correspond aux paramètres de notation avant d'alimenter.
- Réduire le paramètre de la fréquence porteuse si le câble du variateur au moteur est supérieure à 80 pi (25 m). Un courant de haute fréquence peut être générée par la capacité parasite entre les câbles et entraîner un déclenchement de surintensité du variateur, une augmentation du courant ou d'une lecture actuelle inexactes.
- Veillez à installer tous les couvercles avant de l'allumer. Ne retirez pas les capots pendant que l'alimentation du lecteur est allumé, un choc électrique peut se produire autrement.
- Ne pas actionner d'interrupteurs avec les mains mouillées, un choc électrique pourrait survenir autrement.
- Ne touchez pas les bornes d'entraînement lorsqu'il est alimenté, même si le lecteur est arrêté, un choc électrique pourrait survenir autrement.

## 1.4 Configuration Paramètre



### Attention

- Ne branchez pas une charge pour le moteur tout en effectuant un auto-tune.
- Assurez-vous que le moteur peut fonctionner librement et il y a suffisamment d'espace autour du moteur lors de l'exécution d'un auto-tune rotation.

## 1.5 Opération




### Avertissement

- Veillez à installer tous les couvercles avant de l'allumer. Ne retirez pas les capots pendant que l'alimentation du lecteur est allumé, un choc électrique peut se produire autrement.
- Ne pas brancher ou débrancher le moteur pendant le fonctionnement. Le variateur pourrait se déclencher et ainsi endommager le lecteur.
- Les opérations peuvent commencer soudainement si une alarme ou un défaut est réarmé avec un ordre de marche active. Assurez-vous qu'un ordre de marche est actif lors de la réinitialisation de l'alarme ou de défaut, autrement des accidents peuvent se produire.
- Ne pas actionner d'interrupteurs avec les mains mouillées, un choc électrique pourrait survenir.
- Un interrupteur d'urgence externe indépendant est fourni, qui s'arrête en urgence vers le bas la sortie de l'onduleur en cas de danger.
- Si le redémarrage automatique après une récupération d'énergie est activée, le variateur démarrera automatiquement après le rétablissement du courant.
- Assurez-vous qu'il est sûr de faire fonctionner le variateur et le moteur avant d'effectuer un auto-tune rotation.
- Ne touchez pas les bornes d'entraînement lorsqu'il est alimenté même si l'onduleur s'est arrêté, un choc électrique pourrait survenir .
- Ne pas contrôler les signaux sur les circuits pendant que le lecteur est en marche.
- Après la mise hors tension, le ventilateur de refroidissement peut continuer à fonctionner pendant un certain temps.



### Attention

- Ne touchez pas les composants générant de la chaleur tels que radiateurs et des résistances de freinage. 
- Vérifiez soigneusement la performance du moteur ou de la machine avant d'utiliser à grande vitesse, sous peine de blessure.
- Notez les réglages des paramètres liés à l'unité de freinage lorsque applicable.
- Ne pas utiliser la fonction de freinage d'entraînement pour un maintien mécanique, sous peine de blessure.
- Ne pas contrôler les signaux sur les circuits pendant que le lecteur est en marche.

## 1.6 Entretien, Inspection et remplacement



### Avertissement

- Attendre un minimum de 5 minutes après que l'alimentation a été débranchée avant de commencer une inspection. Vérifiez également que le voyant de charge est éteint et que la tension du bus cc a chuté au-dessous de 25Vdc.
- Ne jamais toucher les bornes à haute tension dans le lecteur.
- Assurez-vous que l'alimentation du lecteur est débranché avant de démonter le lecteur.
- Seul le personnel autorisé peuvent faire l'entretien, l'inspection et les opérations de remplacement. (Enlevez les bijoux en métal tels que les montres et les bagues et utiliser des outils isolés.)

 **Attention**

- Le variateur peut être utilisé dans un environnement avec une gamme de température allant de 14 ° -104 ° F (10-40 ° C) et l'humidité relative de 95% sans condensation.
- Le variateur doit être utilisé dans un environnement sans poussière, gaz, vapeur et humidité.

**1.7 Mise au rebut du variateur**

 **Attention**

- jeter cet appareil avec soin comme un déchet industriel et selon les réglementations locales nécessaires.
- Les condensateurs du circuit principal d'entraînement et circuits imprimés sont considérés comme des déchets dangereux et ne doivent pas être brûlés.
- The Plastic enclosure and parts of the drive such as the top cover board will release harmful gases if burned.

## 2. Model Description


### 2.1 Nameplate Data

It is essential to verify the E510 inverter nameplate and make sure that the E510 inverter has the correct rating so it can be used in your application with the proper sized AC motor.


#### Unpack the E510 inverter and check the following:

- (1) The E510 inverter and start-up and installation manual (this document) are contained in the package.
- (2) The E510 inverter has not been damaged during transportation there should be no dents or parts missing.
- (3) The E510 inverter is the type you ordered. You can check the type and specifications on the main nameplate.
- (4) Check that the input voltage range meets the input power requirements.
- (5) Ensure that the motor HP matches the motor rating of the inverter.

(1HP = 0.746 kW)

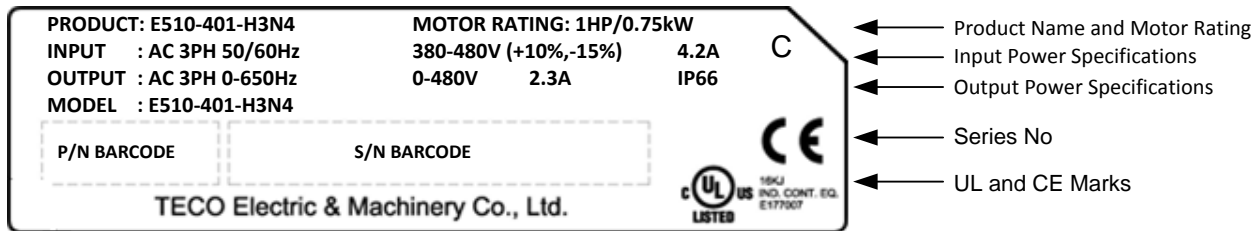

#### Model Identification

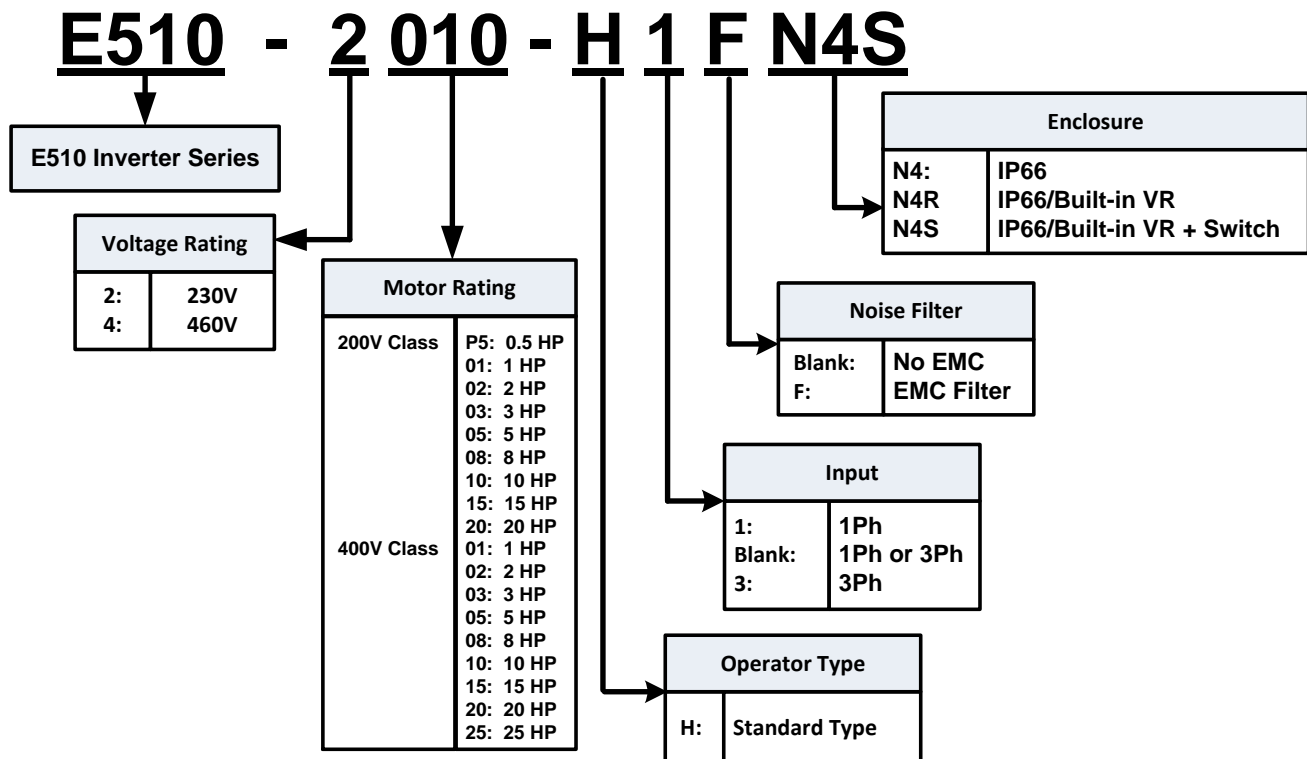

## 2.2 Inverter Models – Motor Power

### IP66 / NEMA 4X Type

| Model           | Supply voltage (Vac)                           | HP   | (kW) | Filter |   | VR |   | Switch |   | Frame Size |
|-----------------|--|------|------|--------|---|----|---|--------|---|------------|
|                 |  |      |      | V      | X | V  | X | V      | X |            |
| E510-2P5-H1FN4S | 1 Phase<br>200~240V<br>+10%-15%<br>50/60Hz     | 0.5  | 0.4  | ⊙      |   | ⊙  |   | ⊙      |   | 1          |
| E510-201-H1FN4S |  | 1    | 0.75 | ⊙      |   | ⊙  |   | ⊙      |   | 1          |
| E510-202-H1FN4S |  | 2    | 1.5  | ⊙      |   | ⊙  |   | ⊙      |   | 2          |
| E510-203-H1FN4S |  | 3    | 2.2  | ⊙      |   | ⊙  |   | ⊙      |   | 2          |
| E510-2P5-HN4R   | 1 & 3 Phase<br>200~240V<br>+10%-15%<br>50/60Hz | 0.5  | 0.4  |        | ⊙ | ⊙  |   |        | ⊙ | 1          |
| E510-201-HN4R   |  | 1    | 0.75 |        | ⊙ | ⊙  |   |        | ⊙ | 1          |
| E510-202-HN4R   |  | 2    | 1.5  |        | ⊙ | ⊙  |   |        | ⊙ | 2          |
| E510-203-HN4R   |  | 3    | 2.2  |        | ⊙ | ⊙  |   |        | ⊙ | 2          |
| E510-205-H3N4   | 3 Phase<br>200~240V<br>+10%-15%<br>50/60Hz     | 5    | 3.7  |        | ⊙ |    | ⊙ |        | ⊙ | 2          |
| E510-208-H3N4   |  | 7.5  | 5.5  |        | ⊙ |    | ⊙ |        | ⊙ | 3          |
| E510-210-H3N4   |  | 10   | 7.5  |        | ⊙ |    | ⊙ |        | ⊙ | 3          |
| E510-215-H3N4   |  | 15   | 11   |        | ⊙ |    | ⊙ |        | ⊙ | 3          |
| E510-220-H3N4   |  | 20   | 15   |        | ⊙ |    | ⊙ |        | ⊙ | 3          |
| E510-401-H3FN4S | 3 Phase<br>380~480V<br>+10%-15%<br>50/60Hz     | 1    | 0.75 | ⊙      |   | ⊙  |   | ⊙      |   | 1          |
| E510-401-H3N4   |  | 1    | 0.75 |        | ⊙ |    | ⊙ |        | ⊙ | 1          |
| E510-402-H3FN4S |  | 2    | 1.5  | ⊙      |   | ⊙  |   | ⊙      |   | 1          |
| E510-402-H3N4   |  | 2    | 1.5  |        | ⊙ |    | ⊙ |        | ⊙ | 1          |
| E510-403-H3FN4S |  | 3    | 2.2  | ⊙      |   | ⊙  |   | ⊙      |   | 2          |
| E510-403-H3N4   |  | 3    | 2.2  |        | ⊙ |    | ⊙ |        | ⊙ | 2          |
| E510-405-H3FN4S |  | 5    | 3.7  | ⊙      |   | ⊙  |   | ⊙      |   | 2          |
| E510-405-H3N4   |  | 5    | 3.7  |        | ⊙ |    | ⊙ |        | ⊙ | 2          |
| E510-408-H3FN4S |  | 7.5  | 5.5  | ⊙      |   | ⊙  |   | ⊙      |   | 3          |
| E510-408-H3N4   |  | 7.5  | 5.5  |        | ⊙ |    | ⊙ |        | ⊙ | 3          |
| E510-410-H3FN4S |  | 10   | 7.5  | ⊙      |   | ⊙  |   | ⊙      |   | 3          |
| E510-410-H3N4   |  | 10   | 7.5  |        | ⊙ |    | ⊙ |        | ⊙ | 3          |
| E510-415-H3FN4S |  | 15   | 11   | ⊙      |   | ⊙  |   | ⊙      |   | 3          |
| E510-415-H3N4   |  | 15   | 11   |        | ⊙ |    | ⊙ |        | ⊙ | 3          |
| E510-420-H3N4   |  | 20   | 15   |        | ⊙ |    | ⊙ |        | ⊙ | 3          |
| E510-425-H3N4   | 25   | 18.5 |      | ⊙      |   | ⊙  |   | ⊙      | 3 |            |

**V: Built-in**

**X: None**



### 3. Environment and Installation

#### 3.1 Environment


The environment will directly affect the proper operation and the life span of the inverter. To ensure that the inverter will give maximum service life, please comply with the following environmental conditions:


|                              |   |
|------------------------------|---|
| <b>Protection</b>            |   |
| <b>Protection Class</b>      | IP66 / NEMA 4X (Depending on models)  |
| <b>Operating Temperature</b> | IP66 / NEMA 4X type: -10°C - +50°C (14-122 °F)<br>If several inverters are placed in the same control panel, provide a heat removal means to maintain ambient temperatures below 40°C |
| <b>Storage Temperature</b>   | -20°C - +60°C (-4 -140 °F)  |
| <b>Humidity:</b>             | 95% non-condensing<br>Relative humidity 5% to 95%, free of moisture.<br>(Follow IEC60068-2-78 standard)   |
| <b>Altitude:</b>             | < 1000m (3,281 ft.)   |
| <b>Installation Site:</b>    | Avoid exposure to rain or moisture.   |
|                              | Avoid direct sunlight.  |
|                              | Avoid oil mist and salinity.  |
|                              | Avoid corrosive liquid and gas.   |
|                              | Avoid dust, lint fibers, and small metal filings.   |
|                              | Keep away from radioactive and flammable materials.   |
|                              | Avoid electromagnetic interference (soldering machines, power machines).  |
|                              | Avoid vibration (stamping, punching machines etc.).<br>Add a vibration-proof pad if the situation cannot be avoided.  |
| <b>Shock</b>                 | Maximum acceleration: 1G (9.8m/s <sup>2</sup> ), for <20Hz  |
|                              | Maximum acceleration: 0.6G (5.88m/s <sup>2</sup> ), for 20 - 50Hz (IEC60068-2-6 standard)   |


### 3.2 Warning Labels

**Important:** Warning information located on the front cover must be read upon installation of the inverter.

**xPH-xxxV-xkW**

 **DANGER / DANGER**  
Cut-off the power and wait for 5 minutes before inspecting components.  
Couper l'alimentation et attendre 5 minutes avant d'inspecter composants.

 **CAUTION / ATTENTION**  
See manual before operation.  
Consultez le manuel avant l'opération.

 **WARNING / AVERTISSEMENT**  
**Hot surface risk of burn**  
**Risque de brûlure de surface chaude**


### 3.3 Removing the Front Cover and Keypad




**Caution**

- Before making any wiring connections to the inverter the front cover needs to be removed.


#### IP66 / NEMA 4X

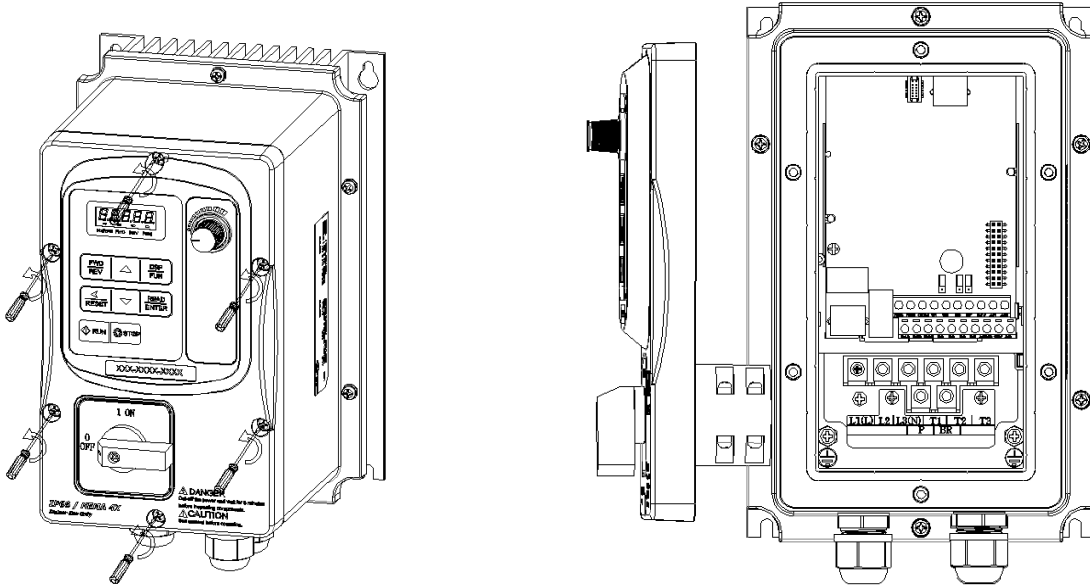


**Step 1:** Unscrew cover and place cover next to the inverter

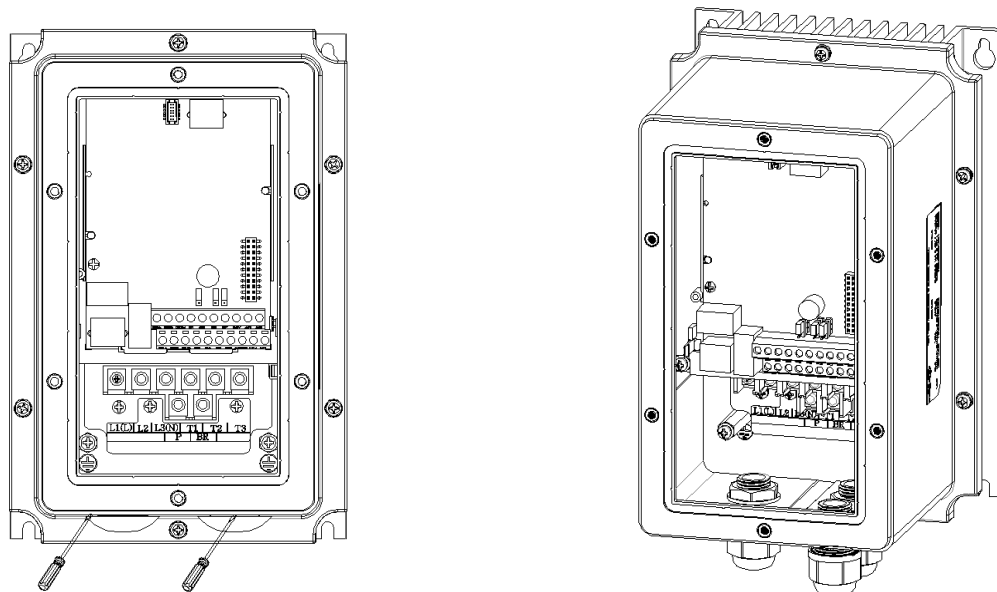

**Step 2:** Remove the rubber plugs and use the waterproof cable glands provided to connect cables.

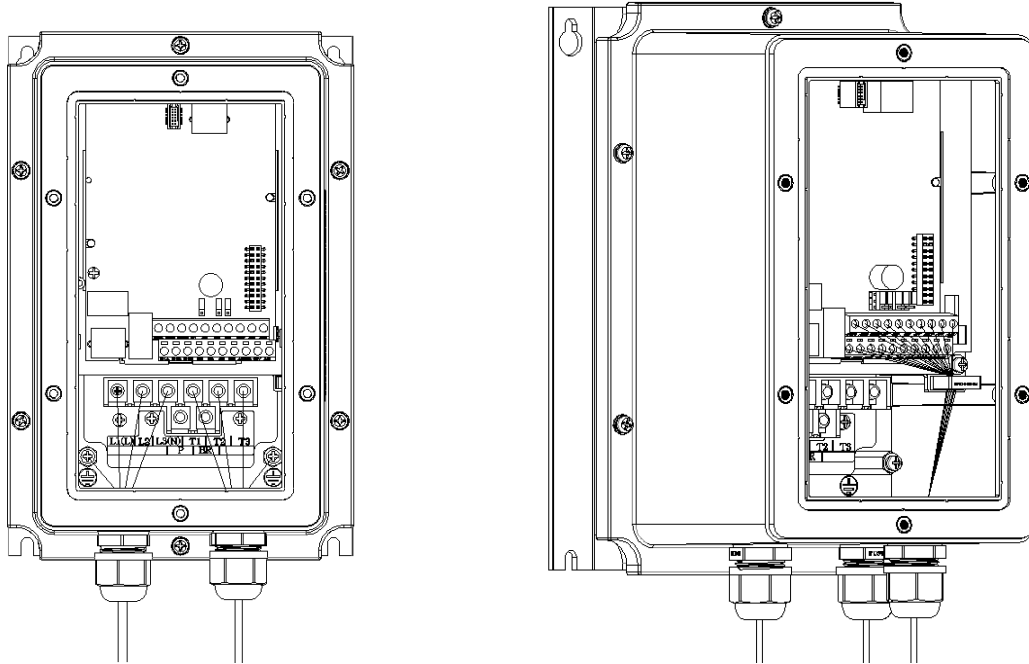

**Step 3:** Connect power & motor cables through the cable glands to the correct terminals

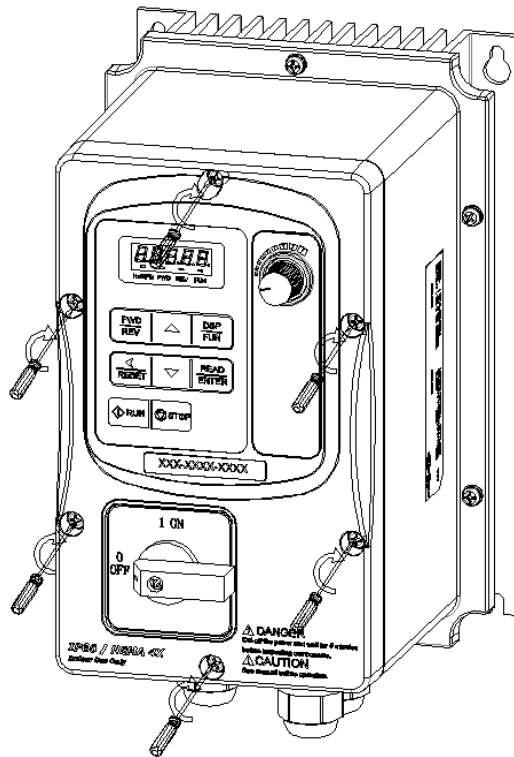


**Step 4:** Connect power & motor cables through the cable glands to the correct terminals

### 3.4 Inverter Exterior

#### IP66/NEMA4X


- (a) Single/Three phase: 230V 0.5~1HP
- Single phase: 230V 0.5~1HP
- Three phase: 230V 2HP; 460V 1~2HP

E510-Frame 1 (IP66/NEMA 4X With/Without VR and disconnect switches depending on the model)

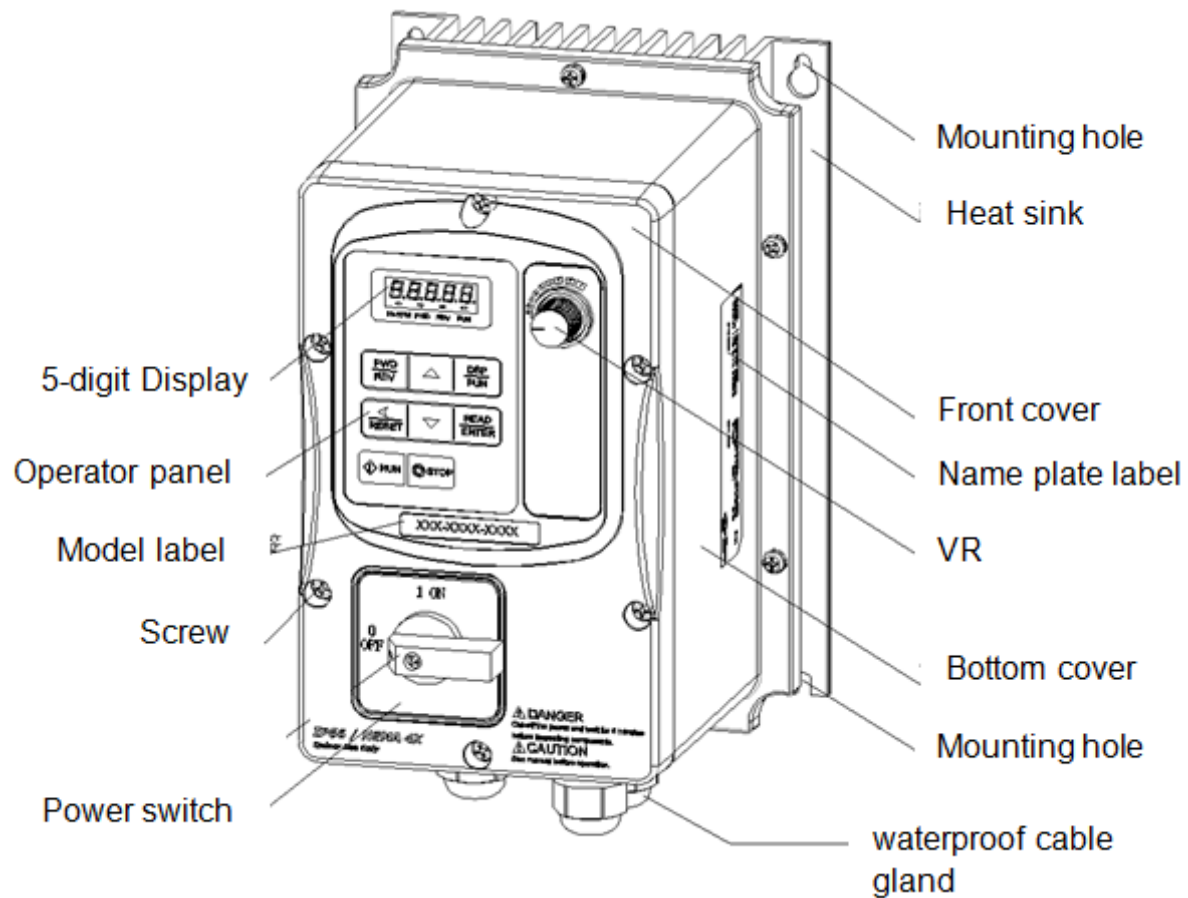


- (b) Single/Three phase: 230V 2~3HP
- Single phase: 230V 2~3HP
- Three phase: 230V 5HP; 460V 3~5HP

E510-Frame 2 (IP66/NEMA 4X With/Without VR and disconnect switches depending on the model)

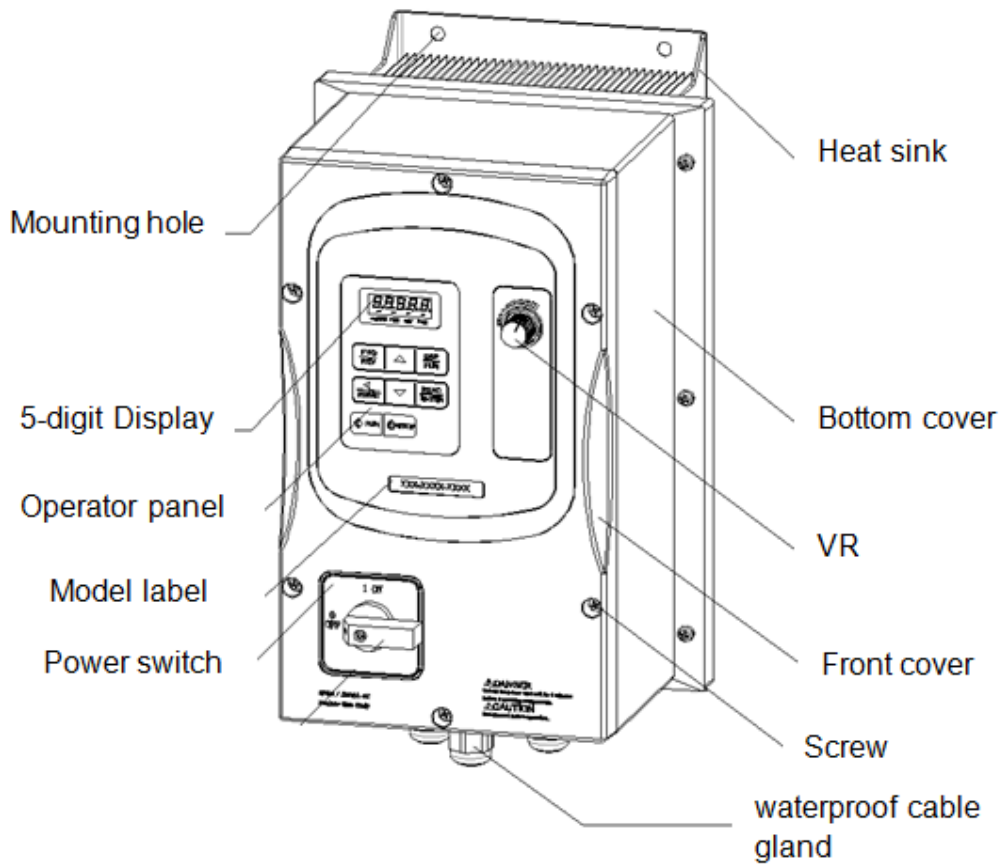

(c) Three phase: 230V 7.5~20HP; 460V 7.5~25HP

E510-Frame 3 (IP66/NEMA 4X With/Without VR and disconnect switches depending on the model)

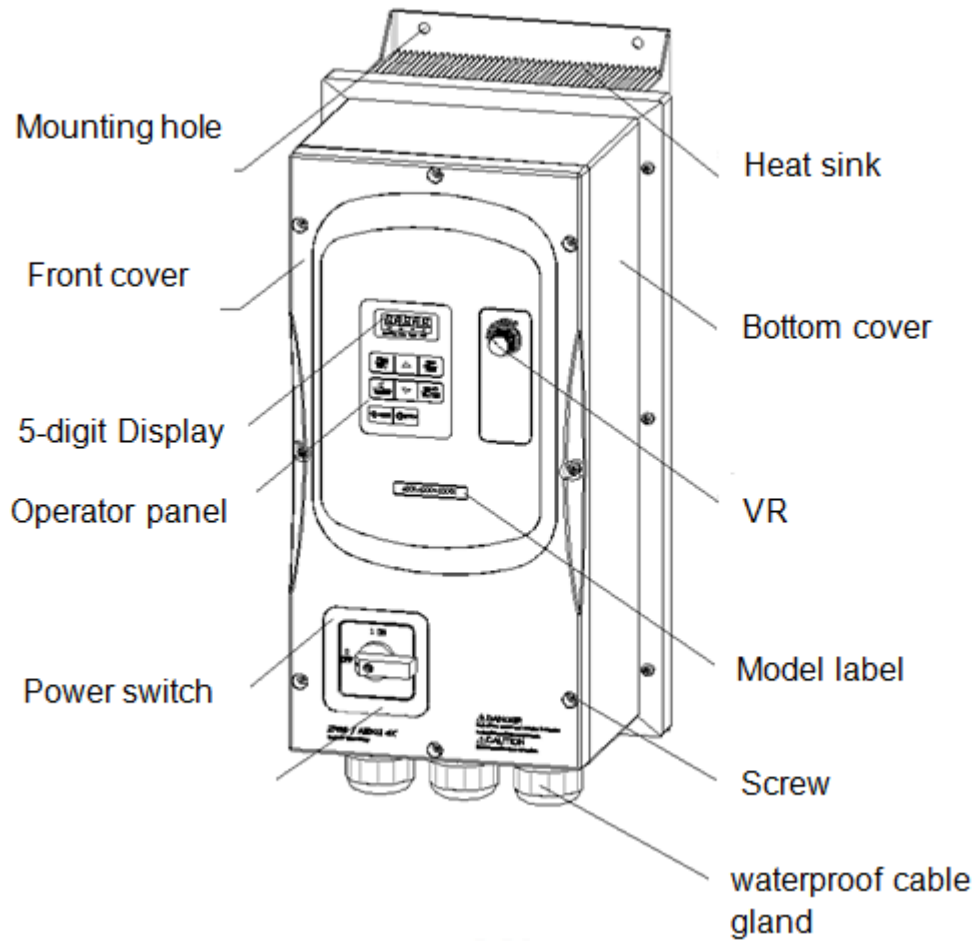

### 3.5 Wire Gauges, Tightening Torque, Terminal and Short Circuit Ratings.

To comply with UL standards, use UL approved copper wires (rated 75° C) and round crimp terminals (UL Listed products) as shown in table below when connecting to the main circuit terminals.

| Model  | TM1        |                 |                   |        |     | TM2        |                 |                   |        |     |
|--------|------------|-----------------|-------------------|--------|-----|------------|-----------------|-------------------|--------|-----|
|        | Cable Size |                 | Tightening torque |        |     | Cable Size |                 | Tightening torque |        |     |
|        | AWG        | mm <sup>2</sup> | kgf.cm            | lbf.in | Nm  | AWG        | mm <sup>2</sup> | kgf.cm            | lbf.in | Nm  |
| Frame1 | 20~12      | 0.52~3.33       | 10.20             | 0.006  | 1.0 | 26~14      | 0.13~2.08       | 8.16              | 0.005  | 0.8 |
| Frame2 | 18~8       | 0.81~8.37       | 18.35             | 0.010  | 1.8 |            |                 |                   |        |     |
| Frame3 | 14~6       | 2.08~13.30      | 24.47             | 0.014  | 2.4 |            |                 |                   |        |     |
| Frame4 | 4~3        | 21.15~26.67     |                   |        |     |            |                 |                   |        |     |

#### Terminals Electrical Rating

| Model     | Horsepower      | Power Specification | Voltage (Volt) | Current(A) |
|-----------|-----------------|---------------------|----------------|------------|
| Frame1    | 0.5/1           | 200V~240V           | 600            | 20         |
|           | 1/2             | 380V~480V           |                |            |
| Frame2    | 2/3/5           | 200V~240V           | 600            | 45         |
|           | 3/5             | 380V~480V           |                |            |
| Frame 3/4 | 7.5/10/15/20    | 200V~240V           | 600            | 65         |
|           | 7.5/10/15/20/25 | 380V~480V           | 600            | 100        |

#### Short circuit rating

| Device Rating |        | Short circuit Rating(A) | Maximum Voltage (Volt) |
|---------------|--------|-------------------------|------------------------|
| voltage       | HP     |                         |                        |
| 230V          | 0.5~20 | 5,000                   | 240                    |
| 460V          | 1~25   | 5,000                   | 480                    |



### 3.6 Wiring Peripheral Power Devices



#### Caution

- After power is shut off to the inverter the capacitors will slowly discharge. Do NOT touch and of the inverter circuitry or replace any components until the “CHARGE” indicator is off.
- Do NOT wire or connect/disconnect internal connectors of the inverter when the inverter is powered up or when powered off and the “CHARGE” indicator is on.
- Do NOT connect inverter output U, V and W to the supply power. This will result in damage to the inverter.
- The inverter must be properly grounded. Use terminal E to connect earth ground and comply with local standards.
- Do NOT perform a dielectric voltage withstand test (Megger) on the inverter this will result in inverter damage to the semiconductor components.
- Do NOT touch any of the components on the inverter control board to prevent damage to the inverter by static electricity.




#### Caution

- Refer to the recommended wire size table for the appropriate wire to use. The voltage between the power supply and the input of the inverter may not exceed 2%.

$$\text{Phase-to-phase voltage drop (V)} = \sqrt{3} \times \text{resistance of wire } (\Omega/\text{km}) \times \text{length of line (m)} \times \text{current} \times 10^{-3}.$$

(km=3280 x feet) / (m=3.28 x feet)

- Reduce the carrier frequency (parameter 11-01) If the cable from the inverter to the motor is greater than 25m (82ft). A high-frequency current can be generated by stray capacitance between the cables and result in an overcurrent trip of the inverter, an increase in leakage current, or an inaccurate current readout.
- To protect peripheral equipment, install fast acting fuses on the input side of the inverter. Refer to section 11.6 for additional information.

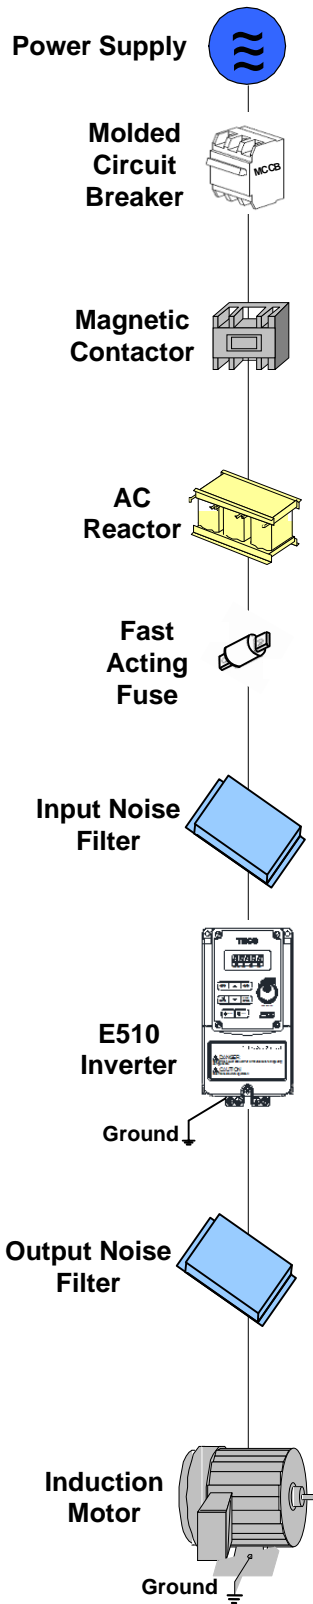


**Power supply:**


-  Make sure the correct voltage is applied to avoid damaging the inverter.

**Molded-case circuit breaker (MCCB) or fused disconnect:**


- A molded-case circuit breaker or fused disconnect must be installed between the AC source and the inverter that conforms to the rated voltage and current of the inverter to control the power and protect the inverter.

-  Do not use the circuit breaker as the run/stop switch for the inverter.

**Ground fault detector / breaker:**

-  Install a ground fault breaker to prevent problems caused by current leakage and to protect personnel. Select current range up to 200mA, and action time up to 0.1 second to prevent high frequency failure.

**Magnetic contactor:**

- Normal operations do not need a magnetic contactor. When performing functions such as external control and auto restart after power failure, or when using a brake controller, install a magnetic contactor.
-  Do not use the magnetic contactor as the run/stop switch for the inverter.

**AC line reactor for power quality:**

- When inverters are supplied by a high capacity power source (> 600KVA), an AC reactor can be connected to improve the power factor.



**Install Fast Acting Fuse:**

- To protect peripheral equipment, install fast acting fuses in accordance with the specifications in section 11 for peripheral devices.

**Input Noise filter:**

- A filter must be installed when there are inductive loads affecting the inverter. The inverter meets EN55011 Class A, category C3 when the TECO special filter is used.

**Inverter:**

- Output terminals T1, T2, and T3 are connected to U, V, and W terminals of the motor. If the motor runs in reverse while the inverter is set to run forward, swap any two terminals connections for T1, T2, and T3.
-  To avoid damaging the inverter, do not connect the output terminals T1, T2, and T3 to AC input power.
-  Connect the ground terminal properly. (230V series: Rg <100Ω; 460V series: Rg <10Ω.)


**Output Noise filter:**

- An output noise filter may reduce system interference and induced noise. See section 11 for peripheral devices.

**Motor:**

- If the inverter drives multiple motors the output rated current of the inverter must be greater than the total current of all the motors.

### 3.7 General Wiring Diagram

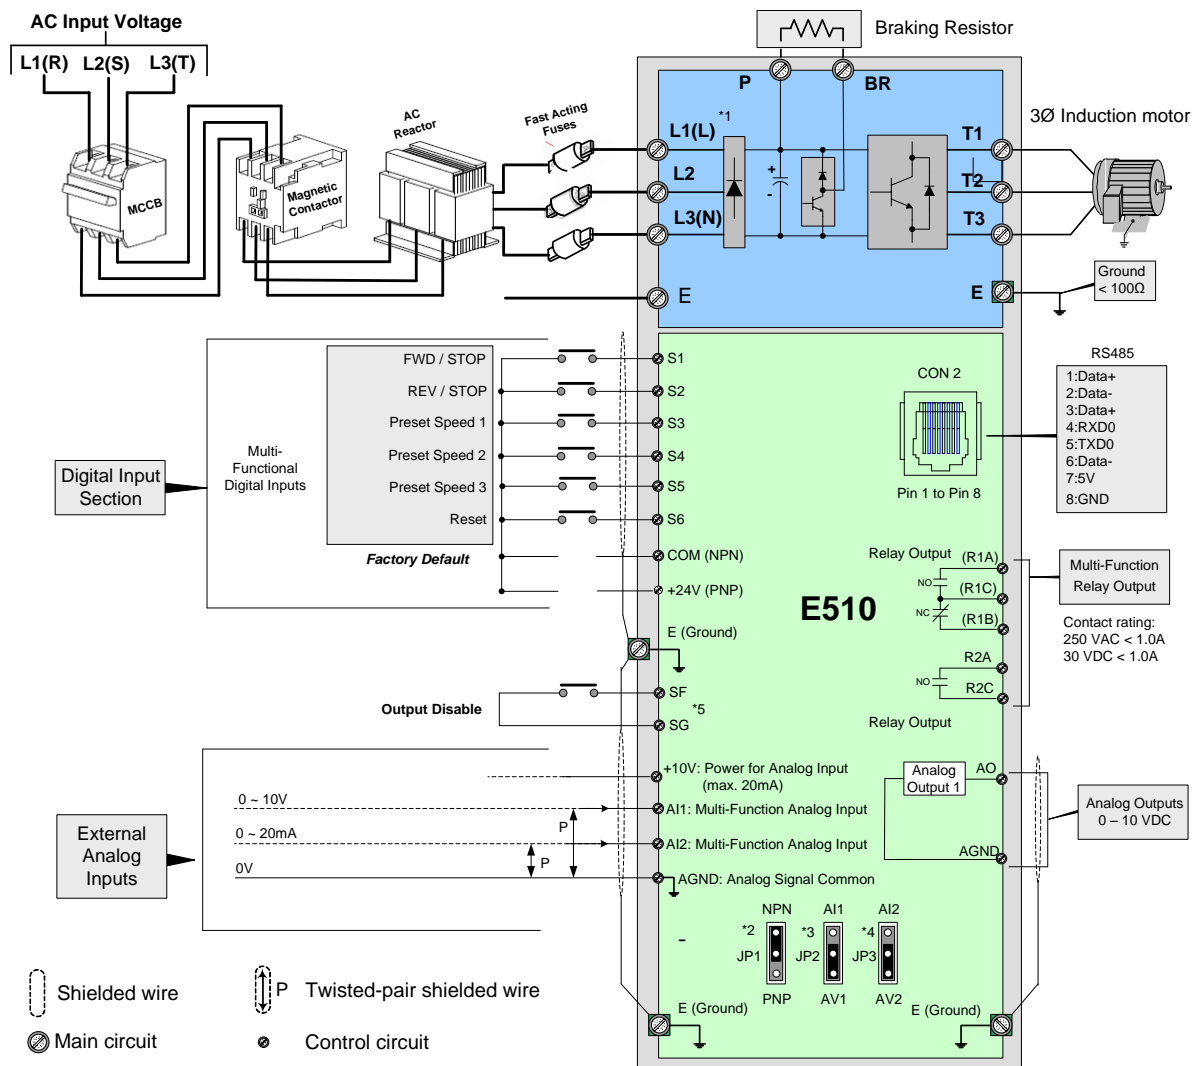

#### Notes:

\*1: Use L1 (L) and L3 (N) for single phase input

\*2: Use jumper JP1 to select between Sink (NPN, with 24VG common) or Source (PNP, with +24V common) for multi-function digital input terminals S1~S6.

\*3: Use jumper JP2 to switch between voltage and current input for Multi-function analog input 1 (AI1).





\*4: Use jumper JP3 to switch between voltage and current input for Multi-function analog input 1 (AI2).

\*5: Run Permissive input SF and SG is a normally open input. This input should be open to enable the inverter output. To activate this input place a jumper wire between SF and SG.


### 3.8 User Terminals (Control Circuit Terminals)

|     |     |     |    |    |    |    |      |     |     |  |
|-----|-----|-----|----|----|----|----|------|-----|-----|--|
| R2B | R2B | COM | S1 | S3 | S5 | SF | 24V  | AI1 | AI2 |  |
| R1A | R1B | R1C | S2 | S4 | S6 | SG | AGND | 10V | AO  |  |

#### Jumper function descriptions
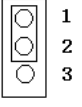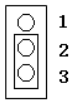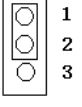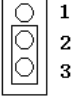
| Jumper  | Symbol  | Function                       | Signal Reference                   | Note   |
|---------|---|--------------------------------|------------------------------------|--|
| JP1     |  1<br>2<br>3   | NPN/PNP selectable             | NPN Input                          | Factory default setting  |
|         |  1<br>2<br>3   |                                | PNP Input                          |  |
| JP2/JP3 |  1<br>2<br>3  | External signal type selection | 0~20mA / 4~20mA<br>Analog signal   | Set parameters 00-05/00-06 to 2 or 3 (external analog input) to become effective |
|         |  1<br>2<br>3 |                                | 0~10VDC / 2~10VDC<br>Analog signal |  |

## Description of User Terminals

| Type                     | Terminal  | Terminal function   | Signal level  |
|--------------------------|---|---|---|
| Digital input signal     | S1  | Forward- Stop (Preset), Multi-function input terminal   | 24 VDC, 8 mA, Optical coupling isolation (Max, voltage 30 VDC, Input impedance 3.3kΩ) |
|                          | S2  | Reverse - Stop (Preset), Multi-function input terminal  |   |
|                          | S3  | Preset Speed0(5-02),Multi-function input terminal   |   |
|                          | S4  | Preset Speed1(5-03), Multi-function input terminal  |   |
|                          | S5  | Preset Speed2(5-05), Multi-function input terminal  |   |
|                          | S6  | Fault reset input, Multi-function input terminal  |   |
| Relay output             | R1A   | NO(Normally open)   | 250VAC/1A(30VDC/1A)   |
|                          | R1B   | NC(Normally closed)   |   |
|                          | R1C   | COMMON  |   |
|                          | R2A   | Multi-function output: Run, Fault, setting Frequency ,Frequency Reached, Auto Restart, Momentary AC Power Loss, Rapid Stop ,Base Block Stop Mode, Motor Overload Protection, Drive Overload Protection, Over-torque Threshold Level、Preset Current level Reached、Preset Brake Frequency Reached, PID Feedback Signal Loss, Final count value reached, Initial count value reached, PLC Status Indicator ,PLC control... |   |
|                          | R2B   |   |   |
| 24V Power supply         | COM   | Digital signal common terminal (JP1 Switching NPN position)   | ±15%,Max output current 60mA  |
|                          | 24V   | Digital signal common terminal (JP1 Switching PNP position)   |   |
| The analog input signal  | 10V   | Built in Power for an external speed potentiometer  | 10V(Max current:20mA)   |
|                          | AI1   | Multifunctional analog input: JP2 selects voltage or current input<br>Voltage: JP2 in AV1 position<br>Current: JP2 in AI1 position  | 0 ~ 10V,(Max current:20mA)<br>(Input impedance: 153KΩ)                                |
|                          | AI2   | Multifunctional analog input: JP3 selects voltage or current input<br>Voltage: JP3 in AV2 position<br>Current: JP3 in AI2 position  | 0 ~ 10V,0 ~20mA<br>(Input impedance: 153KΩ)   |
|                          | AGND  | The analog common terminal  | ----  |
|                          |  | Shielding wire connecting terminal (The earth)  | ----  |
| The analog output signal | AO  | Multifunctional analog output terminal*3  | 0 ~ 10V,(Max current:2mA)   |
|                          | AGND  | The analog common terminal  | ----  |
| Safety switch            | SF  | Terminal SF is a safety input and can be used to disable drive externally   |   |
|                          | SG  |   |   |

**Notes:**

\*1:Multi-function digital input can be referred to in this manual.

- Group 03: External Terminals Digital Input / Output Function Group.

\*2:Multi-function analog input can be referred to in this manual..

- Group 04 - External Terminal Analog Signal Input (Output) Function Group.


\*3:Multi-function analog output can be referred to in this manual.

- Group 04 - External Terminal Analog Signal Input (Output) Function Group.

**Caution**

- Maximum output current capacity for terminal 12V is 20mA.
- Multi-function analog output AO1 and AO2 are for use for an analog output meter. Do not use these output for feedback control.
- Control board's 24V and  $\pm 12V$  are to be used for internal control only, Do not use the internal power-supply to power external devices.


### 3.9 Power Terminals

| Terminal  | 230V: 0.5 ~ 20HP<br>460V: 1 ~ 25HP  |
|---|---|
| L1(L)   | Input Power Supply (For single phase use terminals L1(L) and L3(N))   |
| L2  |   |
| L3(N)   |   |
| P   | Braking resistor connection terminal: For use in applications requiring a high inertia load to stop rapidly. (Refer to specifications of the braking resistor). |
| BR  |   |
| T1  | Inverter output, connect to U/V/W terminals of motor  |
| T2  |   |
| T3  |   |
|  | Ground terminal   |

230V: 0.5 ~ 1HP (Single Phase)

230V: 0.5 ~ 1HP (Single/Three Phase)

230V 2HP, 460V 1~2HP (Three Phase)

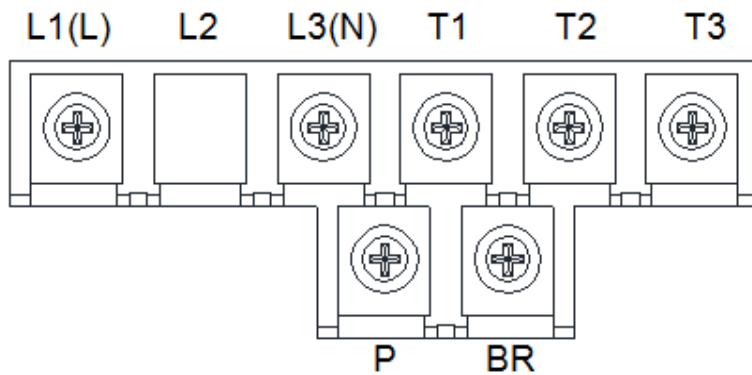


**Frame 2**

230V: 2 ~ 3HP (Single Phase)

230V: 2 ~ 3HP (Single / Three Phase)

230V: 5HP (Three Phase)


460V: 3 ~ 5HP (Three Phase)

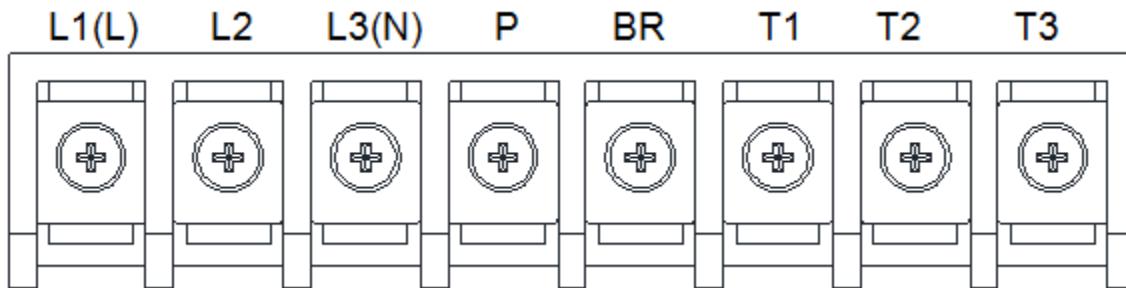

**Frame 3 & 4**

230V: 7.5 ~ 20HP (Three Phase)

460V: 7.5 ~ 25HP (Three Phase)

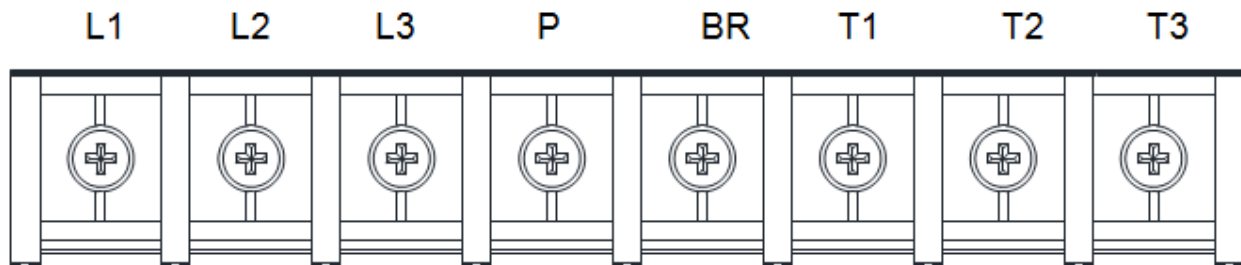


**Notes:** For wire gauges and screw torques, please refer to the table in section 3.6.



### 3.10 Inverter Wiring

#### Wiring Precautions


|   |   |
|---|---|
|  <b>Danger</b> | <ul style="list-style-type: none"><li>• Do <b>NOT</b> remove any protective covers or attempt any wiring while input power is applied. Connect all wiring before applying input power. When making wiring changes after power up, remove input power and wait a minimum of five minutes after power has been turned off before starting. Also confirm that the charge lamp is off and that DC voltage between terminals B1/P or (+) and (-) does not exceed 25V, otherwise <b>electric shock may result</b>.</li><li>• Only authorized personnel should work on the equipment. (Take off metal jewelry such as watches and rings and use insulated tools.), otherwise <b>electric shock or injury may result</b>.</li></ul> |
|---|---|

#### (A) Power input terminals


1. The Input power supply voltage can be connected in any phase sequence to power input terminals R/L1, S/L2, or T/L3 on the terminal block.
2. DO NOT connect the AC input power source to the output terminals U/T1, V/T2 and. W/T3.
3. Connect the output terminals U/T1, V/T2, W/T3 to motor lead wires U/T1, V/T2, and W/T3, respectively.
4. Check that the motor rotates forward with the forward run source. If it does not, swap any 2 of the output cables to change motor direction.
5. DO NOT connect phase correcting capacitors or LC/RC noise filter to the output circuit.

#### Example power connections:

##### Inverter with dedicated power line

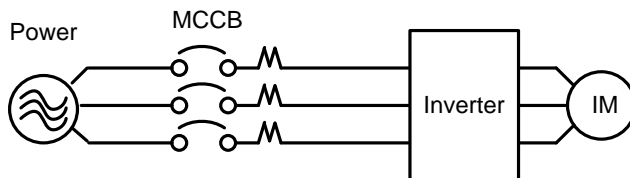

Install a Supply RFI filter or Isolation transformer when the power source is shared with other high power electrical equipment as shown below.

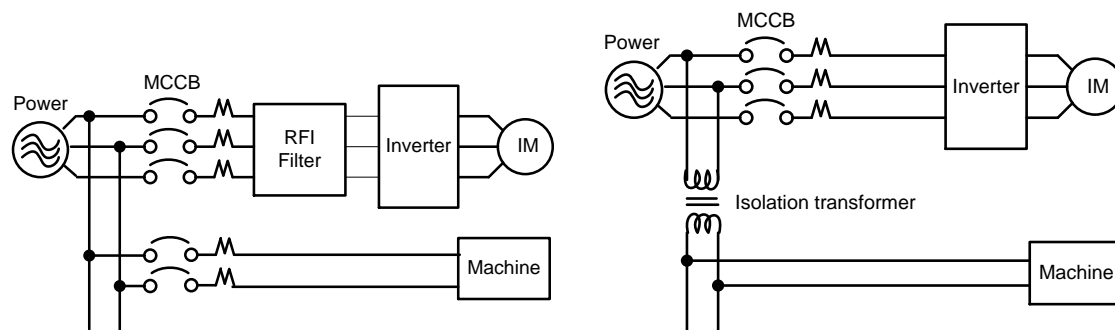

## (B) Grounding

1. Connect the ground terminal (E) to ground having a resistance of less than  $100\Omega$ .
2. Do not share the ground wire with other devices, such as welding machines or power tools.
3. Always use a ground wire that complies with the local codes and standards for electrical equipment and minimize the length of ground wire.
4. When using more than one inverter, be careful not to loop the ground wire, as shown below in Fig. 3.11.1.

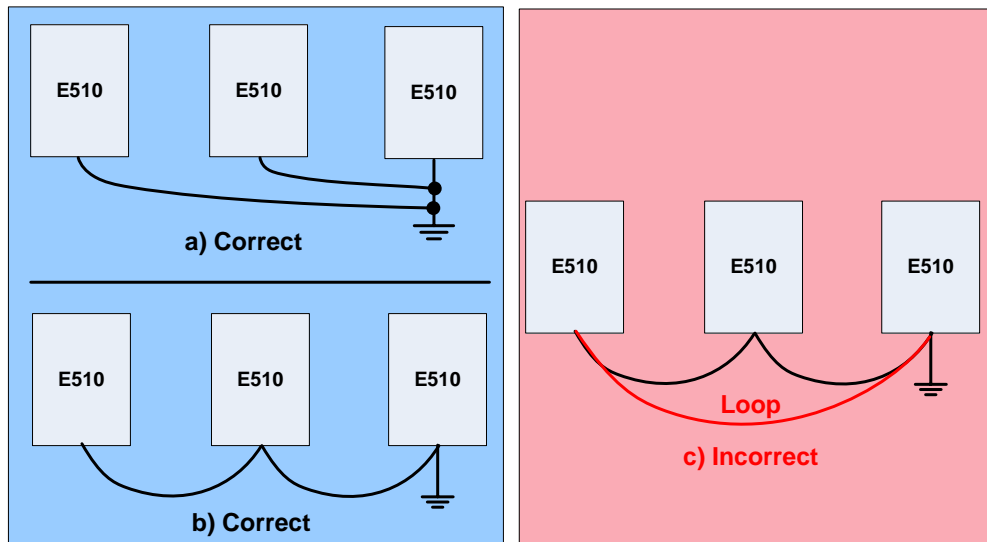


Fig. 3.11.1 Inverter Grounding

### 3.11 Input Power and Motor Cable Length

The length of the cables between the input power source and /or the motor and inverter can cause a significant phase to phase voltage reduction due to the voltage drop across the cables. The wire size shown in Tables 3.16.1 is based on a maximum voltage drop of 2%. If this value is exceeded, a wire size having larger diameter may be needed. To calculate phase to phase voltage drop, apply the following formula:

$$\text{Phase-to-phase voltage drop (V)} = \sqrt{3} \times \text{resistance of wire } (\Omega/\text{km}) \times \text{length of line (m)} \times \text{current} \times 10^{-3}.$$

(km=3280 x feet)

(m=3.28 x feet )

### 3.12 Cable Length vs. Carrier Frequency

The allowable setting of the PWM carrier frequency is also determined by motor cable length and is specified in the following Table 3.13.1.

**Table 3.13.1 Cable Length vs. Carrier Frequency**

|  |                |                        |                         |                |
|--|----------------|------------------------|-------------------------|----------------|
| <b>Cable length between the inverter and Motor in m (ft.).</b>   | < 30m<br>(100) | 30 – 50<br>(100 – 165) | 50 – 100<br>(166 - 328) | ≥ 100<br>(329) |
| <b>Recommended carrier frequency allowed<br/>Parameter 11-01</b> | 16kHz<br>(max) | 10 kHz<br>(max)        | 5 kHz<br>(max)          | 2 kHz<br>(max) |

### 3.13 Installing an AC Line Reactor

If the inverter is connected to a large-capacity power source (600kVA or more), install an optional AC reactor on the input side of the inverter. This also improves the power factor on the power supply side.

### 3.14 Power Input Wire Size, and NFB

The following table shows the recommended wire size for each frame of the E510. It depends on the application whether or not to install a circuit breaker. The NFB must be installed between the input power supply and the inverter input (L1 (L), L2, L3 (N)).


**Note:** When using a ground protection make sure the current setting is above 200mA and trip delay time is 0.1 sec of higher.

**Table 3.16.1 Wiring instrument for frame 1 ~ 4**

| Model  | TM1        |                 |                   |        |     | TM2        |                 |                   |        |     |
|--------|------------|-----------------|-------------------|--------|-----|------------|-----------------|-------------------|--------|-----|
|        | Cable Size |                 | Tightening torque |        |     | Cable Size |                 | Tightening torque |        |     |
|        | AWG        | mm <sup>2</sup> | kgf.cm            | lbf.in | Nm  | AWG        | mm <sup>2</sup> | kgf.cm            | lbf.in | Nm  |
| Frame1 | 20~12      | 0.52~3.33       | 10.20             | 0.006  | 1.0 | 26~14      | 0.13~2.08       | 8.16              | 0.005  | 0.8 |
| Frame2 | 18~8       | 0.81~8.37       | 18.35             | 0.010  | 1.8 |            |                 |                   |        |     |
| Frame3 | 14~6       | 2.08~13.30      | 24.47             | 0.014  | 2.4 |            |                 |                   |        |     |
| Frame4 | 4~3        | 21.15~26.67     |                   |        |     |            |                 |                   |        |     |

### 3.15 Control Circuit Wiring

- (1) Separate the wiring for control circuit terminals from main circuit wiring for terminals (R/L1, S/L2, T/L3, U/T1, V/T2, W/T3).
- (2) Separate the wiring for control circuit terminals R1A-R1B-R1C or R2A, R2B (Relay outputs) from wiring for terminals S1 – S6, A0, AGND, +10V, AI1, AI2 and GND wiring.
- (3) Use shielded twisted-pair cables (#24 - #14 AWG / 0.5 - 2 mm<sup>2</sup>) shown in Fig. 3.17.1 for control circuits to minimize noise problems. The maximum wiring distance should not exceed 50m (165 ft).

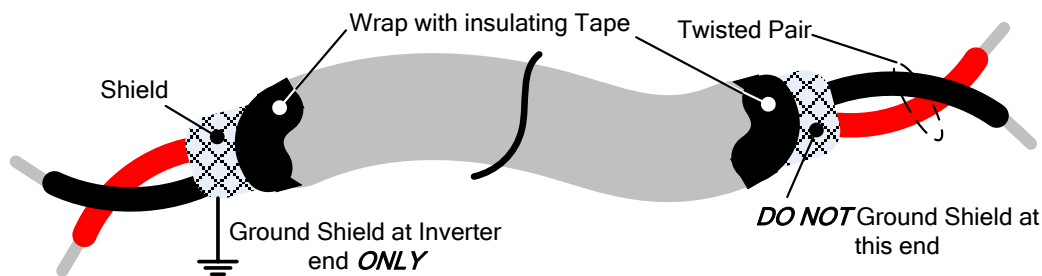

**Fig. 3.17.1 Shielded Twisted-Pair**

### 3.16 Inverter Specification

#### Product Specifications 230V class – Single Phase

| Model:E510-□□□- H1F(N4)(S)              | 2P5                           | 201  | 202  | 203  |
|---|-------------------------------|------|------|------|
| Horse power (HP)                        | 0.5                           | 1    | 2    | 3    |
| Suitable motor capacity (kW)            | 0.4                           | 0.75 | 1.5  | 2.2  |
| Rated output current (A)                | 3.1                           | 4.5  | 7.5  | 10.5 |
| Rated capacity (KVA)                    | 1.2                           | 1.7  | 2.90 | 4.00 |
| Input voltage range(V)                  | Single Phase:200~240V,50/60Hz |      |      |      |
| Allowable voltage fluctuation           | +10%-15%                      |      |      |      |
| Output voltage range(V)                 | Three phase: 0~240V           |      |      |      |
| Input current (A)*                      | 8.5                           | 12   | 16   | 23.9 |
| Inverter net weight (kg)                | 1.65                          | 1.65 | 2.5  | 2.5  |
| Allowable momentary power loss time (S) | 2.0                           | 2.0  | 2.0  | 2.0  |
| Enclosure                               | IP66/NEMA4X                   |      |      |      |

#### Product Specifications 230V class – Single/Three Phase

| Model:E510-□□□- H(N4R)                  | 2P5                                  | 201    | 202   | 203       |
|---|--------------------------------------|--------|-------|-----------|
| Horse power (HP)                        | 0.5                                  | 1      | 2     | 3         |
| Suitable motor capacity (kW)            | 0.4                                  | 0.75   | 1.5   | 2.2       |
| Rated output current (A)                | 3.1                                  | 4.5    | 7.5   | 10.5      |
| Rated capacity (KVA)                    | 1.2                                  | 1.7    | 2.90  | 4.00      |
| Input voltage range(V)                  | Single/Three Phase:200~240V, 50/60Hz |        |       |           |
| Allowable voltage fluctuation           | +10%-15%                             |        |       |           |
| Output voltage range(V)                 | Three phase: 0~240V                  |        |       |           |
| Input current (A)*                      | 8.5/4.5                              | 12/6.5 | 16/11 | 23.9/12.5 |
| Inverter net weight (kg)                | 1.6                                  | 1.6    | 2.5   | 2.5       |
| Allowable momentary power loss time (S) | 2.0                                  | 2.0    | 2.0   | 2.0       |
| Enclosure                               | IP66/NEMA4X                          |        |       |           |

### Product Specifications 230V class –Three Phase

| Model: E510-□□□- H3(N4)                 | 202                           | 205  | 208 | 210  | 215  | 220  |
|---|-------------------------------|------|-----|------|------|------|
| Horse power (HP)                        | 2                             | 5    | 7.5 | 10   | 15   | 20   |
| Suitable motor capacity (kW)            | 1.5                           | 3.7  | 5.5 | 7.5  | 11   | 15   |
| Rated output current (A)                | 7.5                           | 17.5 | 26  | 35   | 48   | 64   |
| Rated capacity (KVA)                    | 2.9                           | 6.7  | 9.9 | 13.3 | 20.6 | 27.4 |
| Input voltage range(V)                  | Three phase :200~240V,50/60HZ |      |     |      |      |      |
| Allowable voltage fluctuation           | +10%-15%                      |      |     |      |      |      |
| Output voltage range(V)                 | Three phase: 0~240V           |      |     |      |      |      |
| Input current (A)*                      | 11                            | 20.5 | 33  | 42   | 57   | 70   |
| Inverter net weight (kg)                | 1.6                           | 2.5  | 6.5 | 6.5  | 10.1 | 10.4 |
| Allowable momentary power loss time (S) | 2.0                           | 2.0  | 2.0 | 2.0  | 2.0  | 2.0  |
| Enclosure                               | IP66/NEMA4X                   |      |     |      |      |      |

### Product Specifications 460V class –Three Phase

| Model:E510-□□□- H3(F)(N4)(S)            | 401                           | 402 | 403 | 405  |
|---|-------------------------------|-----|-----|------|
| Horse power (HP)                        | 1                             | 2   | 3   | 5    |
| Suitable motor capacity (kW)            | 0.75                          | 1.5 | 2.2 | 3.7  |
| Rated output current (A)                | 2.3                           | 3.8 | 5.2 | 8.8  |
| Rated capacity (KVA)                    | 1.7                           | 2.9 | 4.0 | 6.7  |
| Input voltage range(V)                  | Three phase: 380~480V,50/60Hz |     |     |      |
| Allowable voltage fluctuation           | +10%-15%                      |     |     |      |
| Output voltage range(V)                 | Three phase:0~480V            |     |     |      |
| Input current (A)*                      | 4.2                           | 5.6 | 7.3 | 11.6 |
| Inverter net weight (kg)                | 1.7                           | 1.7 | 2.5 | 2.5  |
| Allowable momentary power loss time (S) | 2.0                           | 2.0 | 2.0 | 2.0  |
| Enclosure                               | IP66/NEMA4X                   |     |     |      |

### Product Specifications 460V class –Three Phase

| Model:E510-□□□- H3(F)(N4)(S)            | 408                           | 410  | 415  | 420  | 425  |
|---|-------------------------------|------|------|------|------|
| Horse power (HP)                        | 7.5                           | 10   | 15   | 20   | 25   |
| Suitable motor capacity (kW)            | 5.5                           | 7.5  | 11   | 15   | 18.5 |
| Rated output current (A)                | 13.0                          | 17.5 | 24   | 32   | 40   |
| Rated capacity (KVA)                    | 9.9                           | 13.3 | 19.1 | 27.4 | 34   |
| Input voltage range(V)                  | Three phase: 380~480V,50/60Hz |      |      |      |      |
| Allowable voltage fluctuation           | +10%-15%                      |      |      |      |      |
| Output voltage range(V)                 | Three phase: 0~480V           |      |      |      |      |
| Input current (A)*                      | 17                            | 23   | 31   | 38   | 48   |
| Inverter net weight (kg)                | 6.7                           | 6.7  | 6.7  | 13.7 | 13.7 |
| Allowable momentary power loss time (S) | 2.0                           | 2.0  | 2.0  | 2.0  | 2.0  |
| Enclosure                               | IP66/NEMA4X                   |      |      |      |      |

**Product Specifications 460V class –Three Phase**

|  |  |            |
|--|--|------------|
| <b>Model: E510-□□□- H3(F)(PT)</b>              | <b>420</b>                               | <b>425</b> |
| <b>Horse power (HP)</b>                        | 20                                       | 25         |
| <b>Suitable motor capacity ( kW )</b>          | 15                                       | 18.5       |
| <b>Rated output current (A)</b>                | 32                                       | 40         |
| <b>Rated capacity (KVA)</b>                    | 27.4                                     | 34         |
| <b>Input voltage range(V)</b>                  | Three phase: 380~480V (+10%-15%),50/60Hz |            |
| <b>Output voltage range(V)</b>                 | Three phase: 0~480V                      |            |
| <b>Input current (A)*</b>                      | 38                                       | 48         |
| <b>Allowable momentary power loss time (S)</b> | 2.0                                      | 2.0        |
| <b>Enclosure</b>                               | IP66/NEMA4X                              |            |

**Notes:**

\*The input current is calculated value at full rated output current.

\*N4S 460V series only up to 15HP.

N4: Protection class IP66, without built-in disconnect switches and VR.

N4R: Protection class IP66, with built-in VR, without disconnect switches

N4S: Protection class IP66, with built-in disconnect switches and VR

## General Specifications

| Item                         |   | E510  |
|------------------------------|---|---|
| <b>Control Mode</b>          |   | V/F Control, Vector Control   |
| <b>Frequency</b>             | Output Frequency  | 0.01~650.00Hz   |
|                              | Starting Torque   | 150%/1Hz(Vector)  |
|                              | Speed Control Range   | 1:50  |
|                              | Setting resolution  | Digital input: 0.01Hz   |
|                              |   | Analog input:0.06Hz/60Hz  |
|                              | Setting   | Keypad: Set directly with ▲ ▼ keys or the VR on the keypad  |
|                              |   | External Input Terminals:<br>AI1(0/2~10V), AI2(0/4~20mA)input<br>Multifunction input up/down function(Group3)<br>Setting frequency by communication method.   |
| Frequency limit              | Lower and upper frequency limits,<br>3 skip frequency settings. |   |
| <b>Run</b>                   | Operation set   | Keypad run, stop button   |
|                              |   | External terminals:<br>Multi- operation-mode2 / 3 wire selection<br>Jog operation   |
|                              |   | Run signal by communication method.   |
|                              |   |   |
| <b>Main Control Features</b> | V / F curve setting   | 18 fixed curves and one customized curve  |
|                              | Carrier frequency   | 1~16KHz   |
|                              | Acceleration and deceleration control                           | 2 Acceleration / deceleration time parameters.<br>4 off S curve parameters.   |
|                              | Multifunction input   | 29 functions (refer to description on group3)   |
|                              | Multifunction output  | 21 functions (refer to description on group3)   |
|                              | Multifunction analog output                                     | 5 functions (refer to description on group4)  |
|                              | Main features   | Overload Detection,16 preset speeds, Auto-run, Acc/Dec Switch (2 Stages),Main/Alt run Command select, Main/Alt Frequency Command selection, PID control, torque boost, V/F start Frequency, Fault reset, Firemode.    |
| <b>Display</b>               | LED   | Display: parameter / parameter value / frequency / line speed / DC voltage / output voltage / output current / PID feedback / input and output terminal status / Heat sink temperature / Program Version / Fault Log. |
|                              | LED Status Indicator  | Run / Stop / Forward / Reverse ,and etc.  |
| <b>Protective Functions</b>  | Overload Protection   | The relays to protect the motor and the inverter. (150%/1min)   |
|                              | Over voltage  | ·220V: >410V ,380V: >820V   |
|                              | Under Voltage   | ·220V: <190V , 380V: <380V  |
|                              | Momentary Power Loss Restart                                    | Inverter auto-restart after a momentary power loss.   |
|                              | Stall Prevention  | Stall prevention for Acceleration/ Deceleration/ Operation.   |



|                              |                                     |   |
|------------------------------|-------------------------------------|---|
|                              | Short-circuit output terminal       | Electronic Circuit Protection   |
|                              | Grounding Fault                     | Electronic Circuit Protection   |
|                              | Other protection features           | Protection for overheating of heat sink, The carrier frequency decreases based on the temperature, Fault output, Reverse prohibit, Prohibit for direct start after power up and error recovery ,parameter lock up |
|                              | All frames include brake transistor |   |
| <b>Communication control</b> |                                     | Standard built-in RS485 communication (Modbus), One to one or One to many control.  |
| <b>Environment</b>           | Operating temperature               | -10~50°C (Note1)  |
|                              | Storage temperature                 | -20~60°C  |
|                              | Humidity                            | 95% RH or less (no condensation)<br>(Compliance with IEC 60068 - 2-78)  |
|                              | Shock                               | 20Hz or less 1G(9.8m/s <sup>2</sup> )20~50Hz 0.6G(5.88m/s <sup>2</sup> )<br>(Compliance with IEC 60068 - 2-6)   |
|                              | Enclosure                           | IP66/NEMA4X   |

**Note1:**


IP66/NEMA 4X Type:  
-10~50°C

### 3.17 Inverter derating based on Carrier Frequency

Frame 1 / 2 / 3 / 4

Single phase: 230V: 0.5~3HP; Single /Three phase: 230V: 0.5~3HP;  
Three phase: 230V: 2~20HP, 460V: 1~25HP)

Current Rating

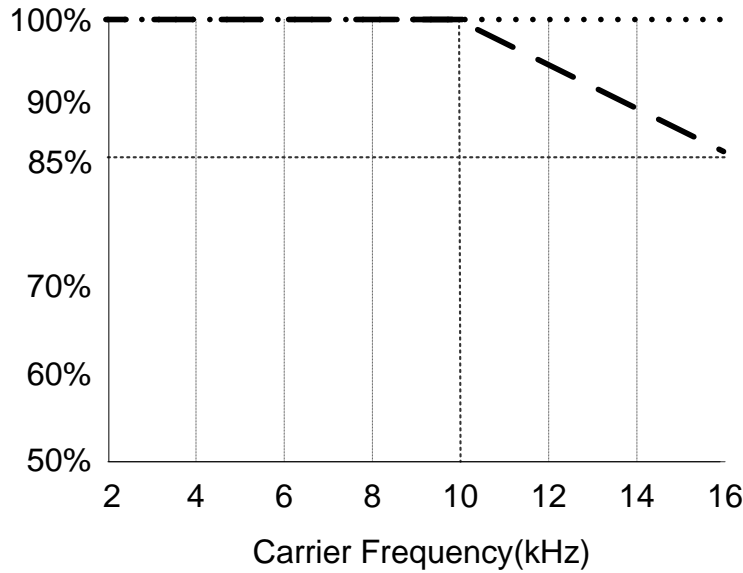

Note: ..... De-rate curve for ambient temperature of 104°F (40°C).  
----- De-rate curve for ambient temperature of 122°F (50°C).

### 3.18 Inverter Dimensions


#### IP66 / NEMA 4X Dimensions

##### Frame 1 (IP66 / NEMA 4X)

Single phase: 230V 0.5~1HP

Single / Three phase: 230V 0.5~1HP

Three Phase: 230V 2HP; 460V 1~2HP

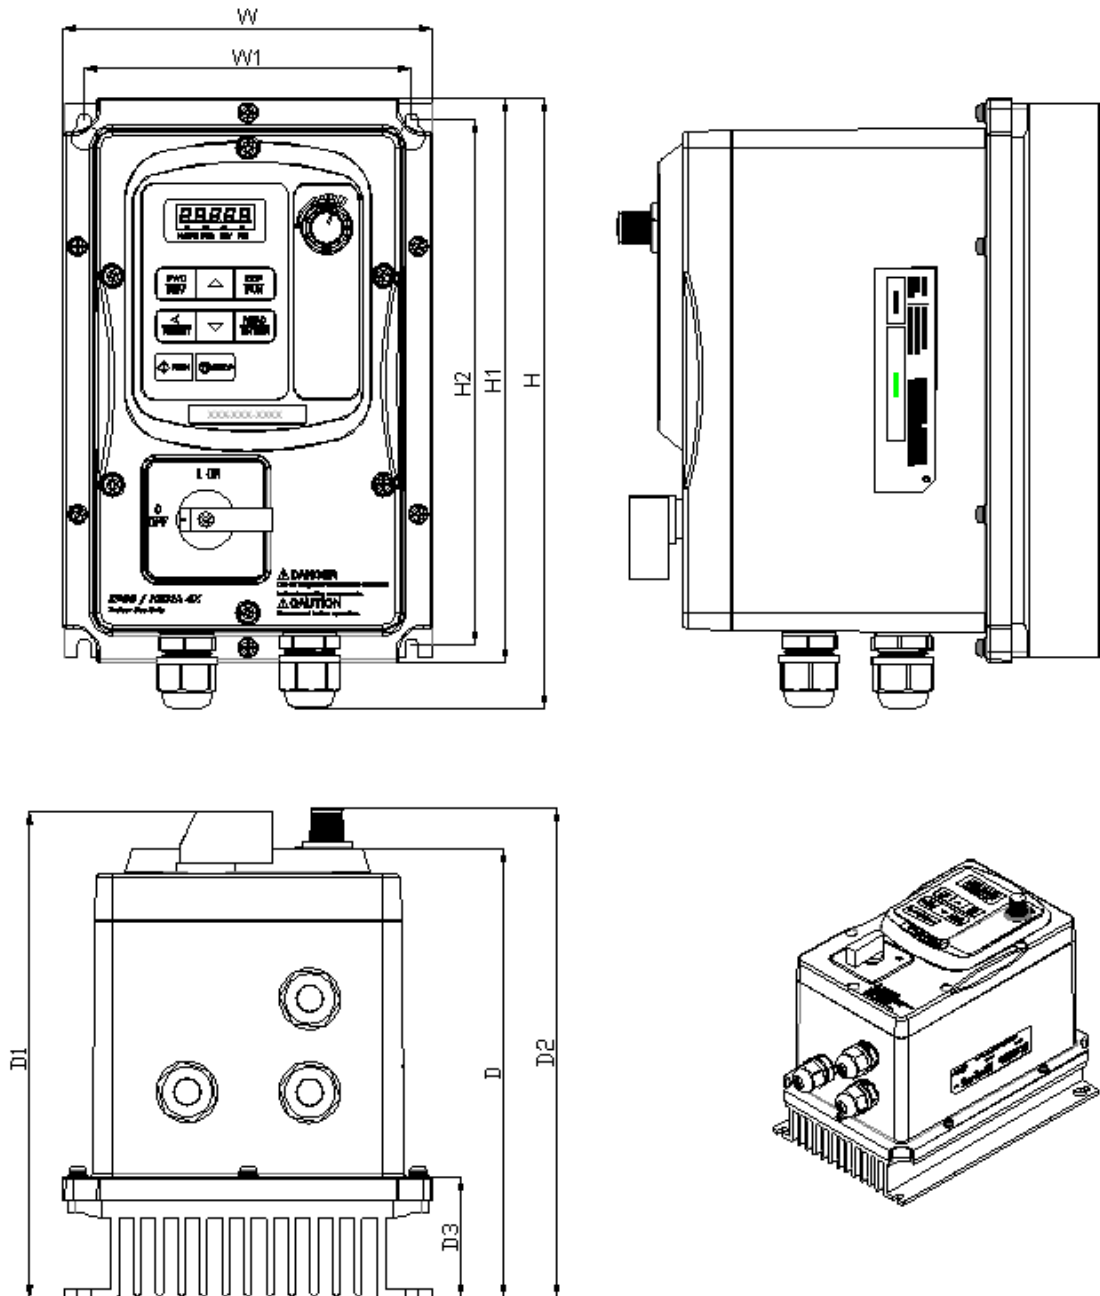

Unit: mm(inch)





| Model           | Dimensions      |                 |                 |                 |                 |               |               |               |                |               |               |                | N.W<br>(kg) |
|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|---------------|---------------|---------------|----------------|---------------|---------------|----------------|-------------|
|                 | W               | W1              | H               | H1              | H2              | D             | D1            | D2            | D3             | Q1            | Q2            | Q3             |             |
| E510-2P5-HN4R   | 150.8<br>(5.94) | 133.3<br>(5.25) | 248.7<br>(9.79) | 230.2<br>(9.06) | 214.2<br>(8.43) | 183<br>(7.20) |               | 200<br>(7.87) | 49.5<br>(1.95) | 5.4<br>(0.21) | 5.4<br>(0.21) | 10.6<br>(0.42) | 2.9         |
| E510-2P5-H1FN4S |                 |                 |                 |                 |                 |               | 200<br>(7.87) | 200<br>(7.87) |                |               |               |                |             |
| E510-201-HN4R   |                 |                 |                 |                 |                 |               |               | 200<br>(7.87) |                |               |               |                |             |
| E510-201-H1FN4S |                 |                 |                 |                 |                 |               | 200<br>(7.87) | 200<br>(7.87) |                |               |               |                |             |
| E510-401-H3N4   |                 |                 |                 |                 |                 |               |               |               |                |               |               |                |             |
| E510-401-H3FN4S |                 |                 |                 |                 |                 |               | 200<br>(7.87) | 200<br>(7.87) |                |               |               |                |             |
| E510-402-H3N4   |                 |                 |                 |                 |                 |               |               |               |                |               |               |                |             |
| E510-402-H3FN4S |                 |                 |                 |                 |                 |               | 200           | 200           |                |               |               |                |             |

**Frame 2 (IP66 / NEMA 4X)**

Single phase: 230V 2~3HP

Single / Three phase: 230V 2~3HP

Three Phase: 230V 5HP; 460V 3~5HP

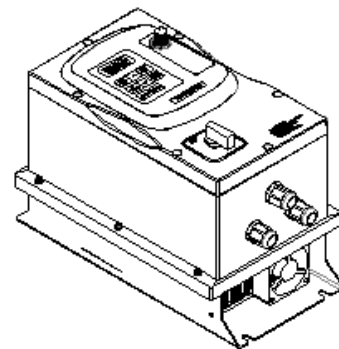
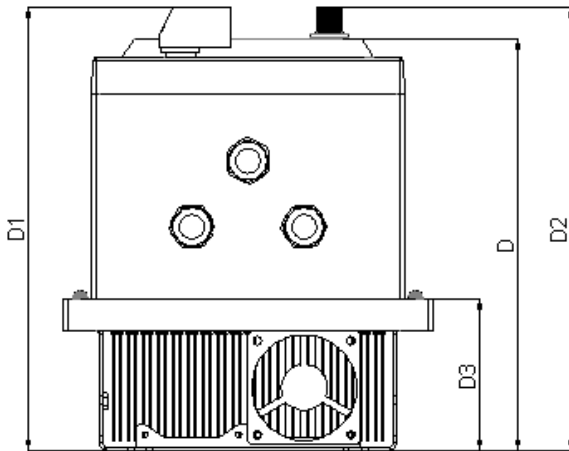
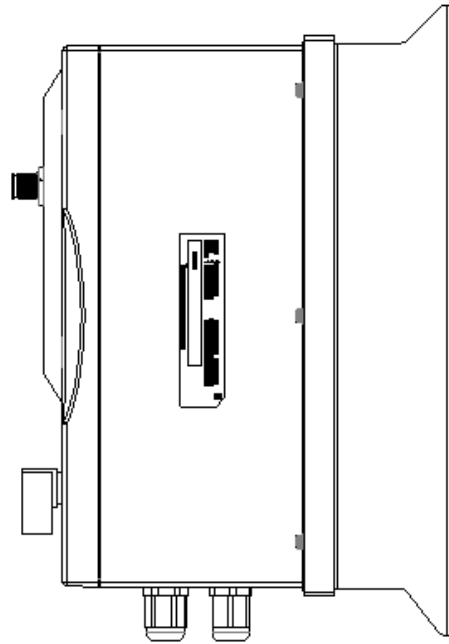
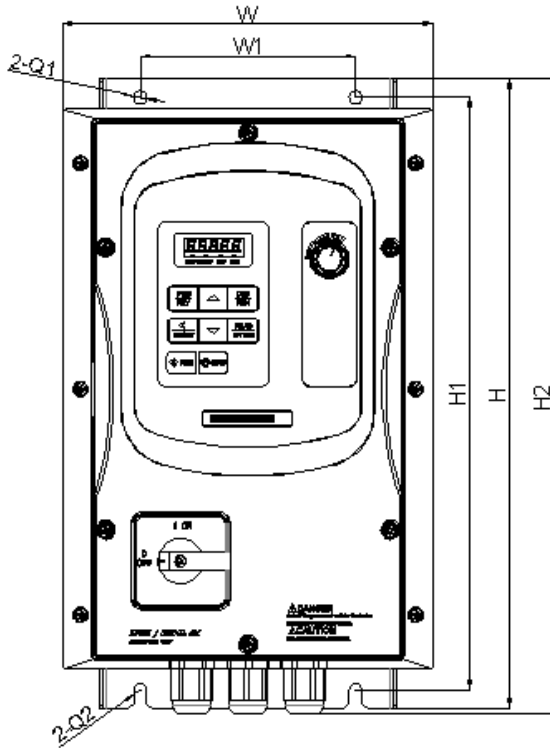


Unit: mm(inch)

| Model           | Dimensions    |               |                |                |                  |                 |    |                 |                |             |             | N.W<br>(kg) |
|-----------------|---------------|---------------|----------------|----------------|------------------|-----------------|----|-----------------|----------------|-------------|-------------|-------------|
|                 | W             | W1            | H              | H1             | H2               | D               | D1 | D2              | D3             | Q1          | Q2          |             |
| E510-202-HN4R   | 198<br>(7.80) | 115<br>(4.53) | 335<br>(13.19) | 315<br>(12.40) | 337.9<br>(13.30) | 218.4<br>(8.60) |    | 235.2<br>(9.26) | 79.8<br>(3.14) | 7<br>(0.28) | 7<br>(0.28) | 5.98        |
| E510-202-H1FN4S |               |               |                |                |                  |                 |    | 235.2<br>(9.26) |                |             |             |             |
| E510-203-HN4R   |               |               |                |                |                  |                 |    | 235.2<br>(9.26) |                |             |             |             |
| E510-203-H1FN4S |               |               |                |                |                  |                 |    | 235.2<br>(9.26) |                |             |             |             |
| E510-205-H3N4   |               |               |                |                |                  |                 |    |                 |                |             |             |             |
| E510-403-H3N4   |               |               |                |                |                  |                 |    |                 |                |             |             |             |
| E510-403-H3FN4S |               |               |                |                |                  |                 |    | 235.2<br>(9.26) |                |             |             |             |
| E510-405-H3N4   |               |               |                |                |                  |                 |    |                 |                |             |             |             |
| E510-405-H3FN4S |               |               |                |                |                  |                 |    | 235.2<br>(9.26) |                |             |             |             |

**Frame 3 (IP66 / NEMA 4X)**

Three Phase: 230V 7.5~20HP; 460V 7.5~25HP

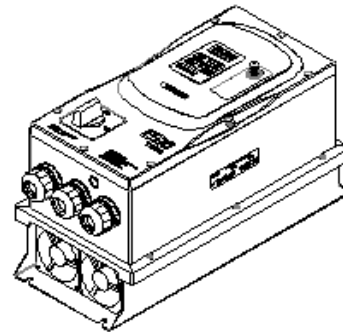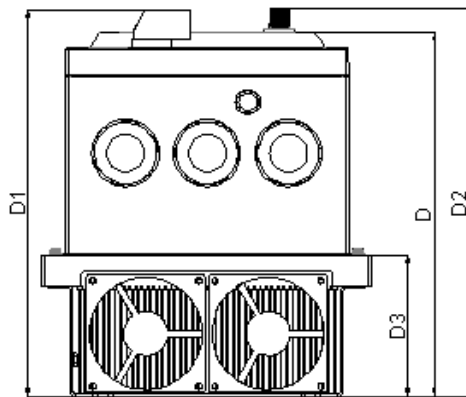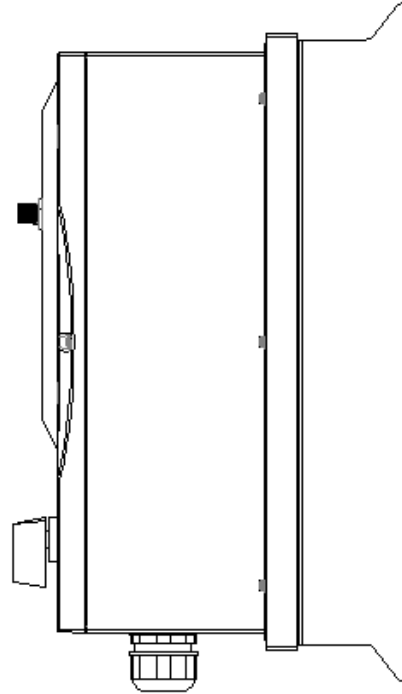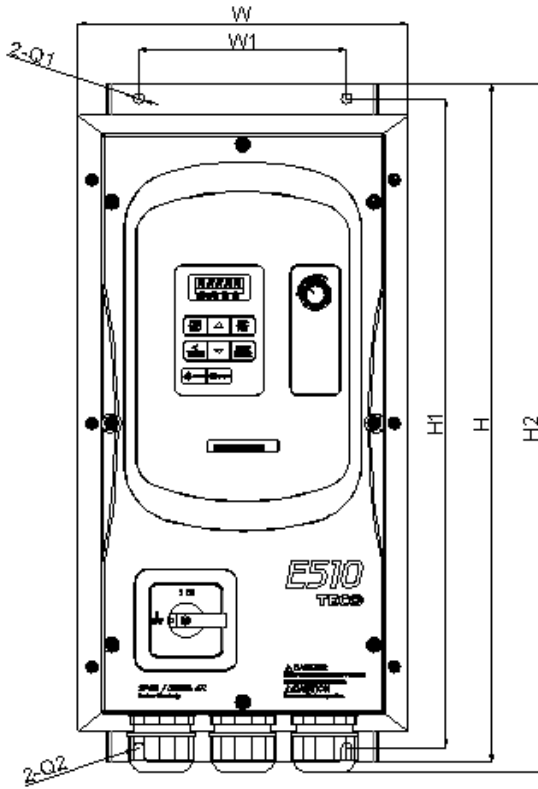

Unit: mm(inch)

| Model           | Dimensions      |               |                |                |                  |                 |                  |                  |              |             |             | N.W<br>(kg) |
|-----------------|-----------------|---------------|----------------|----------------|------------------|-----------------|------------------|------------------|--------------|-------------|-------------|-------------|
|                 | W               | W1            | H              | H1             | H2               | D               | D1               | D2               | D3           | Q1          | Q2          |             |
| E510-208-H3N4   | 222.8<br>(8.77) | 140<br>(5.51) | 460<br>(18.11) | 440<br>(17.32) | 466.3<br>(18.36) | 246.6<br>(9.71) |                  |                  | 96<br>(3.78) | 7<br>(0.28) | 7<br>(0.28) | 12.68       |
| E510-210-H3N4   |                 |               |                |                |                  |                 |                  |                  |              |             |             |             |
| E510-215-H3N4   |                 |               |                |                |                  |                 |                  |                  |              |             |             |             |
| E510-220-H3N4   |                 |               |                |                |                  |                 |                  |                  |              |             |             |             |
| E510-408-H3N4   |                 |               |                |                |                  |                 |                  |                  |              |             |             |             |
| E510-408-H3FN4S |                 |               |                |                |                  |                 | 266.5<br>(10.49) | 263.5<br>(10.37) |              |             |             |             |
| E510-410-H3N4   |                 |               |                |                |                  |                 |                  |                  |              |             |             |             |
| E510-410-H3FN4S |                 |               |                |                |                  |                 | 266.5<br>(10.49) | 263.5<br>(10.37) |              |             |             |             |
| E510-415-H3N4   |                 |               |                |                |                  |                 |                  |                  |              |             |             |             |
| E510-415-H3FN4S |                 |               |                |                |                  |                 | 266.5<br>(10.49) | 263.5<br>(10.37) |              |             |             |             |
| E510-420-H3N4   |                 |               |                |                |                  |                 |                  |                  |              |             |             |             |
| E510-425-H3N4   |                 |               |                |                |                  |                 |                  |                  |              |             |             |             |



## 4. Keypad and Programming Functions

### 4.1 LED Keypad

#### 4.1.1 Keypad Display and Keys


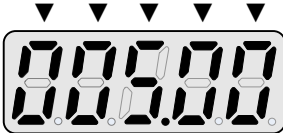



| DISPLAY                    | Description   |
|----------------------------|---|
| <b>5 Digit LED Display</b> | Monitor inverter signals, view / edit parameters, fault / alarm display.      |
| <b>LED INDICATORS</b>      |   |
| <b>Hz/RPM</b>              | LED ON when frequency or line speed is displayed.                             |
| <b>FWD</b>                 | LED ON when inverter is running in forward direction, flashing when stopping. |
| <b>REV</b>                 | On when inverter is running in reverse direction, flashing when stopping.     |
| <b>FUN</b>                 | LED ON when parameters are displayed.   |

| KEYS (8)            | Description   |
|---------------------|---|
| <b>RUN</b>          | RUN Inverter in Local Mode  |
| <b>STOP</b>         | STOP Inverter   |
| <b>▲</b>            | Parameter navigation Up, Increase parameter or reference value                |
| <b>▼</b>            | Parameter navigation down, decrease parameter or reference value              |
| <b>FWD/REV</b>      | FWD: Forward Run / REV: Reverse Run   |
| <b>DSP/FUN</b>      | DSP: Switch between available display modes<br>FUN: View/Edit parameter value |
| <b>READ/ENTER</b>   | Used to display parameter settings and save parameter changed settings        |
| <b>&lt; / RESET</b> | Use to reset alarms or resettable faults                                      |


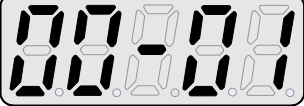
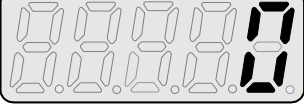

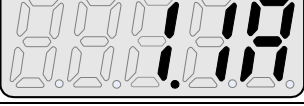





#### 4.1.2 Display Description

| Actual | LED Display | Actual | LED Display | Actual | LED Display | Actual | LED Display |
|--------|-------------|--------|-------------|--------|-------------|--------|-------------|
| 0      | 0           | A      | A           | L      | L           | Y      | Y           |
| 1      | 1           | B      | b           | n      | n           | -      | -           |
| 2      | 2           | C      | C           | o      | 0           | °      | ◻           |
| 3      | 3           | D      | d           | P      | P           | _      | _           |
| 4      | 4           | E      | E           | q      | q           | .      | .           |
| 5      | 5           | F      | F           | r      | r           |        |             |
| 6      | 6           | G      | G           | S      | S           |        |             |
| 7      | 7           | H      | H           | t      | t           |        |             |
| 8      | 8           | I      | I           | u      | u           |        |             |
| 9      | 9           | J      | J           | V      | V           |        |             |

| Display output frequency  | Frequency Reference   | Set Frequency Reference   |
|---|---|---|
| LED lights on   | LED flashes   | Flashing digit  |
|  |  |  |



At power-up the display will show the frequency reference setting, all LEDs are flashing. Press the ▲UP or ▼DOWN key to enter the frequency reference edit mode, use the ◀/ENT key to select which digit to edit (flashing). Use the ▲UP or ▼DOWN key to modify the value. During run operation the display will show the output frequency.

## LED display examples




| Seven Segment display   | Description  |
|---|--|
|    | <ol style="list-style-type: none"> <li>1. Displays the frequency reference at power-up</li> <li>2. Display the actual output frequency in operation status.</li> </ol> |
|    | Display parameter code   |
|    | Display the setting value of parameter   |
|    | Display input voltage  |
|    | Display inverter current.  |
|   | Display DC Bus Voltage   |
|  | Display temperature  |
|  | Display PID feedback value. The displayed digit is set by 12-01.   |
|  | Error display, refer to Chapter 5 Troubleshooting and maintenance  |
|  | Analog Current / Voltage AI1 / AI2. Range <b>(0~1000)</b>  |

### 4.1.3 LED Status description




#### Hz/ RPM LED

| State       | Description                                  | Hz/RPM LED  |
|-------------|--|---|
| Off         | Display doesn't show frequency or line speed |  |
| Illuminated | Display shows frequency or line speed        |  |




#### Forward LED

| State       | Description                              | FWD LED   |
|-------------|--|---|
| Off         | Inverter in reverse direction            |  |
| Illuminated | Inverter is running in forward direction |  |
| Flashing    | Forward direction active, no run command |  |

#### Reverse LED


| State       | Description                              | REV LED   |
|-------------|--|---|
| Off         | Inverter in forward direction            |   |
| Illuminated | Inverter is running in reverse direction |  |
| Flashing    | Reverse direction active, no run command |  |

#### FUN LED

| State       | Description                    | FUN LED   |
|-------------|--------------------------------|---|
| Off         | Display doesn't show parameter |  |
| Illuminated | Display shows parameter        |  |
| Flashing    | Firemode Enabled               |  |

#### 4.1.4 Power-Up Monitor


Power Up:

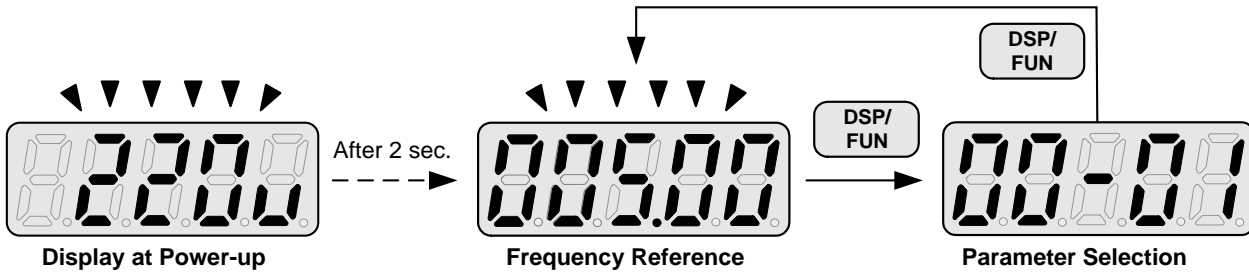


Change Monitor at Power-Up

| 12-00             | Display selection  |                |                |                |                   |                 |  |                   |              |  |               |              |  |
|-------------------|--|----------------|----------------|----------------|-------------------|-----------------|--|-------------------|--------------|--|---------------|--------------|--|
|                   | <p><b>Highest bit -&gt; 0 0 0 0 0 &lt;- Lowest bit</b><br/>                     The setting range for each bit is 0 ~ 8 from the highest bit to the lowest bit.</p>  |                |                |                |                   |                 |  |                   |              |  |               |              |  |
| <b>Range</b>      | <table border="0"> <tr> <td>0: No display</td> <td>4: Temperature</td> <td>8: Count value</td> </tr> <tr> <td>1: Output current</td> <td>5: PID feedback</td> <td></td> </tr> <tr> <td>2: Output voltage</td> <td>6: AI1 value</td> <td></td> </tr> <tr> <td>3: DC voltage</td> <td>7: AI2 value</td> <td></td> </tr> </table> | 0: No display  | 4: Temperature | 8: Count value | 1: Output current | 5: PID feedback |  | 2: Output voltage | 6: AI1 value |  | 3: DC voltage | 7: AI2 value |  |
| 0: No display     | 4: Temperature   | 8: Count value |                |                |                   |                 |  |                   |              |  |               |              |  |
| 1: Output current | 5: PID feedback  |                |                |                |                   |                 |  |                   |              |  |               |              |  |
| 2: Output voltage | 6: AI1 value   |                |                |                |                   |                 |  |                   |              |  |               |              |  |
| 3: DC voltage     | 7: AI2 value   |                |                |                |                   |                 |  |                   |              |  |               |              |  |


Example: 12-00 = 10000

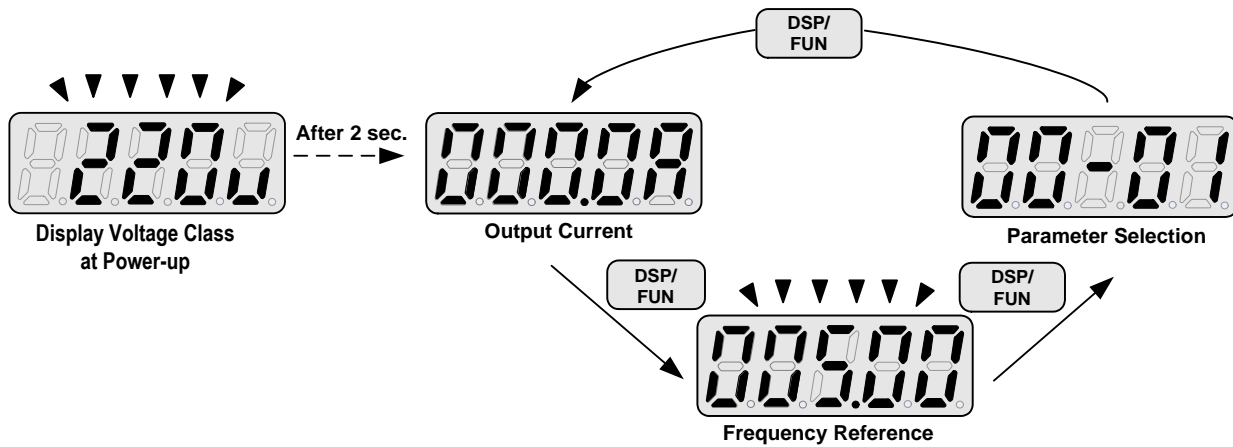


Example: 12-00 = 12345

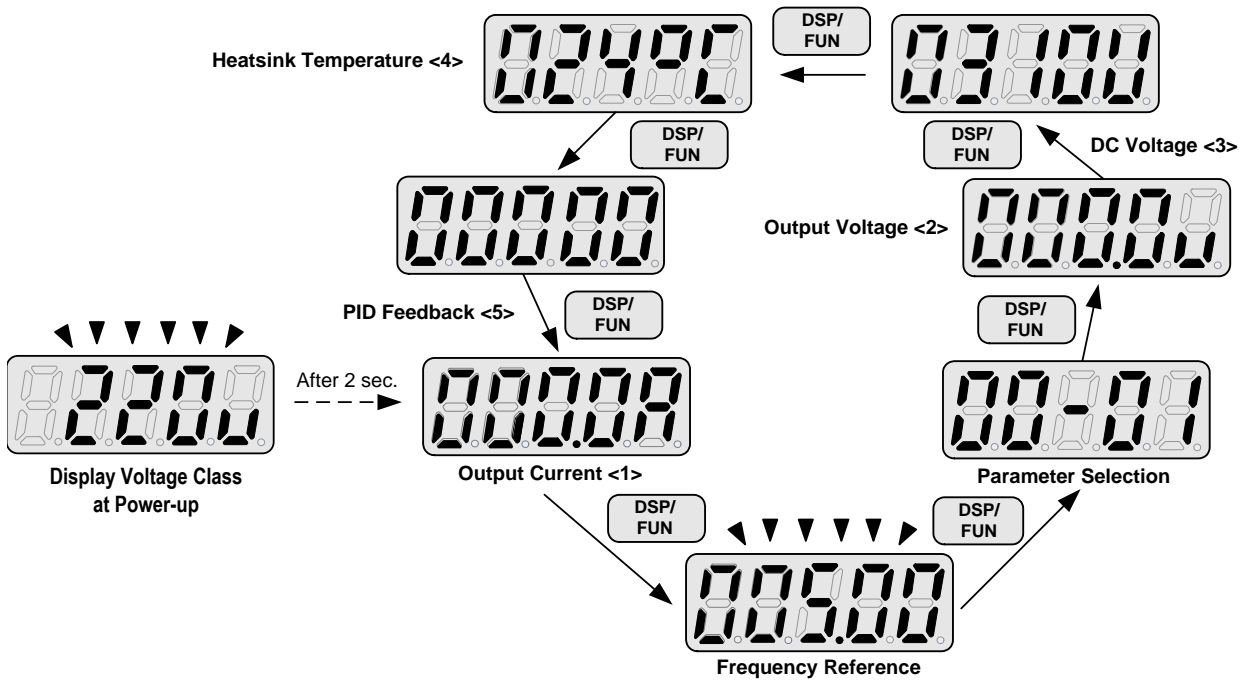

#### 4.1.5 Modifying Parameters / Set Frequency Reference

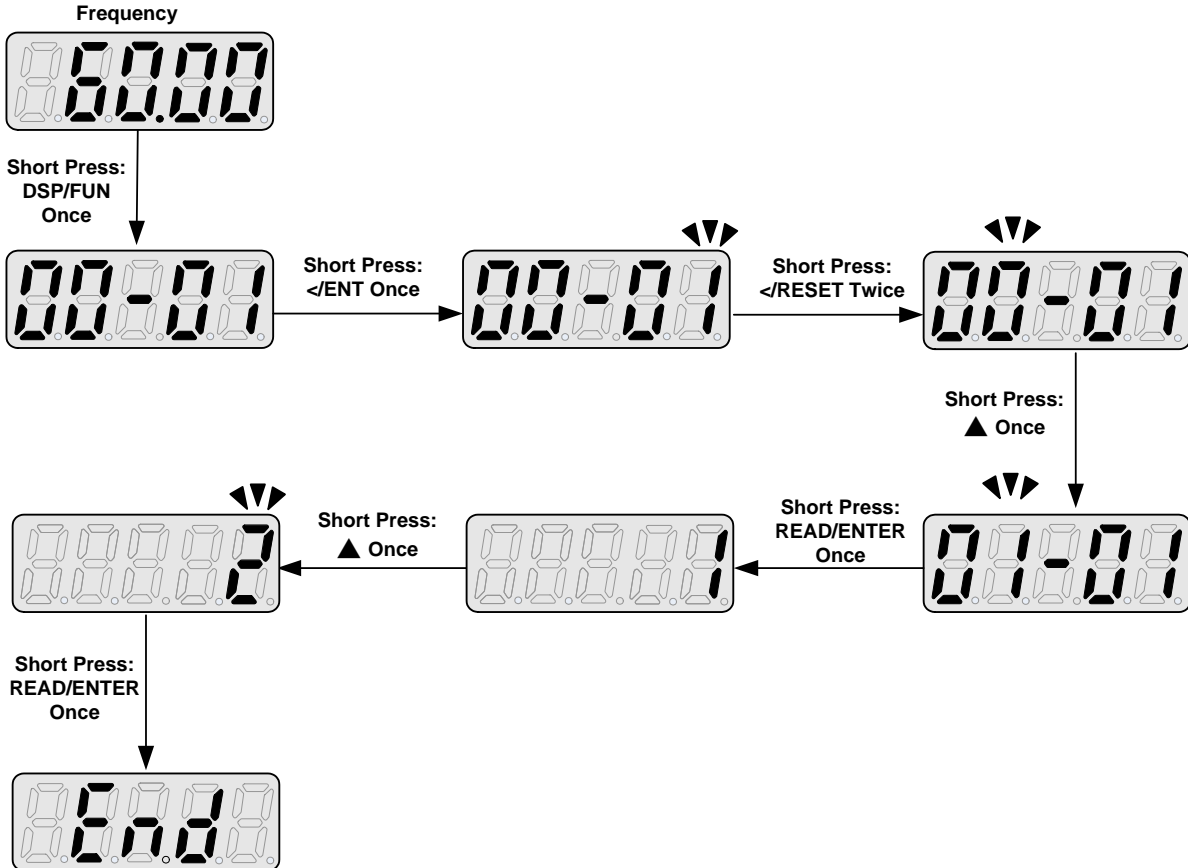

### 4.1.6 Operation Control

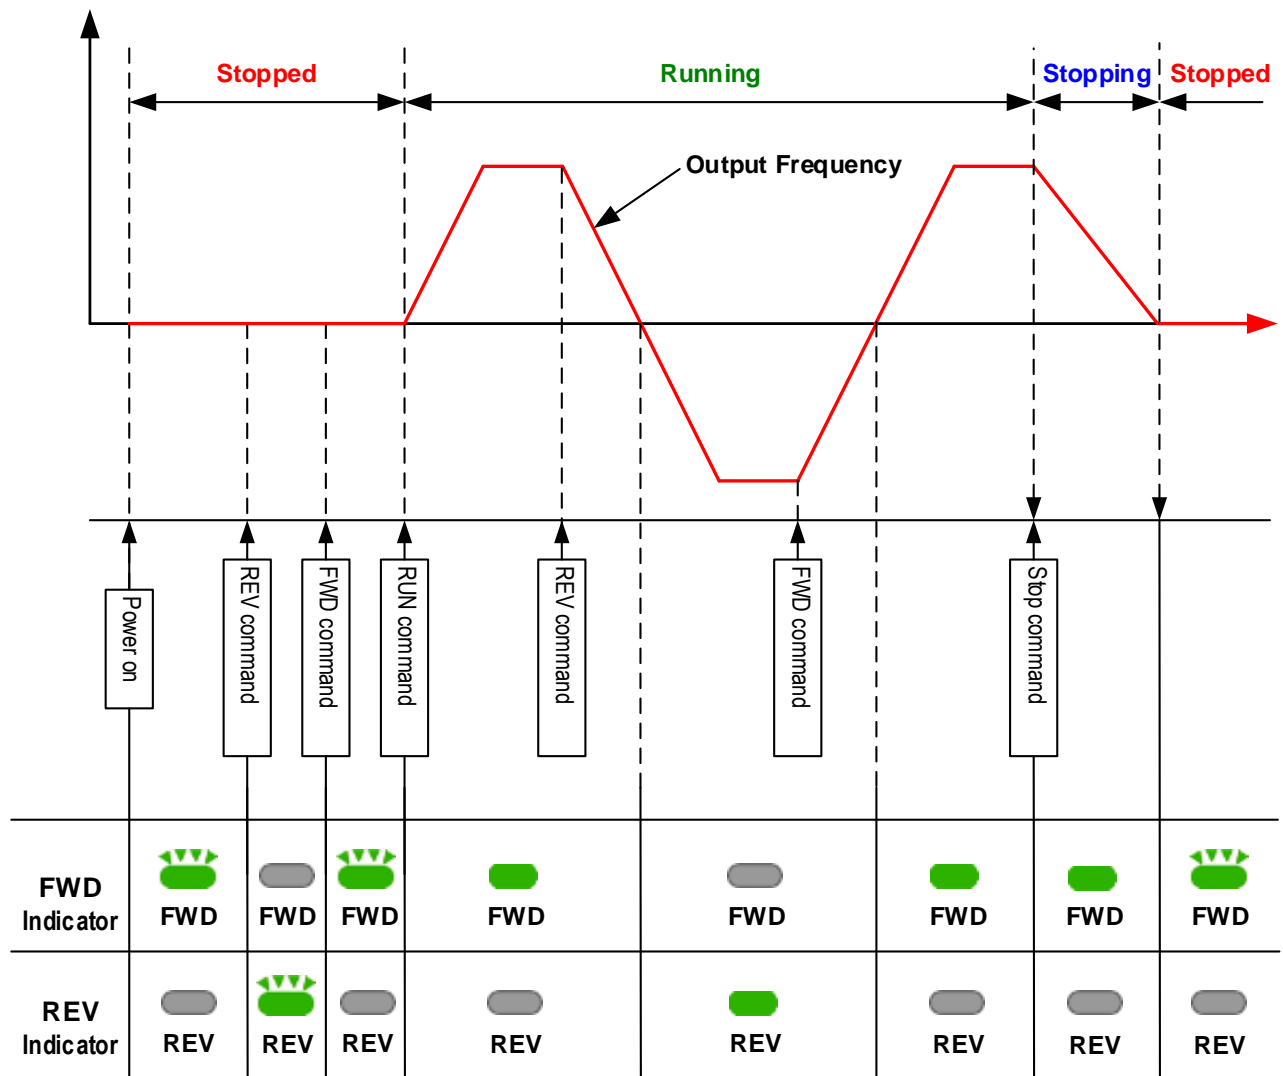

## 4.2 Parameters

| Parameter group | Name   |
|-----------------|--|
| Group 00        | Basic Parameters                             |
| Group 01        | V/F Control Parameters                       |
| Group 02        | Motor Parameters                             |
| Group 03        | External Digital Input and Output Parameters |
| Group 04        | External Analog Input and Output Parameters  |
| Group 05        | Preset-Speed Parameters                      |
| Group 06        | Automatic Program Operation Parameters       |
| Group 07        | Start /Stop Parameters                       |
| Group 08        | Protection Parameters                        |
| Group 09        | Communication Parameters                     |
| Group 10        | PID Parameters                               |
| Group 11        | Performance Control Parameters               |
| Group 12        | Monitoring Parameters                        |
| Group 13        | Maintenance Parameters                       |
| Group 14        | PLC Parameters                               |
| Group 15        | PLC Monitoring Parameters                    |

| Parameter Notes |   |
|-----------------|---|
| *1              | Parameter can be adjusted during running mode |
| *2              | Cannot be modified in communication mode      |
| *3              | Does not change with factory reset            |
| *4              | Read only                                     |
| *5              | Available for above V1.1                      |
| *6              | Available for above V1.3                      |
| *7              | Available for above V1.7                      |



| Group 00: Basic parameters |  |  |                 |      |      |
|----------------------------|--|--|-----------------|------|------|
| No.                        | Description                                    | Range  | Factory Setting | Unit | Note |
| 00-00                      | Control Mode Selection                         | 0:V/F Mode   | 0               | -    |      |
|                            |  | 1:Vector Mode  |                 |      |      |
| 00-01                      | Reserved                                       |  |                 |      |      |
| 00-02                      | Main Run Command Source Selection              | 0:Keypad   | 0               | -    |      |
|                            |  | 1:External Run/Stop Control  |                 |      |      |
|                            |  | 2:Communication  |                 |      |      |
|                            |  | 3:PLC  |                 |      |      |
| 00-03                      | Alternative Run Command Source Selection       | 0:Keypad   | 0               | -    |      |
|                            |  | 1:External Run/Stop Control  |                 |      |      |
|                            |  | 2:Communication  |                 |      |      |
| 00-04                      | Operation Modes for External Terminals         | 0:Forward/Stop-Reverse/Stop  | 0               | -    |      |
|                            |  | 1:Run/Stop- Reverse/Forward  |                 |      |      |
|                            |  | 2: 3 Wire Control Mode-Run/Stop  |                 |      |      |
| 00-05                      | Main Frequency Command Source Selection        | 0:UP/DOWM of Keypad  | 0               | -    |      |
|                            |  | 1:Potentiometer on Keypad  |                 |      |      |
|                            |  | 2:External AI1 Analog Signal Input   |                 |      |      |
|                            |  | 3:External AI2 Analog Signal Input   |                 |      |      |
|                            |  | 4:External Up/Down Frequency Control                                       |                 |      |      |
|                            |  | 5:Communication Setting Frequency  |                 |      |      |
|                            |  | 6:PID Ouput Frequency  |                 |      |      |
|                            |  | 7:Pulse Input  |                 |      |      |
|                            |  |  |                 |      | *6   |
| 00-06                      | Alternative Frequency Command Source Selection | 0:UP/DOWM of Keypad  | 4               | -    |      |
|                            |  | 1:Potentiometer on Keypad  |                 |      |      |
|                            |  | 2:External AI1 Analog Signal Input   |                 |      |      |
|                            |  | 3:External AI2 Analog Signal Input   |                 |      |      |
|                            |  | 4:External Up/Down Frequency Control                                       |                 |      |      |
|                            |  | 5:Communication Setting Frequency  |                 |      |      |
|                            |  | 6:PID Ouput Frequency  |                 |      |      |
|                            |  | 7:Pulse Input  |                 |      |      |
|                            |  |  |                 |      | *6   |
| 00-07                      | Main and Alternative Frequency Command Modes   | 0:Main or Alternative Frequency<br>1:Main Frequency+ Alternative Frequency | 0               | -    |      |
| 00-08                      | Communication Frequency Command                | 0.00~650.00  | 60.00           | Hz   | *4   |
| 00-09                      | Frequency Command Save on Power Down           | 0: Disable   | 0               | -    |      |
|                            |  | 1: Enable  |                 |      |      |
| 00-10                      | Initial Frequency Selection (keypad mode)      | 0:by Current Frequency Command   | 0               | -    |      |
|                            |  | 1:by 0 Frequency Command   |                 |      |      |
|                            |  | 2:by 00-11   |                 |      |      |
| 00-11                      | Initial Frequency Setpoint                     | 0.00~650.00  | 50.00/60.00     | Hz   |      |
| 00-12                      | Frequency Upper Limit                          | 0.01~650.00  | 50.00/60.00     | Hz   |      |
| 00-13                      | Frequency Lower Limit                          | 0.00~649.99  | 0.00            | Hz   |      |
| 00-14                      | Acceleration Time 1                            | 0.1~3600.0   | 10.0            | Sec  | *1   |
| 00-15                      | Deceleration Time 1                            | 0.1~3600.0   | 10.0            | Sec  | *1   |
| 00-16                      | Acceleration Time 2                            | 0.1~3600.0   | 10.0            | Sec  | *1   |
| 00-17                      | Deceleration Time 2                            | 0.1~3600.0   | 10.0            | Sec  | *1   |
| 00-18                      | Jog Frequency                                  | 0.00~650.00  | 2.00            | Hz   | *1*7 |
| 00-19                      | Jog Acceleration Time                          | 0.1~3600.0   | 0.5             | Sec  | *1*7 |
| 00-20                      | Jog Deceleration Time                          | 0.1~3600.0   | 0.5             | Sec  | *1*7 |

| Group 01: V/F Control Parameters |   |                                      |                 |      |      |
|----------------------------------|---|--------------------------------------|-----------------|------|------|
| No.                              | Description                                   | Range                                | Factory Setting | Unit | Note |
| 01-00                            | Volts/Hz Patterns                             | 0~18                                 | 0/9             | -    |      |
| 01-01                            | V/F Max voltage                               | 200V:170.0~264.0<br>400V:323.0~528.0 | 220.0/440.0     | Vac  |      |
| 01-02                            | Max Frequency                                 | 0.20 ~ 650.00                        | 50.00/60.00     | Hz   |      |
| 01-03                            | Max Frequency Voltage Ratio                   | 0.0 ~ 100.0                          | 100.0           | %    |      |
| 01-04                            | Mid Frequency 2                               | 0.10 ~ 650.00                        | 25.00/30.00     | Hz   |      |
| 01-05                            | Mid Frequency Voltage Ratio 2                 | 0.0 ~ 100.0                          | 50.0            | %    |      |
| 01-06                            | Mid Frequency 1                               | 0.10 ~ 650.00                        | 10.00/12.00     | Hz   |      |
| 01-07                            | Mid Frequency Voltage Ratio 1                 | 0.0 ~ 100.0                          | 20.0            | %    |      |
| 01-08                            | Min Frequency                                 | 0.10 ~ 650.00                        | 0.50/0.60       | Hz   |      |
| 01-09                            | Min Frequency Voltage Ratio                   | 0.0 ~ 100.0                          | 1.0             | %    |      |
| 01-10                            | Volts/Hz Curve Modification<br>(Torque Boost) | 0 ~ 10.0                             | 0.0             | %    | *1   |
| 01-11                            | V/F start Frequency                           | 0.00~10.00                           | 0.00            | Hz   |      |
| 01-12                            | Slip compensation gain                        | 0.05~10.00                           | 0.10            | S    |      |
| 01-13                            | V/F Mode Select                               | 0 : Mode 0 1 : Mode 1                | by models       | -    |      |

| Group 02: IM Motor parameters |                               |  |                 |          |      |
|-------------------------------|-------------------------------|--|-----------------|----------|------|
| No.                           | Description                   | Range                                      | Factory Setting | Unit     | Note |
| 02-00                         | Motor No Load Current         | 0~[(Parameter 02-01)-0.1]                  | -               | Amps(AC) | *3   |
| 02-01                         | Motor Rated Current (OL1)     | 0.2~100                                    | -               | A        | *3   |
| 02-02                         | Motor rated Slip Compensation | 0.0 ~ 200.0                                | 0.0             | %        | *1   |
| 02-03                         | Motor rated speed             | 0~39000                                    | -               | Rpm      | *3   |
| 02-04                         | Motor rated voltage           | 200V: 170.0~264.0<br>400V: 323.0~528.0     | 220.0/440.0     | V        |      |
| 02-05                         | Motor rated power             | 0.1~37.0                                   | -               | KW       |      |
| 02-06                         | Motor rated frequency         | 0~650.0                                    | 50.0/60.0       | Hz       |      |
| 02-07                         | Motor pole number             | 2 ~16                                      | 4               | -        |      |
| 02-08<br>~<br>02-13           | Reserved                      |  |                 |          |      |
| 02-14                         | Auto Tune                     | 0: Disable<br>1: Start Auto tune function. | 0               |          |      |
| 02-15                         | Stator resistance gain        | ----                                       |                 |          | *3*4 |
| 02-16                         | Rotor resistance gain         | ----                                       |                 |          | *3*4 |

| Group 03: External Digital Inputs and Relay Output Functions |  |  |                 |      |      |
|--|--|--|-----------------|------|------|
| No.  | Description                                      | Range  | Factory Setting | Unit | Note |
| 03-00  | Multifunction Input Term. S1                     | 0:Forward/Stop Command   | 0               | -    |      |
| 03-01  | Multifunction Input Term. S2                     | 1:Reverse/Stop Command   | 1               | -    |      |
| 03-02  | Multifunction Input Term. S3                     | 2:Speed Selection 1  | 2               | -    |      |
| 03-03  | Multifunction Input Term. S4                     | 3:Speed Selection 2  | 3               | -    |      |
| 03-04  | Multifunction Input Term. S5                     | 4:Speed Selection 3  | 4               | -    |      |
| 03-05  | Multifunction Input Term. S6                     | 5:Speed Selection 4  | 17              |      |      |
|  |  | 6:Jog Forward Command  |                 |      |      |
|  |  | 7:Jog Reverse Command  |                 |      |      |
|  |  | 8:Up Command   |                 |      |      |
|  |  | 9:Down Command   |                 |      |      |
|  |  | 10:Acc/Dec 2   |                 |      |      |
|  |  | 11:Acc/Dec Disabled  |                 |      |      |
|  |  | 12:Main/Alternative run source select  |                 |      |      |
|  |  | 13:Main/ Alternative Frequency Command select  |                 |      |      |
|  |  | 14:Rapid Stop ( Decel to stop )  |                 |      |      |
|  |  | 15:Base Block  |                 |      |      |
|  |  | 16:Disabl PID Function   |                 |      |      |
|  |  | 17:Fault Reset   |                 |      |      |
|  |  | 18:Auto Run Mode Enable  |                 |      |      |
|  |  | 19:Speed Search  |                 |      |      |
|  |  | 20:Energy Saving (only V/F)  |                 |      |      |
|  |  | 21:Reset PID integral value to Zero  |                 |      |      |
| 22:Counter Input   |  |  |                 |      |      |
| 23:Counter reset   |  |  |                 |      |      |
| 24:PLC Input   |  |  |                 |      |      |
| 25:Pulse Input-Width Measure (S3)                            | *6   |  |                 |      |      |
| 26:Pulse Input-Frequency Measure (S3)                        | *6   |  |                 |      |      |
| 27:Enable KEB Function                                       |  |  |                 |      |      |
| 28:Fire mode function  | *5   |  |                 |      |      |
| 03-06  | Up/Down frequency step                           | 0.00~5.00  | 0.00            | Hz   |      |
| 03-07  | Up/Down Keep Frequency Status after Stop Command | 0:When Up/Down is used, the preset frequency is held as the inverter stops, and the UP/Down function is disabled | 0               | -    |      |
|  |  | 1:When Up/Down is used, the preset frequency is reset to 0 Hz as the inverter stops.                             |                 |      |      |
|  |  | 2:When Up/Down is used, the preset frequency is held as the inverter stops, and the UP/Down is available.        |                 |      |      |
| 03-08  | S1 ~ S6 scan confirmation                        | 1~200 Number of Scan cycles  | 10              | 2ms  |      |
| 03-09  | S1~ S5 switch type select                        | xxx0:S1 NO xxx1:S1 NC  | 00000           | -    |      |
|  |  | xxx0x:S2 NO xxx1x:S2 NC  |                 |      |      |
|  |  | xx0xx:S3 NO xx1xx:S3 NC  |                 |      |      |
|  |  | x0xxx:S4 NO x1xxx:S4 NC  |                 |      |      |
|  |  | 0xxxx:S5 NO 1xxxx:S5 NC  |                 |      |      |
| 03-10  | S6 switch type select                            | xxx0:S6 NO xxx1:S6 NC  | 00000           | -    |      |
| 03-11  | Output Relay RY1                                 | 0:Run  | 0               | -    |      |

| Group 03: External Digital Inputs and Relay Output Functions |   |   |                 |      |      |
|--|---|---|-----------------|------|------|
| No.  | Description   | Range                                       | Factory Setting | Unit | Note |
|  | ( Terminals R1A,R1B, R1C )                                  |   |                 |      |      |
| 03-12  | Output Relay RY2.<br>( Terminals R2A, R2B )                 | 1:Fault                                     | 1               |      |      |
|  |   | 2:Setting Frequency Reached                 |                 |      |      |
|  |   | 3:Frequency Reached. Set by (3-13±3-14)     |                 |      |      |
|  |   | 4:Output Frequency Detection1(> 3-13)       |                 |      |      |
|  |   | 5:Output Frequency Detection2(< 3-13)       |                 |      |      |
|  |   | 6:Auto Restart                              |                 |      |      |
|  |   | 7:Momentary AC Power Loss                   |                 |      |      |
|  |   | 8:Rapid Stop                                |                 |      |      |
|  |   | 9:Base Block                                |                 |      |      |
|  |   | 10:Motor Overload Protection(OL1)           |                 |      |      |
|  |   | 11:Drive Overload Protection(OL2)           |                 |      |      |
|  |   | 12:Over-torque Threshold Level (OL3)        |                 |      |      |
|  |   | 13:Preset Output Current Reached (03-15~16) |                 |      |      |
|  |   | 14:Brake Control (03-17~18)                 |                 |      |      |
|  |   | 15:PID Feedback Signal Loss                 |                 |      |      |
|  |   | 16: Single pre-set count (3-22)             |                 |      |      |
|  |   | 17: Dual pre-set count (3-22~23)            |                 |      |      |
|  |   | 18:PLC Status Indicator (00-02)             |                 |      |      |
|  |   | 19:PLC control                              |                 |      |      |
|  |   | 20:Zero Speed                               |                 |      |      |
| 03-13  | Frequency Reached Level                                     | 0.00~650.00                                 | 0.00            | Hz   | *1   |
| 03-14  | Frequency Reached Detection Range (±)                       | 0.00~30.00                                  | 2.00            | Hz   | *1   |
| 03-15  | Preset output current reached                               | 0.1~15.0                                    | 0.1             | A    |      |
| 03-16  | Preset output Current detection delay Time                  | 0.1~10.0                                    | 0.1             | Sec  |      |
| 03-17  | Brake Release level   | 0.00~20.00                                  | 0.00            | Hz   |      |
| 03-18  | Brake Engage Level  | 0.00~20.00                                  | 0.00            | Hz   |      |
| 03-19  | Relay Output function type                                  | 0:A (Normally open)<br>1:B (Normally close) | 0               | -    |      |
| 03-20  | Internal / external multi-function input terminal selection | 0~63  | 0               | -    |      |
| 03-21  | Action to set the internal multi-function input terminals   | 0~63  | 0               | -    |      |
| 03-22  | Pre-set count 1   | 0~9999                                      | 0               | -    |      |
| 03-23  | Pre-set count 2   | 0~9999                                      | 0               | -    |      |
| 03-24  | Output under current detection                              | 0:Disable                                   | 0               | -    |      |
|  |   | 1:Enable                                    |                 |      |      |
| 03-25  | Output under current detection level                        | 5%~100%                                     | 20%             | %    |      |
| 03-26  | Output under current detection delay time                   | 0.0~50.0s                                   | 20.0            | Sec  |      |
| 03-27  | Pulse Frequency   | 0.01~0.20                                   | 0.1             | kHz  | *7   |
| 03-28  | Pulse Frequency Gain  | 0.01~9.99                                   | 1.00            |      | *6   |

※ "NO" indicates normally open, "NC" indicates normally closed.

| Group 04: External Analog Input and Output Parameters |   |  |                 |      |      |
|---|---|--|-----------------|------|------|
| No.   | Description                               | Range  | Factory Setting | Unit | Note |
| 04-00   | Analog Input Signal Type Select (AI1/AI2) | AI1 AI2  | 1               | -    | *7   |
|   |   | (0): 0~10V (0~20mA) 0~10V (0~20mA)   |                 |      |      |
|   |   | (1): 0~10V (0~20mA) 2~10V (4~20mA)   |                 |      |      |
|   |   | (2): 2~10V (4~20mA) 0~10V (0~20mA)   |                 |      |      |
|   | (3): 2~10V (4~20mA) 2~10V (4~20mA)        |  |                 |      |      |
| 04-01   | AI1 Signal Verification Scan Rate         | 1~200  | 50              | 2ms  |      |
| 04-02   | AI1 Gain                                  | 0 ~ 1000   | 100             | %    | *1   |
| 04-03   | AI1 Bias                                  | 0 ~ 100  | 0               | %    | *1   |
| 04-04   | AI1 Bias Selection                        | 0: Positive 1: Negative  | 0               | -    | *1   |
| 04-05   | AI1 Slope                                 | 0: Positive 1: Negative  | 0               | -    | *1   |
| 04-06   | AI2 Signal Verification Scan Rate         | 1~200  | 50              | 2ms  |      |
| 04-07   | AI2 Gain                                  | 0 ~ 1000   | 100             | %    | *1   |
| 04-08   | AI2 Bias                                  | 0 ~ 100  | 0               | %    | *1   |
| 04-09   | AI2 Bias Selection                        | 0: Positive 1: Negative  | 0               | -    | *1   |
| 04-10   | AI2 Slope                                 | 0: Positive 1: Negative  | 0               | -    | *1   |
| 04-11   | Analog Output (AO) Mode                   | 0: Output Frequency<br>1: Frequency Command<br>2: Output Voltage<br>3: DC Bus Voltage<br>4: Motor Current (100% rated current) | 0               | -    | *1   |
| 04-12   | Analog Output (AO) Gain                   | 0 ~ 1000   | 100             | %    | *1   |
| 04-13   | Analog Output (AO) Bias                   | 0 ~ 100  | 0               | %    | *1   |
| 04-14   | AO Bias Selection                         | 0: Positive 1: Negative  | 0               | -    | *1   |
| 04-15   | AO Slope                                  | 0: Positive 1: Negative  | 0               | -    | *1   |
| 04-16   | F-Gain Function                           | 0: Invalid 1: Effective  | 0               | -    | *1   |

| Group 05: Preset Speed Parameters |                                     |  |                 |      |      |
|-----------------------------------|-------------------------------------|--|-----------------|------|------|
| No.                               | Description                         | Range  | Factory Setting | Unit | Note |
| 05-00                             | Preset Speed Control Mode Selection | 0: Common Accel/Decel<br>Accel/Decel 1 or 2 apply to all speeds  | 0               | -    |      |
|                                   |                                     | 1: Individual Accel/Decel for each preset speed<br>0-15 apply to the selected preset speeds<br>(Acc0/Dec0~Acc15/Dec15) |                 |      |      |
| 05-01                             | Preset Speed 0 (Keypad Freq)        | 0.00 ~ 650.00  | 5.00            | Hz   |      |
| 05-02                             | Preset Speed1 (Hz)                  |  | 5.00            | Hz   | *1   |
| 05-03                             | Preset Speed2 (Hz)                  |  | 10.00           | Hz   | *1   |
| 05-04                             | Preset Speed3 (Hz)                  |  | 20.00           | Hz   | *1   |
| 05-05                             | Preset Speed4 (Hz)                  |  | 30.00           | Hz   | *1   |
| 05-06                             | Preset Speed5 (Hz)                  |  | 40.00           | Hz   | *1   |
| 05-07                             | Preset Speed6 (Hz)                  |  | 50.00           | Hz   | *1   |
| 05-08                             | Preset Speed7 (Hz)                  |  | 50.00           | Hz   | *1   |
| 05-09                             | Preset Speed8 (Hz)                  |  | 0.00            | Hz   | *1   |
| 05-10                             | Preset Speed9 (Hz)                  |  | 0.00            | Hz   | *1   |
| 05-11                             | Preset Speed10 (Hz)                 |  | 0.00            | Hz   | *1   |
| 05-12                             | Preset Speed11 (Hz)                 |  | 0.00            | Hz   | *1   |
| 05-13                             | Preset Speed12 (Hz)                 |  | 0.00            | Hz   | *1   |
| 05-14                             | Preset Speed13 (Hz)                 |  | 0.00            | Hz   | *1   |
| 05-15                             | Preset Speed14 (Hz)                 |  | 0.00            | Hz   | *1   |
| 05-16                             | Preset Speed15 (Hz)                 |  | 0.00            | Hz   | *1   |
| 05-17                             | Preset Speed0-Acctime               | 0.1 ~ 3600.0   | 10.0            | Sec  | *1   |
| 05-18                             | Preset Speed0-Dectime               |  | 10.0            | Sec  | *1   |
| 05-19                             | Preset Speed1-Acctime               |  | 10.0            | Sec  | *1   |
| 05-20                             | Preset Speed1-Dectime               |  | 10.0            | Sec  | *1   |
| 05-21                             | Preset Speed2-Acctime               |  | 10.0            | Sec  | *1   |
| 05-22                             | Preset Speed2-Dectime               |  | 10.0            | Sec  | *1   |
| 05-23                             | Preset Speed3-Acctime               |  | 10.0            | Sec  | *1   |
| 05-24                             | Preset Speed3-Dectime               |  | 10.0            | Sec  | *1   |
| 05-25                             | Preset Speed4-Acctime               |  | 10.0            | Sec  | *1   |
| 05-26                             | Preset Speed4-Dectime               |  | 10.0            | Sec  | *1   |
| 05-27                             | Preset Speed5-Acctime               |  | 10.0            | Sec  | *1   |
| 05-28                             | Preset Speed5-Dectime               |  | 10.0            | Sec  | *1   |
| 05-29                             | Preset Speed6-Acctime               |  | 10.0            | Sec  | *1   |
| 05-30                             | Preset Speed6-Dectime               |  | 10.0            | Sec  | *1   |
| 05-31                             | Preset Speed7-Acctime               |  | 10.0            | Sec  | *1   |
| 05-32                             | Preset Speed7-Dectime               |  | 10.0            | Sec  | *1   |
| 05-33                             | Preset Speed8-Acctime               |  | 10.0            | Sec  | *1   |
| 05-34                             | Preset Speed8-Dectime               |  | 10.0            | Sec  | *1   |
| 05-35                             | Preset Speed9-Acctime               |  | 10.0            | Sec  | *1   |
| 05-36                             | Preset Speed9-Dectime               |  | 10.0            | Sec  | *1   |
| 05-37                             | Preset Speed10-Acctime              |  | 10.0            | Sec  | *1   |
| 05-38                             | Preset Speed10-Dectime              |  | 10.0            | Sec  | *1   |
| 05-39                             | Preset Speed11-Acctime              | 10.0   | Sec             | *1   |      |

| Group 05: Preset Speed Parameters |                        |       |                 |      |      |
|-----------------------------------|------------------------|-------|-----------------|------|------|
| No.                               | Description            | Range | Factory Setting | Unit | Note |
| 05-40                             | Preset Speed11-DecTime |       | 10.0            | Sec  | *1   |
| 05-41                             | Preset Speed12-AcTime  |       | 10.0            | Sec  | *1   |
| 05-42                             | Preset Speed12-DecTime |       | 10.0            | Sec  | *1   |
| 05-43                             | Preset Speed13-AcTime  |       | 10.0            | Sec  | *1   |
| 05-44                             | Preset Speed13-DecTime |       | 10.0            | Sec  | *1   |
| 05-45                             | Preset Speed14-AcTime  |       | 10.0            | Sec  | *1   |
| 05-46                             | Preset Speed14-DecTime |       | 10.0            | Sec  | *1   |
| 05-47                             | Preset Speed15-AcTime  |       | 10.0            | Sec  | *1   |
| 05-48                             | Preset Speed15-DecTime |       | 10.0            | Sec  | *1   |

| Group 06: Automatic Program Operation Parameters |                                     |   |                 |      |      |
|--|-------------------------------------|---|-----------------|------|------|
| No.  | Description                         | Range   | Factory Setting | Unit | Note |
| 06-00  | Auto Run Mode Selection (Sequencer) | 0: Disabled.<br>1: Single cycle.<br>(Continues to run from the Unfinished step if restarted).<br>2: Periodic cycle.<br>(Continues to run from the unfinished step if restarted).<br>3: Single cycle, then holds the speed Of final step to run. (Continues to run from the unfinished step if restarted).<br>4: Single cycle.<br>(Starts a new cycle if restarted).<br>5: Periodic cycle.<br>(Starts a new cycle if restarted).<br>6: Single cycle, then hold the speed of final step to run.<br>(Starts a new cycle if restarted). | 0               | -    |      |
| 06-01  | Auto _ Run Mode Frequency Command 1 | 0.00~650.00   | 0.00            | Hz   | *1   |
| 06-02  | Auto _ Run Mode Frequency Command 2 |   | 0.00            | Hz   | *1   |
| 06-03  | Auto _ Run Mode Frequency Command 3 |   | 0.00            | Hz   | *1   |
| 06-04  | Auto _ Run Mode Frequency Command 4 |   | 0.00            | Hz   | *1   |
| 06-05  | Auto _ Run Mode Frequency Command 5 |   | 0.00            | Hz   | *1   |
| 06-06  | Auto _ Run Mode Frequency Command 6 |   | 0.00            | Hz   | *1   |
| 06-07  | Auto _ Run Mode Frequency Command 7 |   | 0.00            | Hz   | *1   |
| 06-08  | Auto _ Run Mode Frequency Command 8 |   | 0.00            | Hz   | *1   |

|       |   |            |      |     |    |
|-------|---|------------|------|-----|----|
| 06-09 | Auto _ Run Mode<br>Frequency Command 9    |            | 0.00 | Hz  | *1 |
| 06-10 | Auto _ Run Mode<br>Frequency Command10    |            | 0.00 | Hz  | *1 |
| 06-11 | Auto _ Run Mode<br>Frequency Command 11   |            | 0.00 | Hz  | *1 |
| 06-12 | Auto _ Run Mode<br>Frequency Command 12   |            | 0.00 | Hz  | *1 |
| 06-13 | Auto _ Run Mode<br>Frequency Command 13   |            | 0.00 | Hz  | *1 |
| 06-14 | Auto _ Run Mode<br>Frequency Command 14   |            | 0.00 | Hz  | *1 |
| 06-15 | Auto _ Run Mode<br>Frequency Command 15   |            | 0.00 | Hz  | *1 |
| 06-16 | Auto_ Run Mode Running<br>Time Setting 0  |            | 0.0  | Sec |    |
| 06-17 | Auto_ Run Mode Running<br>Time Setting 1  |            | 0.0  | Sec |    |
| 06-18 | Auto_ Run Mode Running<br>Time Setting 2  |            | 0.0  | Sec |    |
| 06-19 | Auto_ Run Mode Running<br>Time Setting 3  |            | 0.0  | Sec |    |
| 06-20 | Auto_ Run Mode Running<br>Time Setting 4  | 0 ~ 3600.0 | 0.0  | Sec |    |
| 06-21 | Auto_ Run Mode Running<br>Time Setting 5  |            | 0.0  | Sec |    |
| 06-22 | Auto_ Run Mode Running<br>Time Setting 6  |            | 0.0  | Sec |    |
| 06-23 | Auto_ Run Mode Running<br>Time Setting 7  |            | 0.0  | Sec |    |
| 06-24 | Auto_ Run Mode Running<br>Time Setting 8  |            | 0.0  | Sec |    |
| 06-25 | Auto_ Run Mode Running<br>Time Setting 9  |            | 0.0  | Sec |    |
| 06-26 | Auto_ Run Mode Running<br>Time Setting 10 |            | 0.0  | Sec |    |
| 06-27 | Auto_ Run Mode Running<br>Time Setting 11 |            | 0.0  | Sec |    |
| 06-28 | Auto_ Run Mode Running<br>Time Setting 12 |            | 0.0  | Sec |    |
| 06-29 | Auto_ Run Mode Running<br>Time Setting 13 |            | 0.0  | Sec |    |
| 06-30 | Auto_ Run Mode Running<br>Time Setting 14 |            | 0.0  | Sec |    |
| 06-31 | Auto_ Run Mode Running<br>Time Setting 15 |            | 0.0  | Sec |    |



|              |  |                                     |   |   |  |
|--------------|--|-------------------------------------|---|---|--|
| <b>06-32</b> | Auto_ Run Mode Running<br>Direction 0  | 0: Stop<br>1: Forward<br>2: Reverse | 0 | - |  |
| <b>06-33</b> | Auto_ Run Mode Running<br>Direction 1  |                                     | 0 | - |  |
| <b>06-34</b> | Auto_ Run Mode Running<br>Direction 2  |                                     | 0 | - |  |
| <b>06-35</b> | Auto_ Run Mode Running<br>Direction 3  |                                     | 0 | - |  |
| <b>06-36</b> | Auto_ Run Mode Running<br>Direction 4  |                                     | 0 | - |  |
| <b>06-37</b> | Auto_ Run Mode Running<br>Direction 5  |                                     | 0 | - |  |
| <b>06-38</b> | Auto_ Run Mode Running<br>Direction 6  |                                     | 0 | - |  |
| <b>06-39</b> | Auto_ Run Mode Running<br>Direction 7  |                                     | 0 | - |  |
| <b>06-40</b> | Auto_ Run Mode Running<br>Direction 8  |                                     | 0 | - |  |
| <b>06-41</b> | Auto_ Run Mode Running<br>Direction 9  |                                     | 0 | - |  |
| <b>06-42</b> | Auto_ Run Mode Running<br>Direction10  |                                     | 0 | - |  |
| <b>06-43</b> | Auto_ Run Mode Running<br>Direction 11 |                                     | 0 | - |  |
| <b>06-44</b> | Auto_ Run Mode Running<br>Direction12  |                                     | 0 | - |  |
| <b>06-45</b> | Auto_ Run Mode Running<br>Direction13  |                                     | 0 | - |  |
| <b>06-46</b> | Auto_ Run Mode Running<br>Direction 14 |                                     | 0 | - |  |
| <b>06-47</b> | Auto_ Run Mode Running<br>Direction 15 |                                     | 0 | - |  |

※Frequency of the step 0 is set by parameter 05-01, keypad frequency.

| <b>Group 07: Start/Stop Parameters</b> |  |   |                        |             |             |
|--|--|---|------------------------|-------------|-------------|
| <b>No.</b>                             | <b>Description</b>                           | <b>Range</b>  | <b>Factory Setting</b> | <b>Unit</b> | <b>Note</b> |
| <b>07-00</b>                           | Momentary Power Loss and Restart             | 0: Momentary Power Loss and Restart Disable<br>1: Momentary Power Loss and Restart Enable     | 0                      | -           |             |
| <b>07-01</b>                           | Auto Restart Delay Time                      | 0.0~800.0   | 0.0                    | Sec         |             |
| <b>07-02</b>                           | Number of Auto Restart Attempts              | 0~10  | 0                      | -           |             |
| <b>07-03</b>                           | Reset Mode Setting                           | 0: Enable Reset Only when Run Command is Off<br>1: Enable Reset when Run Command is On or Off | 0                      | -           |             |
| <b>07-04</b>                           | Direct Running on Power Up                   | 0: Enable Direct run on power up<br>1: Disable Direct run on power up                         | 1                      | -           |             |
| <b>07-05</b>                           | Delay-ON Timer                               | 1.0~300.0   | 1.0                    | Sec         |             |
| <b>07-06</b>                           | DC Injection Brake Start Frequency           | 0.10 ~ 10.00  | 1.5                    | Hz          |             |
| <b>07-07</b>                           | DC Injection Brake Level (Current Mode)      | 0.0 ~ 150.0   | 50.0                   | %           |             |
| <b>07-08</b>                           | DC Injection Brake Time                      | 0.0 ~ 25.5  | 0.5                    | Sec         |             |
| <b>07-09</b>                           | Stopping Method                              | 0: Deceleration to stop<br>1: Coast to stop   | 0                      | -           |             |
| <b>07-10</b>                           | Starting Methods                             | 0: Normal Start 1: Speed Search   | 0                      | -           |             |
| <b>07-11</b>                           | Starting method for auto restart after fault | 0: Speed Search 1: Normal start   | 0                      | -           |             |
| <b>07-12</b>                           | Power Loss Ride Through Time                 | 0.0 ~ 2.0   | 0.5                    | Sec         |             |
| <b>07-13</b>                           | Main Circuit Low Voltage Detection Level     | 150.0~210.0 300.0~420.0   | 190.0/380.0            | Vac         |             |
| <b>07-14</b>                           | Kinetic Energy Back-up Deceleration Time     | 0.0~25.0: KEB Deceleration Time   | 0.0                    | Sec         |             |
| <b>07-15</b>                           | DC Injection Brake Mode                      | 0 : Current Mode 1 : Voltage Mode   | 1                      | -           | *6          |
| <b>07-16</b>                           | DC Injection Brake Level (Voltage Mode)      | 0.0~10.0  | 4.0                    | %           | *6          |

| Group 08: Protection Parameters                                       |   |  |                 |                |      |
|---|---|--|-----------------|----------------|------|
| No.   | Description   | Range  | Factory Setting | Unit           | Note |
| 08-00   | Trip Prevention Selection                           | xxxx0: Enable Trip Prevention During Acceleration<br>xxxx1: Disable Trip Prevention During Acceleration<br>xxx0x: Enable Trip Prevention During Deceleration<br>xxx1x: Disable Trip Prevention During Deceleration<br>xx0xx: Enable Trip Prevention in Run Mode<br>xx1xx: Disable Trip Prevention in Run Mode<br>x0xxx: Enable Over Voltage Prevention in Run Mode<br>x1xxx: Disable Over Voltage Prevention in Run Mode | 01000           | -              | *5   |
| 08-01   | Trip Prevention Level During Acceleration (%)       | 50 ~ 200   | 200             | % <sup>1</sup> |      |
| 08-02   | Trip Prevention Level During Deceleration (%)       | 50 ~ 200   | 200             |                |      |
| 08-03   | Trip Prevention Level in Run Mode (%)               | 50 ~ 200   | 200             |                |      |
| 08-04   | Over Voltage Prevention Level in Run Mode           | 350.0~390.0/700.0~780.0  | 380.0/760.0     | VDC            |      |
| 08-05   | Electronic Motor Overload Protection Operation Mode | 0: Disable<br>1: Enable  | 1               | -              | *7   |
| 08-06   | Operation After Overload Protection is Activated    | 0: Coast-to-Stop After Overload Protection is Activated<br>1: Drive Will Not Trip when Overload Protection is Activated (OL1)  | 0               | -              |      |
| 08-07   | Over Heat Protection (cooling fan control)          | 0: Auto (Depends on temp.)<br>1: Operate while in RUN Mode<br>2: Always Run<br>3: Disabled   | 1               | -              |      |
| 08-08   | AVR Function (Auto Voltage Regulation)              | 0: AVR Function is enabled   | 4               | -              | *5   |
|   |   | 1: AVR Function is disabled  |                 |                |      |
|   |   | 2: AVR Function is disabled for Stop   |                 |                |      |
|   |   | 3: AVR Function is disabled for Deceleration.  |                 |                |      |
|   |   | 4: AVR Function is disabled for Stop and Deceleration.   |                 |                |      |
| 5: When VDC>360V, AVR Function is disabled for Stop and Deceleration. |   |  |                 |                |      |
| 08-09   | Input Phase Loss Protection                         | 0: Disable<br>1: Enable  | 0               | -              |      |
| 08-10   | Output Phase Loss Protection                        | 0: Disable   | 0               | -              |      |
|   |   | 1: Enable  |                 |                |      |
| 08-11   | Motor Type Selection                                | 0: Overload protection (Standard Motor)  | 0               | -              |      |
|   |   | 1: Overload protection (Inverter Duty Motor)   |                 |                |      |
| 08-12   | Motor Overload Protection Curve                     | 0: Motor Overload Protection for General loads (OL=103 %) (150% for 1 Minutes)   | 0               | -              |      |
|   |   | 1: Motor Over load Protection for HVAC (Fan & Pump) (OL=113%) (123% for 1 Minutes).  |                 |                |      |
| 08-13   | Over Torque Detection Control                       | 0: Over Torque Detection Disabled  | 0               | -              |      |
|   |   | 1: Detected After the Setting Frequency  |                 |                |      |
|   |   | 2: Detected When Running   |                 |                |      |

<sup>1</sup> Base on the percentage of inverter rated current.

| Group 08: Protection Parameters |                               |  |                 |      |      |
|---------------------------------|-------------------------------|--|-----------------|------|------|
| No.                             | Description                   | Range  | Factory Setting | Unit | Note |
| 08-14                           | Over torque protection action | 0: Stop Output After Over Torque Detection (Free Run to Stop)      | 0               | -    |      |
|                                 |                               | 1: Continue Running After Over Torque Detection (Display only OL3) |                 |      |      |
| 08-15                           | Over Torque Detection Level   | 30~300   | 160             | -    |      |
| 08-16                           | Over Torque Detection Time    | 0.0~25.0   | 0.1             | -    |      |
| 08-17                           | Fire Mode                     | 0: Disable   | 0               | -    | *5   |
|                                 |                               | 1: Enable  |                 |      |      |
| 08-18                           | Ground Fault Detection        | 0: Disable   | 0               |      | *7   |
|                                 |                               | 1: Enable  |                 |      |      |

**Notes:** Fire mode function

1. Before the firmware rev. 1.1, the fire mode is enabled when parameter 08-17 = 1
2. After the firmware 1.1, the firemode is enabled when any of parameters 03-00~03-05 is set to a value of 28
3. The keypad display will indicate FIRE
4. In fire mode the inverter will run at full speed
5. Parameter 08-18 is only displayed in the frame 3, 4 models

| Group 09: Communication Parameters |  |   |                 |      |      |
|------------------------------------|--|---|-----------------|------|------|
| No.                                | Description                                | Range   | Factory Setting | Unit | Note |
| 09-00                              | Assigned Communication Station Number      | 1 ~ 32  | 1               | -    | *2*3 |
| 09-01                              | RTU/ASCII Code Selection                   | 0:RTU Code<br>1:ASCII Code  | 0               | -    | *2*3 |
| 09-02                              | Baud Rate Setting (bps)                    | 0:4800<br>1:9600<br>2:19200<br>3:38400  | 2               | bps  | *2*3 |
| 09-03                              | Stop Bit Selection                         | 0:1 Stop Bit<br>1:2 Stop Bits   | 0               | -    | *2*3 |
| 09-04                              | Parity Selection                           | 0:Without Parity<br>1:With Even Parity<br>2:With Odd Parity   | 0               | -    | *2*3 |
| 09-05                              | Data Format Selection                      | 0: 8-Bits Data<br>1: 7-Bits Data  | 0               | -    | *2*3 |
| 09-06                              | Communication Time-Out Detection Time      | 0.0 ~ 25.5  | 0.0             | Sec  |      |
| 09-07                              | Communication Time Out Operation Selection | 0:Deceleration to Stop<br>(00-15: Deceleration Time 1)<br>1:Coast to Stop<br>2:Deceleration to Stop<br>(00-17: Deceleration Time 2)<br>3:Continue Operating | 0               | -    |      |
| 09-08                              | Comm. Fault Tolerance Count.               | 1 ~ 20  | 3               |      |      |
| 09-09                              | Wait Time of Inverter Transmission         | 5 ~ 65  | 5               | ms   |      |

| Group 10: PID Parameters |   |   |                 |      |      |
|--------------------------|---|---|-----------------|------|------|
| No.                      | Description   | Range   | Factory Setting | Unit | Note |
| 10-00                    | PID Target Value Selection<br>(When 00-05\00-06=6 This Function is Enabled) | 0: Potentiometer on Keypad<br>1: Analog Signal Input. (AI1)<br>2: Analog Signal Input. (AI2)<br>3: Frequency Set by Communication<br>4: Keypad Frequency Parameter<br>10-02   | 1               | -    | *1   |
| 10-01                    | PID Feedback Value Selection  | 0: Potentiometer on Keypad<br>1: Analog Signal Input. (AI1)<br>2: Analog Signal Input. (AI2)<br>3: Frequency Set by Communication   | 2               | -    | *1   |
| 10-02                    | PID Target(Keypad Input)  | 0.0~100.0   | 50.0            | %    | *1   |
| 10-03                    | PID Mode Selection  | 0: Disable<br>1: Deviation D Control.<br>FWD Characteristic.<br>2: Feedback D Control<br>FWD Characteristic.<br>3: Deviation D Control<br>Reverse Characteristic.<br>4: Feedback D Control<br>Reverse Characteristic. | 0               | -    |      |
| 10-04                    | Feedback Gain Coefficient   | 0.00 ~ 10.00  | 1.00            |      | *1   |
| 10-05                    | Proportional Gain   | 0.0 ~ 10.0  | 1.0             |      | *1   |
| 10-06                    | Integral Time   | 0.0 ~ 100.0   | 10.0            | Sec  | *1   |
| 10-07                    | Derivative Time   | 0.00 ~ 10.00  | 0.00            | Sec  | *1   |
| 10-08                    | PID Offset  | 0: Positive<br>1: Negative  | 0               | -    | *1   |
| 10-09                    | PID Offset Adjust   | 0 ~ 109   | 0               | %    | *1   |
| 10-10                    | PID Output Lag Filter Time  | 0.0 ~ 2.5   | 0.0             | Sec  | *1   |
| 10-11                    | Feedback Loss Detection Mode  | 0: Disable<br>1: Enable - Drive Continues to Operate After Feedback Loss<br>2: Enable - Drive "STOPS" After Feedback Loss   | 0               | -    |      |
| 10-12                    | Feedback Loss Detection Level   | 0 ~ 100   | 0               | %    |      |
| 10-13                    | Feedback Loss Detection Delay Time  | 0.0 ~25.5   | 1.0             | Sec  |      |
| 10-14                    | Integration Limit Value   | 0 ~ 109   | 100             | %    | *1   |
| 10-15                    | Integral Value Resets to Zero when Feedback Signal Equals the Target Value  | 0: Disable<br>1: After 1 Second<br>30: After 30 Second (0~30)   | 0               | -    |      |
| 10-16                    | Allowable Integral value Error Margin (Units, 1 Unit = 1/8192)              | 0 ~ 100   | 0               | -    |      |
| 10-17                    | PID Sleep Frequency Level   | 0.00~650.00   | 0.00            | Hz   |      |
| 10-18                    | PID Sleep Function Delay Time   | 0.0 ~25.5   | 0.0             | Sec  |      |
| 10-19                    | PID Wake up frequency Level   | 0.00 ~ 650.00   | 0.00            | Hz   |      |
| 10-20                    | PID Wake up function Delay Time   | 0.0 ~ 25.5  | 0.0             | Sec  |      |
| 10-21                    | Max PID Feedback Setting Level  | 0 ~999  | 100             | -    | *1   |

| Group 10: PID Parameters |                                |        |                 |      |      |
|--------------------------|--------------------------------|--------|-----------------|------|------|
| No.                      | Description                    | Range  | Factory Setting | Unit | Note |
| 10-22                    | Min PID Feedback Setting Level | 0 ~999 | 0               | -    | *1   |

| Group 11: Auxiliary Parameters |   |  |                 |      |      |
|--------------------------------|---|--|-----------------|------|------|
| No.                            | Description                                     | Range  | Factory Setting | unit | Note |
| 11-00                          | Reverse Operation Control                       | 0: Reverse Command is Enabled<br>1: Reverse Command is Disabled  | 0               | -    |      |
| 11-01                          | Carrier Frequency (kHz)                         | 1~16   | 5               | KHz  |      |
| 11-02                          | Carrier Mode Selection                          | 0: Mode0, 3Phase PWM modulation<br>1: Mode1, 2Phase PWM modulation<br>2: Mode2, 2Phase Random PWM Modulation | 0               | -    |      |
| 11-03                          | Carrier Frequency Reduction by Temperature Rise | 0:Disable<br>1:Enable  | 0               | -    |      |
| 11-04                          | S-Curve Acc 1                                   | 0.0 ~ 4.0  | 0.2             | Sec  |      |
| 11-05                          | S-Curve Acc 2                                   | 0.0 ~ 4.0  | 0.2             | Sec  |      |
| 11-06                          | S-Curve Dec 3                                   | 0.0 ~ 4.0  | 0.2             | Sec  |      |
| 11-07                          | S-Curve Dec 4                                   | 0.0 ~ 4.0  | 0.2             | Sec  |      |
| 11-08                          | Skip Frequency 1                                | 0.00 ~ 650.00  | 0.00            | Hz   | *1   |
| 11-09                          | Skip Frequency 2                                | 0.00 ~ 650.00  | 0.00            | Hz   | *1   |
| 11-10                          | Skip Frequency 3                                | 0.00 ~ 650.00  | 0.00            | Hz   | *1   |
| 11-11                          | Skip Frequency Range Bandwith ( $\pm$ )         | 0.00 ~ 30.00   | 0.00            | Hz   | *1   |
| 11-12                          | Energy Saving Gain (V/F Mode)                   | 0 ~ 100  | 80              | %    |      |
| 11-13                          | Regeneration Prevention Function                | 0:Disable  | 0               | -    |      |
|                                |   | 1:Enable   |                 |      |      |
|                                |   | 2:Enable (only during constant speed)  |                 |      |      |
| 11-14                          | Regeneration Prevention Voltage Level           | 200V:300.0~400.0   | 380.0           | V    |      |
|                                |   | 400V:600.0~800.0   | 760.0           |      |      |
| 11-15                          | Regeneration Prevention Frequency Limit         | 0.00 ~ 15.00   | 3.00            | Hz   |      |
| 11-16                          | Regeneration Prevention Voltage Gain            | 0~200  | 100             | %    |      |
| 11-17                          | Regeneration Prevention Frequency Gain          | 0~200  | 100             | %    |      |

| Group 12: Monitoring Parameters                 |   |  |                 |      |      |
|---|---|--|-----------------|------|------|
| No.   | Description   | Range  | Factory Setting | Unit | Note |
| 12-00   | Extended Display Mode   | 00000~88888<br>Each digit can be set from 0 to 8 as listed below.  | 00000           | -    | *1   |
|   |   | 0: Default Display<br>(Frequency and Parameters)   |                 |      |      |
|   |   | 1: Output Current  |                 |      |      |
|   |   | 2: Output Voltage  |                 |      |      |
|   |   | 3: DC Voltage  |                 |      |      |
|   |   | 4: Temperature   |                 |      |      |
|   |   | 5: PID Feedback  |                 |      |      |
|   |   | 6: Analog Signal Input. (AI1)  |                 |      |      |
| 7: Analog Signal Input. (AI2)                   |   |  |                 |      |      |
| 8: Count Status                                 |   |  |                 |      |      |
| 12-01   | PID Feedback Display Format                                     | 0: Integer (xxx)   | 0               | -    | *1   |
|   |   | 1: One Decimal Place (xx.x)  |                 |      |      |
|   |   | 2: Two Decimal Places (x.xx)   |                 |      |      |
| 12-02   | PID Feedback Display Unit Setting                               | 0: xxx--   | 0               | -    | *1   |
|   |   | 1: xxxpb (pressure)  |                 |      |      |
|   |   | 2: xxxfl (flow)  |                 |      |      |
| 12-03   | Custom Units (Line Speed) Value                                 | 0~65535  | 1500/1800       | RPM  | *1   |
| 12-04   | Custom Units (Line Speed) Display Mode                          | 0: Drive Output Frequency is Displayed   | 0               | -    | *1   |
|   |   | 1: Line Speed. Integer. (xxxxx)  |                 |      |      |
|   |   | 2: Line Speed. One Decimal Place.<br>(xxxx.x)  |                 |      |      |
|   |   | 3: Line Speed. Two Decimal Places<br>(xxx.xx)  |                 |      |      |
| 4: Line Speed. Three Decimal Places<br>(xx.xxx) |   |  |                 |      |      |
| 12-05   | Inputs and Output Logic Status Display<br>( S1~S6, RY1 and RY2) |  | -               | -    | *4   |
| 12-06   | Alarm Selections for Inverter Components Life Expectancy        | xxxx0: Life Alarm of Inrush Current Suppression Circuit is Invalid<br>xxxx1: Life Alarm of Inrush Current Suppression Circuit is Valid | 00000           | -    | *1   |
|   |   | xxx0x: Life Alarm of Control Circuit Capacitors is Invalid<br>xxx1x: Life Alarm of Control Circuit Capacitors is Valid                 |                 |      |      |
|   |   | xx0xx: Life Alarm of Main Circuit Capacitors is Invalid<br>xx1xx: Life Alarm of Main Circuit Capacitors is Valid                       |                 |      |      |
|   |   |  |                 |      |      |
| 12-07   | Detect Main Circuit Capacitors                                  | Reserved   |                 |      |      |

| Group 12: Monitoring Parameters |   |       |                 |      |      |
|---------------------------------|---|-------|-----------------|------|------|
| No.                             | Description                                   | Range | Factory Setting | Unit | Note |
| 12-08                           | Display of Inrush Current Suppression Circuit | 0~100 | 100             | %    |      |
| 12-09                           | Display of Control Circuit Capacitors         | 0~100 | 100             | %    |      |
| 12-10                           | Reserved                                      |       |                 |      |      |
| 12-11                           | Output Current when Fault Appeared            | ----  | 0               | A    |      |
| 12-12                           | Output Voltage when Fault Appeared            | ----  | 0               | Vac  |      |
| 12-13                           | Output Frequency when Fault Appeared          | ----  | 0               | Hz   |      |
| 12-14                           | DC Bus Voltage when Fault Appeared            | ----  | 0               | Vac  |      |
| 12-15                           | Frequency Command when Fault Appeared         | ----  | 0               | Hz   |      |

| Group 13: Maintenance Parameters |  |   |                 |      |      |
|----------------------------------|--|---|-----------------|------|------|
| No.                              | Description                              | Range   | Factory Setting | unit | Note |
| 13-00                            | Drive Horsepower Code                    | ----  | -               | -    | *3   |
| 13-01                            | Software Version                         | ----  | -               | -    | *3*4 |
| 13-02                            | Fault Log (Latest 3 Faults)              | ----  | -               | -    | *3*4 |
| 13-03                            | Accumulated Inverter Operation Time 1    | 0~23  | -               | hour | *3   |
| 13-04                            | Accumulated Inverter Operation Time 2    | 0~65535   | ----            | day  | *3   |
| 13-05                            | Accumulated Inverter Operation Time Mode | 0: Power On time<br>1: Operation time   | 0               | -    | *3   |
| 13-06                            | Parameter Lock                           | 0:Enable all Functions<br>1:Preset Speeds from 05-01 to 05-15 Can't be Changed<br>2:All Functions Can't be Changed Except for Preset speeds from 05-01 to 05-15<br>3:Disable All Functions Except 13-06 | 0               | -    |      |
| 13-07                            | Parameter Lock Code                      | 00000~65535   | 00000           | -    |      |
| 13-08                            | Reset Drive to Factory Settings          | 1150:Reset to Factory Setting(50Hz System)<br>1160:Reset to Factory Setting(60 Hz System)<br>1112:Reset PLC   | 00000           | -    |      |



| Group 14: PLC Parameters |                               |         |                 |      |      |
|--------------------------|-------------------------------|---------|-----------------|------|------|
| No.                      | Description                   | Range   | Factory Setting | unit | Note |
| 14-00                    | Setting Value1 of T1          | 0~9999  | 0               | -    |      |
| 14-01                    | Setting Value1 of T1 (mode 7) | 0~9999  | 0               | -    |      |
| 14-02                    | Setting Value1 of T2          | 0~9999  | 0               | -    |      |
| 14-03                    | Setting Value1 of T2 (mode 7) | 0~9999  | 0               | -    |      |
| 14-04                    | Setting Value1 of T3          | 0~9999  | 0               | -    |      |
| 14-05                    | Setting Value1 of T3 (mode 7) | 0~9999  | 0               | -    |      |
| 14-06                    | Setting Value1 of T4          | 0~9999  | 0               | -    |      |
| 14-07                    | Setting Value1 of T4 (mode 7) | 0~9999  | 0               | -    |      |
| 14-08                    | Setting Value1 of T5          | 0~9999  | 0               | -    |      |
| 14-09                    | Setting Value1 of T5 (mode 7) | 0~9999  | 0               | -    |      |
| 14-10                    | Setting Value1 of T6          | 0~9999  | 0               | -    |      |
| 14-11                    | Setting Value1 of T6 (mode 7) | 0~9999  | 0               | -    |      |
| 14-12                    | Setting Value1 of T7          | 0~9999  | 0               | -    |      |
| 14-13                    | Setting Value1 of T7 (mode 7) | 0~9999  | 0               | -    |      |
| 14-14                    | Setting Value1 of T8          | 0~9999  | 0               | -    |      |
| 14-15                    | Setting Value1 of T8 (mode 7) | 0~9999  | 0               | -    |      |
| 14-16                    | Setting Value1 of C1          | 0~65535 | 0               | -    |      |
| 14-17                    | Setting Value1 of C2          | 0~65535 | 0               | -    |      |
| 14-18                    | Setting Value1 of C3          | 0~65535 | 0               | -    |      |
| 14-19                    | Setting Value1 of C4          | 0~65535 | 0               | -    |      |
| 14-20                    | Setting Value1 of C5          | 0~65535 | 0               | -    |      |
| 14-21                    | Setting Value1 of C6          | 0~65535 | 0               | -    |      |
| 14-22                    | Setting Value1 of C7          | 0~65535 | 0               | -    |      |
| 14-23                    | Setting Value1 of C8          | 0~65535 | 0               | -    |      |
| 14-24                    | Setting Value1 of AS1         | 0~65535 | 0               | -    |      |
| 14-25                    | Setting Value2 of AS1         | 0~65535 | 0               | -    |      |
| 14-26                    | Setting Value3 of AS1         | 0~65535 | 0               | -    |      |
| 14-27                    | Setting Value1 of AS2         | 0~65535 | 0               | -    |      |
| 14-28                    | Setting Value2 of AS2         | 0~65535 | 0               | -    |      |
| 14-29                    | Setting Value3 of AS2         | 0~65535 | 0               | -    |      |
| 14-30                    | Setting Value1 of AS3         | 0~65535 | 0               | -    |      |
| 14-31                    | Setting Value2 of AS3         | 0~65535 | 0               | -    |      |
| 14-32                    | Setting Value3 of AS3         | 0~65535 | 0               | -    |      |
| 14-33                    | Setting Value1 of AS4         | 0~65535 | 0               | -    |      |
| 14-34                    | Setting Value2 of AS4         | 0~65535 | 0               | -    |      |
| 14-35                    | Setting Value3 of AS4         | 0~65535 | 0               | -    |      |
| 14-36                    | Setting Value1 of MD1         | 0~65535 | 1               | -    |      |
| 14-37                    | Setting Value2 of MD1         | 0~65535 | 1               | -    |      |
| 14-38                    | Setting Value3 of MD1         | 1~65535 | 1               | -    |      |
| 14-39                    | Setting Value1 of MD2         | 0~65535 | 1               | -    |      |
| 14-40                    | Setting Value2 of MD2         | 0~65535 | 1               | -    |      |
| 14-41                    | Setting Value3 of MD2         | 1~65535 | 1               | -    |      |
| 14-42                    | Setting Value1 of MD3         | 0~65535 | 1               | -    |      |
| 14-43                    | Setting Value2 of MD3         | 0~65535 | 1               | -    |      |
| 14-44                    | Setting Value3 of MD3         | 1~65535 | 1               | -    |      |

|       |                       |         |   |   |  |
|-------|-----------------------|---------|---|---|--|
| 14-45 | Setting Value1 of MD4 | 0~65535 | 1 | - |  |
| 14-46 | Setting Value2 of MD4 | 0~65535 | 1 |   |  |
| 14-47 | Setting Value3 of MD4 | 1~65535 | 1 | - |  |

| Group 15: PLC Monitoring Parameters |                             |         |                 |      |      |
|-------------------------------------|-----------------------------|---------|-----------------|------|------|
| No.                                 | Description                 | Range   | Factory Setting | unit | Note |
| 15-00                               | Current Value of T1         | 0~9999  | 0               | -    |      |
| 15-01                               | Current Value of T1(mode 7) | 0~9999  | 0               | -    |      |
| 15-02                               | Current Value of T2         | 0~9999  | 0               | -    |      |
| 15-03                               | Current Value of T2(mode 7) | 0~9999  | 0               | -    |      |
| 15-04                               | Current Value of T3         | 0~9999  | 0               | -    |      |
| 15-05                               | Current Value of T3(mode 7) | 0~9999  | 0               | -    |      |
| 15-06                               | Current Value of T4         | 0~9999  | 0               | -    |      |
| 15-07                               | Current Value of T4(mode 7) | 0~9999  | 0               | -    |      |
| 15-08                               | Current Value of T5         | 0~9999  | 0               | -    |      |
| 15-09                               | Current Value of T5(mode 7) | 0~9999  | 0               | -    |      |
| 15-10                               | Current Value of T6         | 0~9999  | 0               | -    |      |
| 15-11                               | Current Value of T6(mode 7) | 0~9999  | 0               | -    |      |
| 15-12                               | Current Value of T7         | 0~9999  | 0               | -    |      |
| 15-13                               | Current Value of T7(mode 7) | 0~9999  | 0               | -    |      |
| 15-14                               | Current Value of T8         | 0~9999  | 0               | -    |      |
| 15-15                               | Current Value of T8(mode 7) | 0~9999  | 0               | -    |      |
| 15-16                               | Current Value of C1         | 0~65535 | 0               | -    |      |
| 15-17                               | Current Value of C2         | 0~65535 | 0               | -    |      |
| 15-18                               | Current Value of C3         | 0~65535 | 0               | -    |      |
| 15-19                               | Current Value of C4         | 0~65535 | 0               | -    |      |
| 15-20                               | Current Value of C5         | 0~65535 | 0               | -    |      |
| 15-21                               | Current Value of C6         | 0~65535 | 0               | -    |      |
| 15-22                               | Current Value of C7         | 0~65535 | 0               | -    |      |
| 15-23                               | Current Value of C8         | 0~65535 | 0               | -    |      |
| 15-24                               | Current Value of AS1        | 0~65535 | 0               | -    |      |
| 15-25                               | Current Value of AS2        | 0~65535 | 0               | -    |      |
| 15-26                               | Current Value of AS3        | 0~65535 | 0               | -    |      |
| 15-27                               | Current Value of AS4        | 0~65535 | 0               | -    |      |
| 15-28                               | Current Value of MD1        | 0~65535 | 0               | -    |      |
| 15-29                               | Current Value of MD2        | 0~65535 | 0               | -    |      |
| 15-30                               | Current Value of MD3        | 0~65535 | 0               | -    |      |
| 15-31                               | Current Value of MD4        | 0~65535 | 0               | -    |      |
| 15-32                               | Current Value of TD         | 0~65535 | 0               | µs   |      |

## 5. Check motor rotation and direction

This test is to be performed solely from the inverter keypad. Apply power to the inverter after all the electrical connections have been made and protective covers have been re-attached. At this point, **DO NOT RUN THE MOTOR**, the keypad should display as shown below in Fig. 5.1 and the speed reference **5.00Hz** should be blinking at the parameter code “05-01”.

**Important: Motor rotation and direction only applies to standard AC motors with a base frequency of 60Hz. For 50Hz or other frequency AC motors please set V/F pattern in group 01 before running the motor.**



Fig 5.1: Keypad (Stopped)

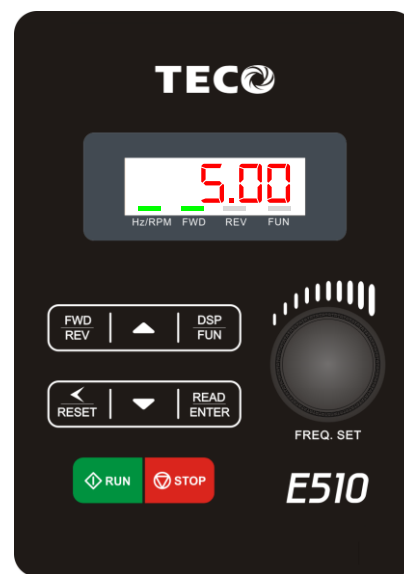


Fig 5.2: Keypad (Running)

Next press the **RUN** key, see Fig 5.2. The motor should now be operating at low speed running in forward (clockwise) direction. Next press **STOP** key to stop the motor.

**If the motor rotation is incorrect, power down the inverter.**

**After the power has been turned OFF, wait at least ten minutes until the charge indicator extinguishes completely before touching any wiring, circuit boards or components.**

Using Safety precaution, and referring to section 3.9 exchange any two of the three output leads to the motor (U/T1, V/T2 and W/T3). After the wiring change, repeat this step and recheck motor direction.

## 6. Speed Reference Command Configuration

The inverter offers users several choices to set the speed reference source. The most commonly used methods are described in the next sections.

Frequency reference command is selected with parameter 00-05.

### 00-05: Main Frequency Command (Frequency Source)

This function sets the frequency command source.

**Setting Range:** 0 to 7

To set parameter 00-05:

- After power-up press the **DSP/FUN** key
- Select **00 Basic Fun**
- Press **READ/ ENTER** key
- Select parameter -05 with the **UP/DOWN ▲** and **▼** keys and press the **READ/ ENTER** key.

In the parameter list move cursor to 00-05 with the **UP/DOWN** keys and press **READ/ ENTER** key to select.

| 00-05 | Main Frequency Command Source Selection   |
|-------|---|
| Range | <p><b>【0】</b> :Up/Down of Keypad<br/> <b>【1】</b> :Potentiometer on Keypad<br/> <b>【2】</b> :External AI1 Analog Signal Input<br/> <b>【3】</b> :External AI2 Analog Signal Input<br/> <b>【4】</b> :External Up/Down Frequency Control<br/> <b>【5】</b> :Communication Setting Frequency<br/> <b>【6】</b> :PID Output Frequency<br/> <b>【7】</b> :Pulse Input</p> |


### 6.1 Reference from Keypad

Speed reference from the keypad is the default setting. Press the **READ/ ENTER** key first and use the </RESET, ▲ and ▼ keys to change the speed reference.




## 6.2 Reference from External Analog Signal (0-10V / 4-20mA)


Analog Reference: 0 – 10 V (Setting 00-05 = 2)

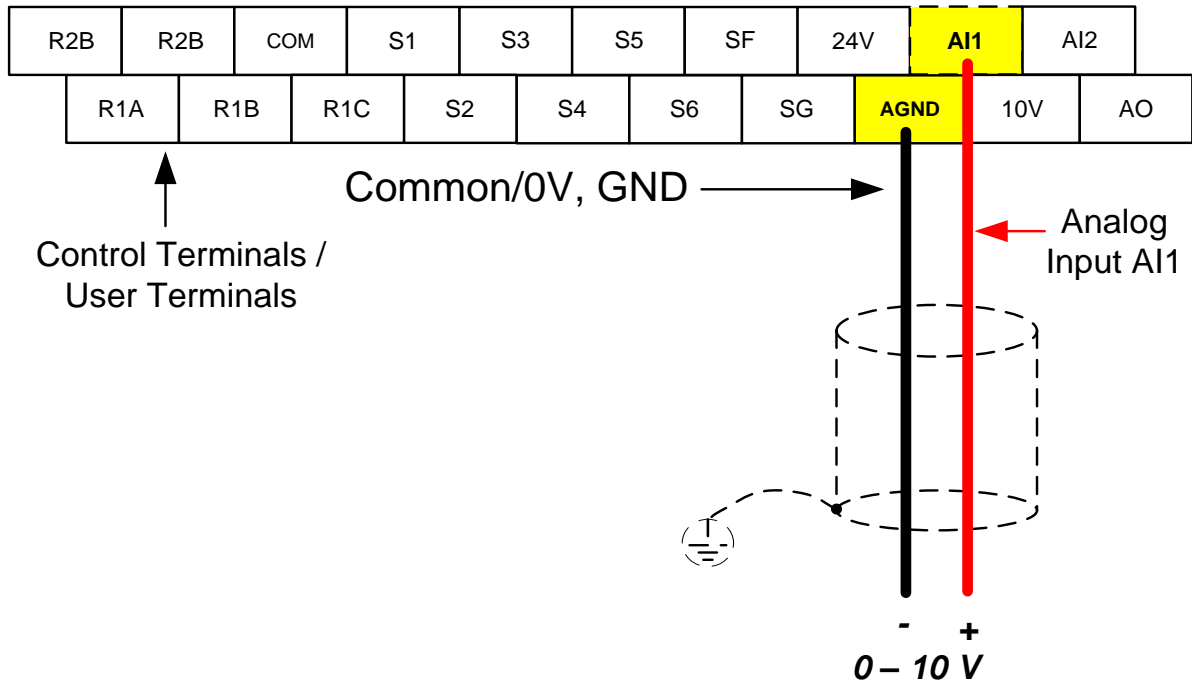


Analog Reference: Potentiometer / Speed Pot (Setting 00-05 = 2)

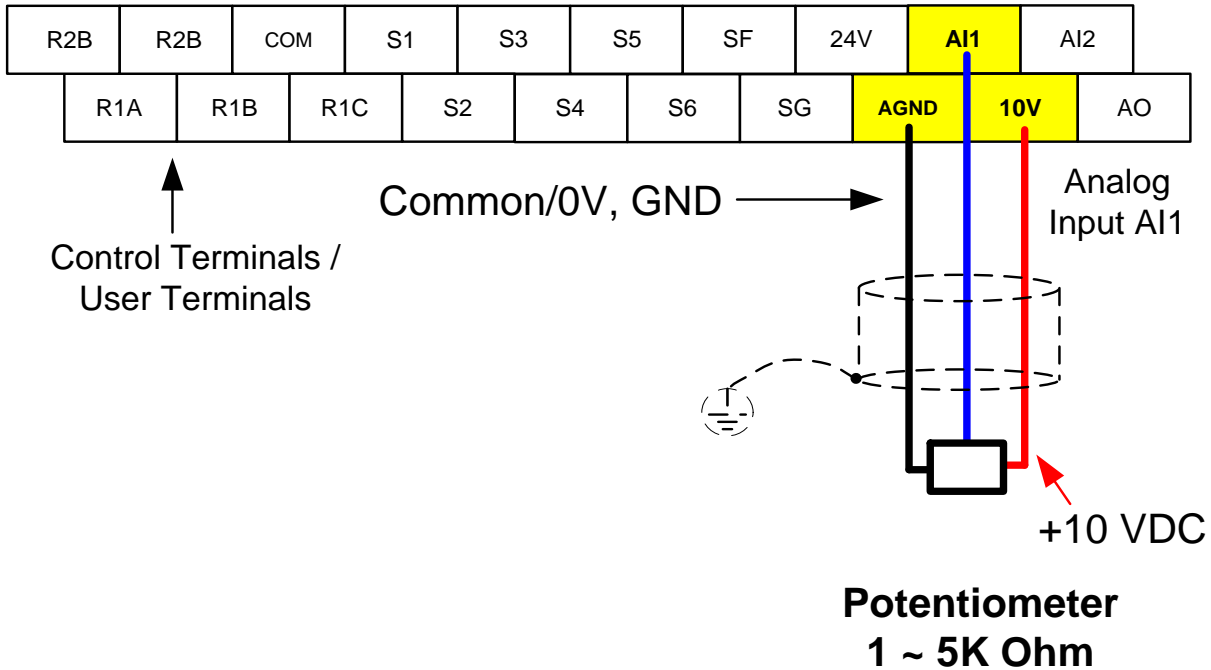

**Analog Reference: 4 – 20mA (Setting 00-05 = 2)**

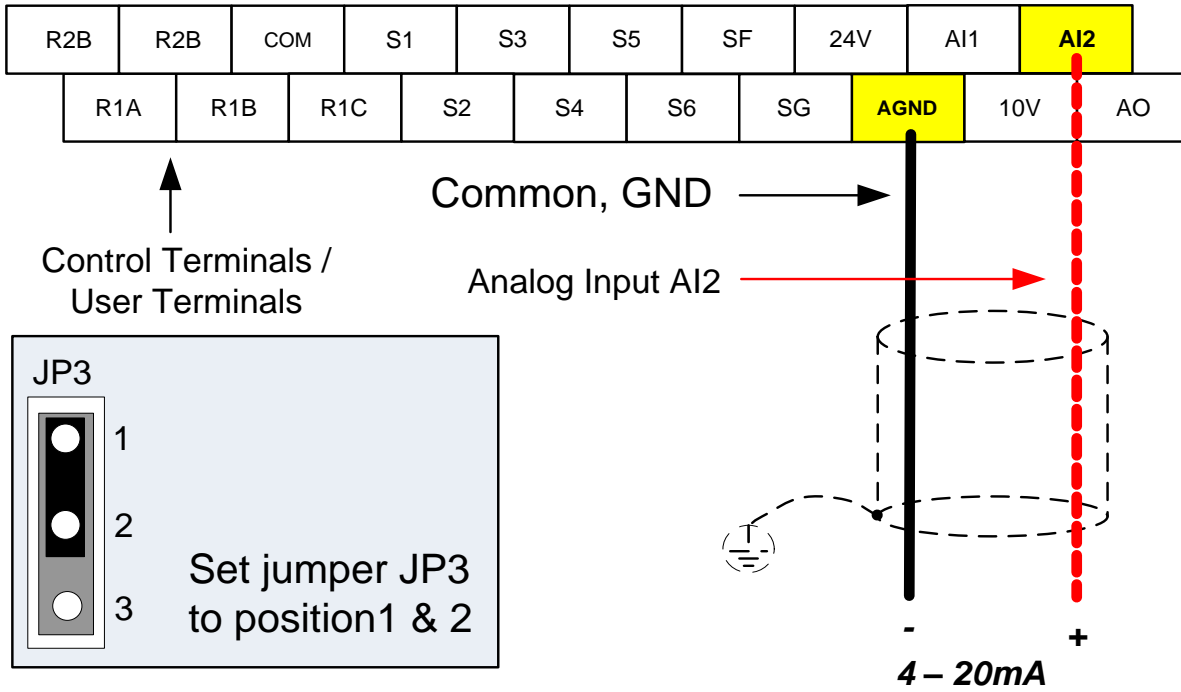

### 6.3 Reference from Serial Communication RS485 (00-05=5)

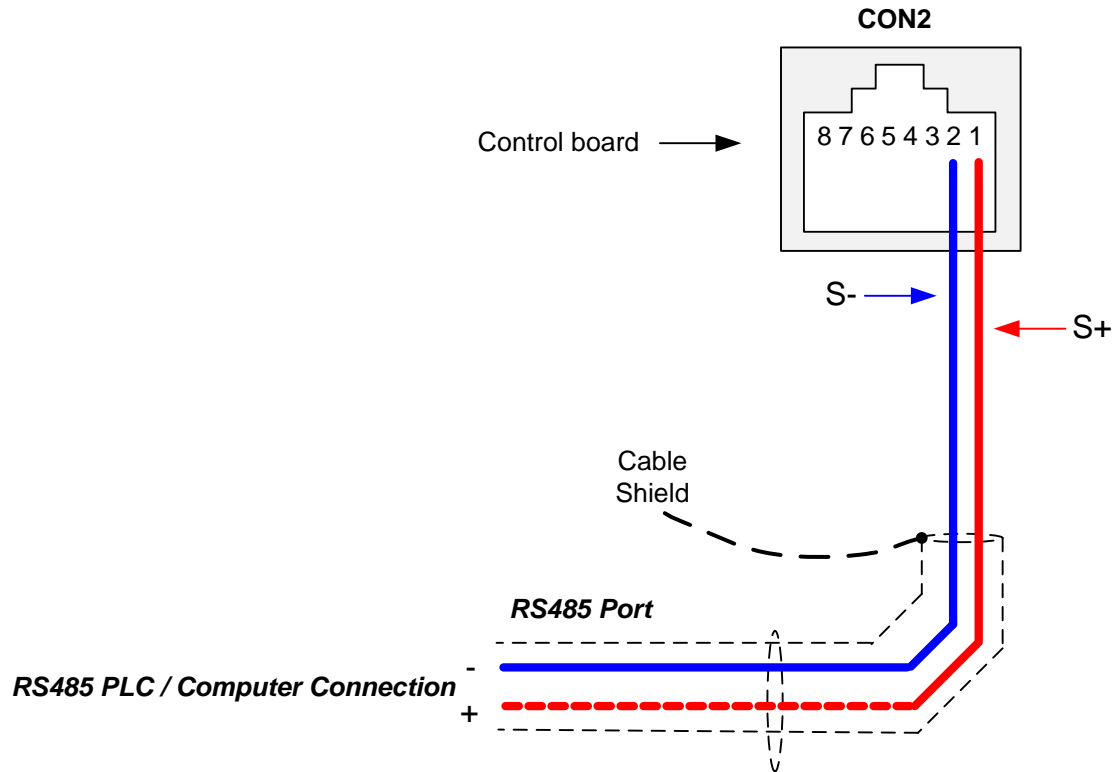

To set the speed reference for the inverter via serial communication parameter 00-05 has be set to “5” for frequency command via serial communication.

**Default Communication Setting is:** Address “1”, 9600 Bits/sec, 1 Start Bit, 1 Stop Bit, and No Parity

The serial communication link function uses RS485 Modbus RTU protocol and allows for:

- 1) Monitoring (data monitoring, function data check).
- 2) Frequency setting.
- 3) Operation command (FWD, REV, and other commands for digital input).
- 4) Write function data.

#### Frequency Reference Command Register

Inverter Frequency Reference Register: 2502 (Hexadecimal) - Bit 0 – Bit 15: 0.00 ~ 650.00 Hz

**Examples:**

**Frequency Reference Command: 10.00 Hz (Inverter Node Address: 01)**

Command String (hexadecimal): 01 06 25 02 03 E8 23 B8

To set the frequency reference to 10.00, a value of '1000' (03E8h) has to be send to the inverter.

**Frequency Reference Command: 30.00 Hz (Inverter Node Address: 01)**

Command String (hexadecimal): 01 06 25 02 0B B8 24 44

To set the frequency reference to 30.00, a value of '3000' (0BB8h) has to be send to the inverter.

**Frequency Reference Command: 60.00 Hz (Inverter Node Address: 01)**


Command String (hexadecimal): 01 06 25 02 17 70 2D 12

To set the frequency reference to 60.00, a value of '6000' (1770h) has to be send to the inverter

**Note:** The last 2 bytes of the command strings consist of a CRC16 checksum, please refer to section 4.5 of the instruction manual for additional information.



## 6.4 Reference from Pulse Input (00-05=7)

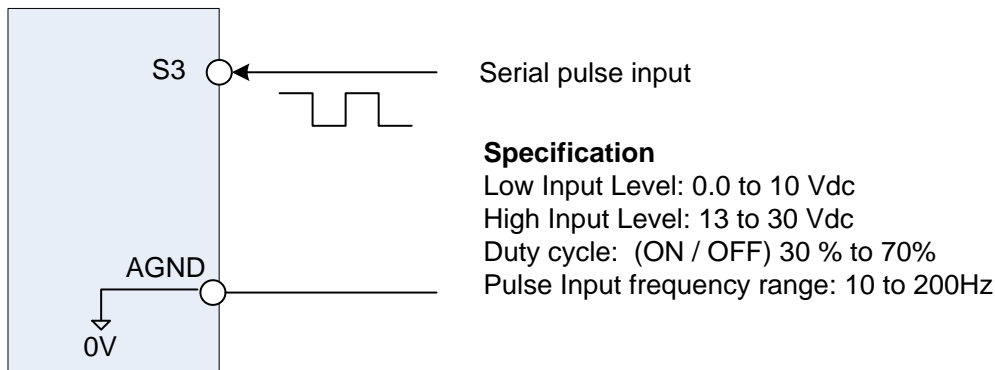

### Set Pulse Input Setup as Frequency Reference

Set parameter 00-05 to 7 and 03-02 to 26 to use the pulse input terminal S3 as the frequency reference source. Next set the pulse frequency (03-27).

When 03-02=26, S3 is used for frequency measurement.

Set the following parameters to use pulse input for speed command:

00-05=7

03-02=26

03-28=1 (adjust if needed)

#### Example 1:

Pulse input frequency is 20Hz, frequency upper limit is 50Hz (00-12=50.00), and 03-28=1.  
Inverter frequency is 20.00Hz

#### Example 2:

Pulse input frequency is 45Hz, frequency upper limit is 50Hz (00-12=50.00), and 03-28=1.  
Inverter frequency is 45.00Hz

#### Example 3:

Pulse input frequency is 55Hz, frequency upper limit is 50Hz (00-12=50.00), and 03-28=1.  
Inverter frequency is 50.00Hz

#### Example 4:

Pulse input frequency is 2000Hz, frequency upper limit is 650Hz (00-12=650.00), and 03-28=0.2.  
Inverter frequency is  $2000 \times 0.2 = 400.00\text{Hz}$

## 6.5 Change Frequency Unit from Hz to rpm

|              |   |
|--------------|---|
| <b>12-03</b> | <b>Custom Units (Line Speed) Display Mode</b> |
| <b>Range</b> | <b>【0~65535】 Rpm</b>                          |

Set motor rated RPM for the inverter to display the actual motor speed based on the output frequency.

Motor synchronous speed =  $120 \times \text{Rated frequency} \div \text{Number of poles}$ .

|               |  |
|---------------|--|
| <b>12- 04</b> | <b>Custom Units (Line Speed) Display Mode</b>  |
| <b>Range</b>  | <b>【0】 :Drive Output Frequency is Displayed</b><br><b>【1】 :Line Speed is Displayed in Integer (xxxxx)</b><br><b>【2】 :Line Speed is Displayed with One Decimal Place (xxxx.x)</b><br><b>【3】 :Line Speed is Displayed with Two Decimal Places (xxx.xx)</b><br><b>【4】 :Line Speed is Displayed with Three Decimal Places (xx.xxx)</b> |

Set parameter 12-04 to a value greater than 0 to display motor speed.

## 7. Operation Method Configuration (Run / Stop)

The inverter offers users several choices to run and stop from different sources. The most commonly used methods are described in the next sections.

Operation command is selected with parameter 00-02.

### 00-02: Run Command Selection

This function sets the frequency command source.

**Setting Range:** 0 to 3

To set parameter 00-01:

- After power-up press the **DSP/FUN** key
- Select **00 Basic Fun**
- Press **DATA/ENTER** key
- Select parameter -01 with the **UP/DOWN ▲** and **▼** keys and press the **DATA/ENTER** key.

In the parameter list move cursor to 00-01 with the **UP/DOWN** keys and press **DATA/ENTER** key to select.

| 00-02 | Run Command Selection   |
|-------|---|
| Range | <b>0:</b> Keypad control<br><b>1:</b> External terminal control<br><b>2:</b> Communication control<br><b>3:</b> PLC |

### 7.1 Run/Stop from the Keypad (00-02=0) – Default Setting

Use the **RUN** key to run the drive in forward direction and the **FWD/REV** key to change the motor direction. (Note: to disable reverse direction set parameter 11-00 to 1)

Press **STOP** key to stop the inverter. (Note: Stop method can be set with parameter 07-09, default is **deceleration to stop**).





## 7.2 Run/Stop from External Switch / Contact or Pushbutton (00-02=1)

Use an external contact or switch to Run and Stop the inverter.

Set parameter 00-04 to 0 for 2-wire operation, multi-function input terminal S1 is set to run operation forward command.

**00-02 Run Command Selection = 1**

### Permanent Switch / Contact

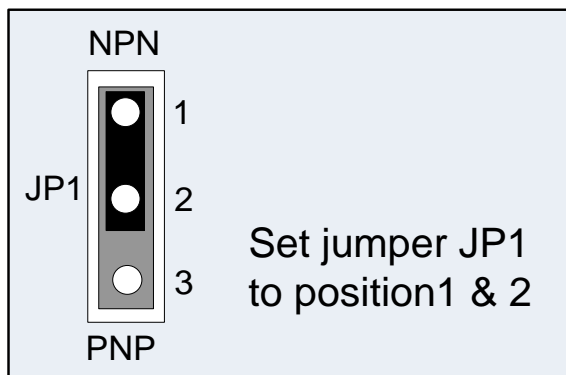
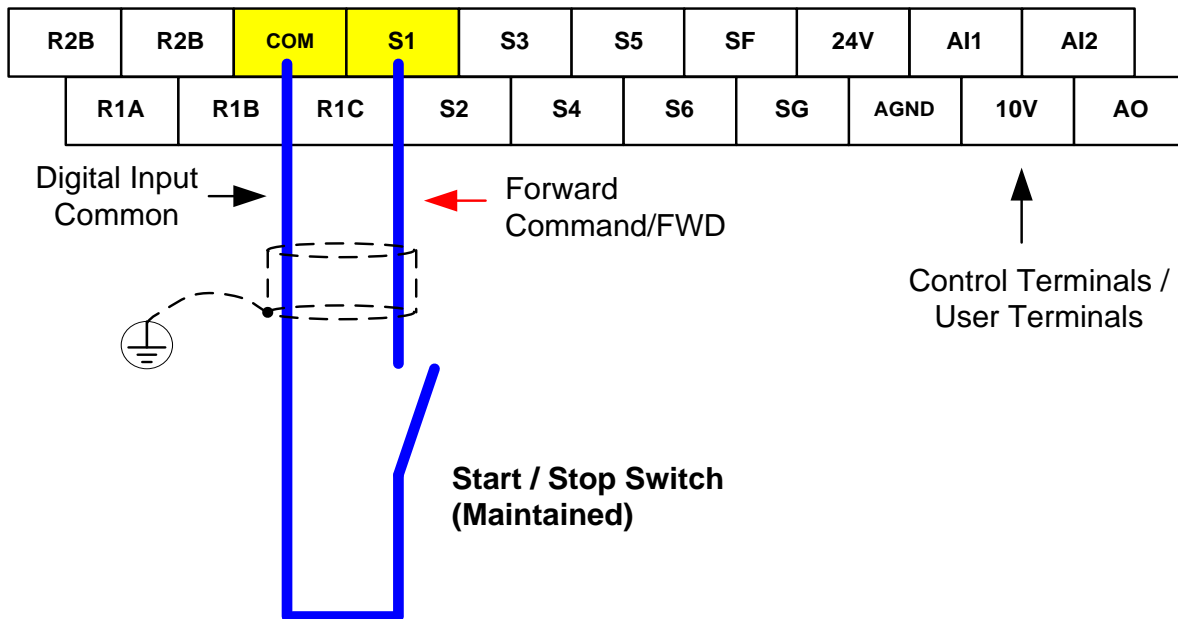


### Momentary Contacts (Push Buttons)

Use push button / momentary switch to Run and Stop the inverter.


Set parameter 00-04 to 2 for 3-wire operation, multi-function input terminal S1 is set to run operation, S2 for stop operation and S3 for forward/reverse command.

#### 00-02 Run Command Selection = 1

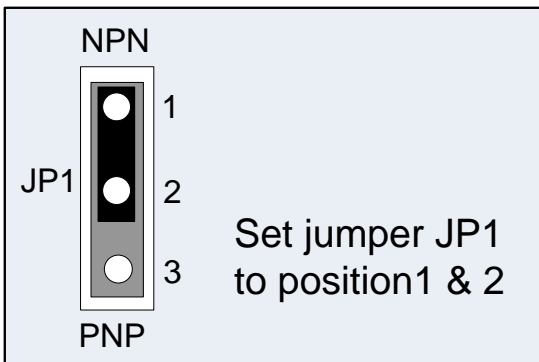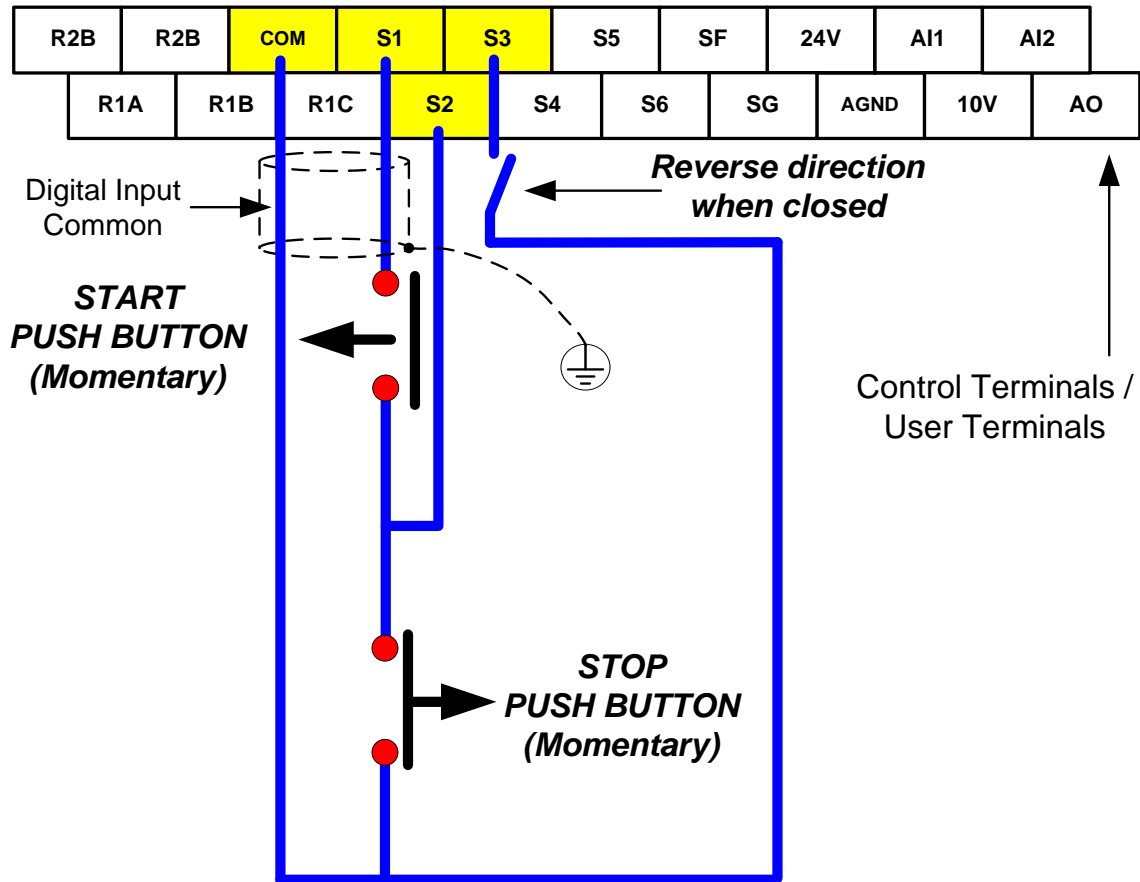

**Note:** Stop mode selection can be set with parameter 07-09, default is **deceleration to stop**.

### 7.3 Run/Stop from Serial Communication RS485 (00-02=2)

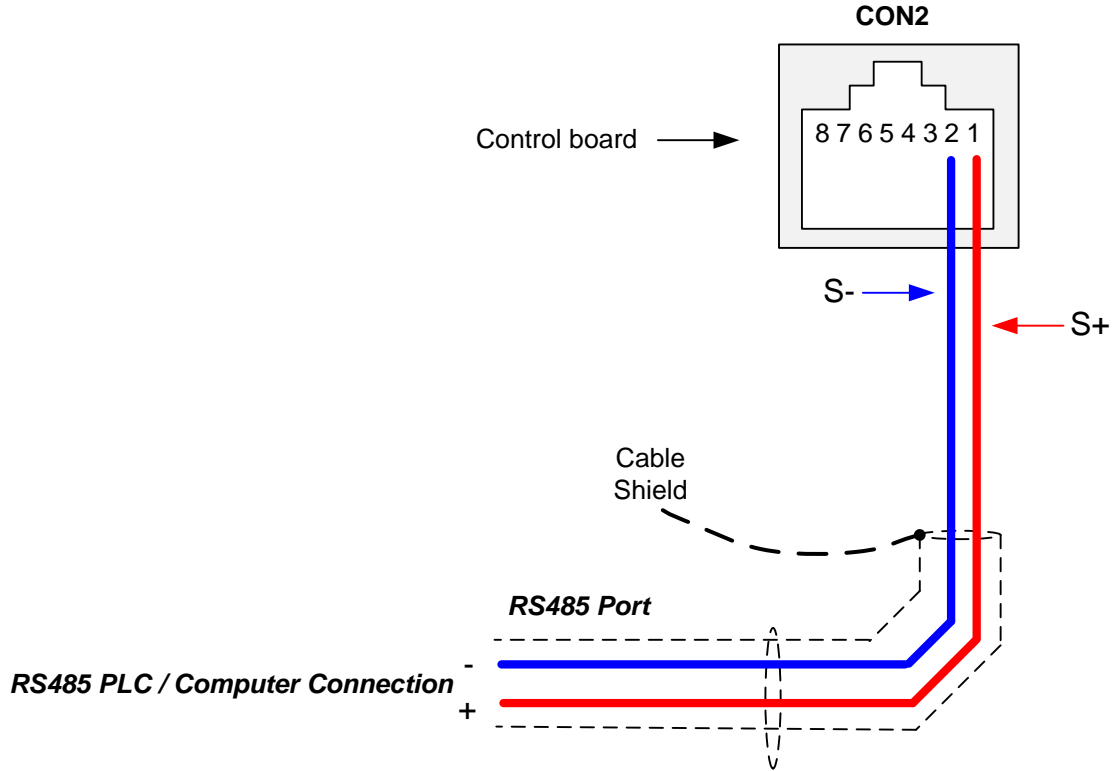

To control (Run/Stop) the inverter via serial communication parameter 00-02 has be set to a “2” for communication control.

**Default Communication Setting is:** Address “1”, 9600 Bits/sec, 1 Start Bit, 1 Stop Bit, and No Parity

The serial communication link function uses RS485 Modbus RTU protocol and allows for:

- 1) Monitoring (data monitoring, function data check).
- 2) Frequency setting.
- 3) Operation command (FWD, REV, and other commands for digital input).
- 4) Write function data.

#### Command Register

Inverter Command Register: 2501 (Hexadecimal)

Bit 0: Run Forward

Bit 1: Run Reverse

Bit 2 ~ Bit 15: Refer to the chapter XX of this manual

**Examples:**

**Run Forward Command (Inverter Address: 01)**

Command String (hexadecimal): 01 06 25 01 00 01 12 C6

**Run Reverse Command (Inverter Address: 01)**

Command String (hexadecimal): 01 06 25 01 00 03 93 07

**Stop Command (Inverter Address: 01)**

Command String (hexadecimal): 01 06 25 01 00 00 D3 06

**Note:** The last 2 bytes of the command strings consist of a CRC16 checksum, please refer to section 4.5 of the instruction manual for additional information.

## 8. Motor and Application Specific Settings

It is essential that before running the motor, the motor nameplate data matches the motor data in the inverter.

### 8.1 Set Motor Nameplate Data (02-01, 02-05)

#### 02-05 Motor Rated Power

The nominal motor rated capacity is set at the factory. Please verify that the motor name plate data matches the motor rated capacity shown in parameter 02-05. The setting should only be changed when driving a motor with a different capacity.

**Range:** 0.1 to 37.0 kW (1HP = 0.746 kW)

To set parameter 02-05:

- After power-up press the **DSP/FUN** key
- Select **02 Motor Parameter**
- Press **READ/ ENTER** key
- Select parameter -01 with the **UP/DOWN ▲** and **▼** keys and press the **READ/ ENTER** key.

Default values vary based on the inverter model.

---

#### 02-01 Motor Rated Current

The motor rated current is set at the factory based on the inverter model. Enter the motor rated current from the motor nameplate if it does not match the value shown in parameter 02-01.

**Setting range:** 0.2 to 100.00A

To set parameter 02-01:

- After power-up press the **DSP/FUN** key
  - Select **02 Motor Parameter**
  - Press **READ/ ENTER** key
  - Select parameter -01 with the **UP/DOWN ▲** and **▼** keys and press the **READ/ ENTER** key.
-



## 8.2 Acceleration and Deceleration Time (00-14, 00-15)

Acceleration and Deceleration times directly control the system dynamic response. In general, the longer the acceleration and deceleration time, the slower the system response, and the shorter time, the faster the response. An excessive amount of time can result in sluggish system performance while too short of a time may result in system instability.

The default values suggested normally result in good system performance for the majority of general purpose applications. If the values need to be adjusted, caution should be exercised, and the changes should be in small increments to avoid system instability.

### 00-14 Acceleration time 1


### 00-15 Deceleration time 1

These parameters set the acceleration and deceleration times of the output frequency from 0 to maximum frequency and from maximum frequency to 0.

To set parameter 00-14 or 00-15:

- After power-up press the **DSP/FUN** key
- Select **00 Basic Fun**
- Press **READ/ ENTER** key
- Select parameter -14 or -15 with the **UP/DOWN ▲ and ▼** keys and press the **READ/ ENTER** key.

Acceleration and deceleration times are represented by the three most significant (high order) digits. Set acceleration and deceleration times with respect to maximum frequency. The relationship between the set frequency value and acceleration/deceleration times is as follows:

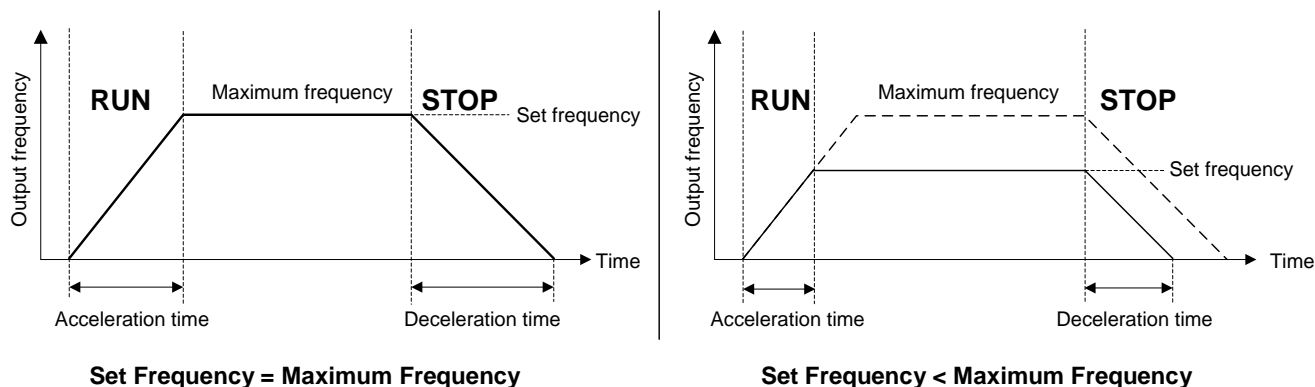

**Note:** If the set acceleration and deceleration times are set too low, the torque limiting function or stall prevention function can become activated if the load torque and or inertia are relatively high. This will prolong the acceleration and or deceleration times and not allow the set times to be followed. In this case the acceleration and or the deceleration times should be adjusted.

### 8.3 Torque Boost (V/f Curve Modification) (01-10)

This parameter sets the relationship between output frequency and output voltage. Constant torque applications have the same torque requirements at low speed as well as at high speed.

#### Initial Setup

For Variable Torque / Normal Duty applications set parameter 01-10 to an initial value of 0.5.

For Constant Torque / Heavy Duty applications set parameter 01-10 to an initial value of 1.0.

01-10 Torque compensation gain

This parameter sets the torque boost for motor 1.

**Setting range:** 0.0 to 10.0

To set parameter 01-10:

- After power-up press the **DSP/FUN** key
- Select **01 V/F Pattern**
- Press **READ/ ENTER** key
- Select parameter -10 with the **UP/DOWN ▲** and **▼** keys and press the **READ/ ENTER** key.

Increase value when:

- The wiring between the inverter and the motor very too long
- The motor size is smaller than the inverter size

**Note:** Gradually increase the torque compensation value and make sure the output current does not exceed inverter rated current.

Reduce value when:

- Experiencing motor vibration
- Over Current Fault
- Overload Fault

**Important:** Confirm that the output current at low speed does not exceed the rated output current of the inverter.




**Warning: A larger than required torque compensation gain value creates over-excitation at low speeds, continued operation may cause the motor to overheat. Check the characteristics of the motor for additional information.**

## 8.4 Rapid Stop

Deceleration time 2 is used in combination with multi-function digital input function #14 (Rapid stop). When rapid stop input is activated the inverter will decelerate to a stop using the Deceleration time 2 (00-17) and display the [E.S.] condition on the keypad.

**Note:** To cancel the emergency stop condition the run command has to be removed and emergency stop input deactivated.

**Example: Emergency Stop Switch set for input terminal S5 (03-04 = 14).**

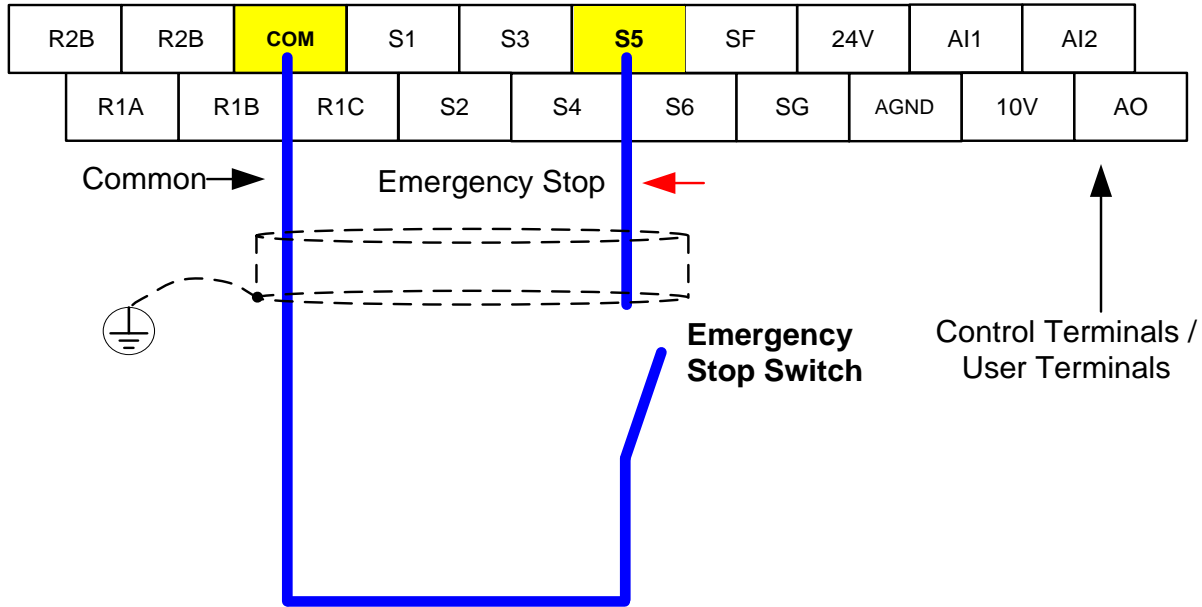


|              |                            |
|--------------|----------------------------|
| <b>00-17</b> | <b>Deceleration Time 2</b> |
| <b>Range</b> | 0.1~3600.0 Sec             |

## 8.5 Forward and Reverse Jog

The jog forward command is used in combination with multi-function digital input function #6 (Jog Forward) and the jog reverse command is used in combination with multi-function digital input function #7 (Jog Reverse).

**Example: Jog Forward input terminal S5 (03-04 = 06) and Jog Reverse input terminal S6 (03-05=7)**

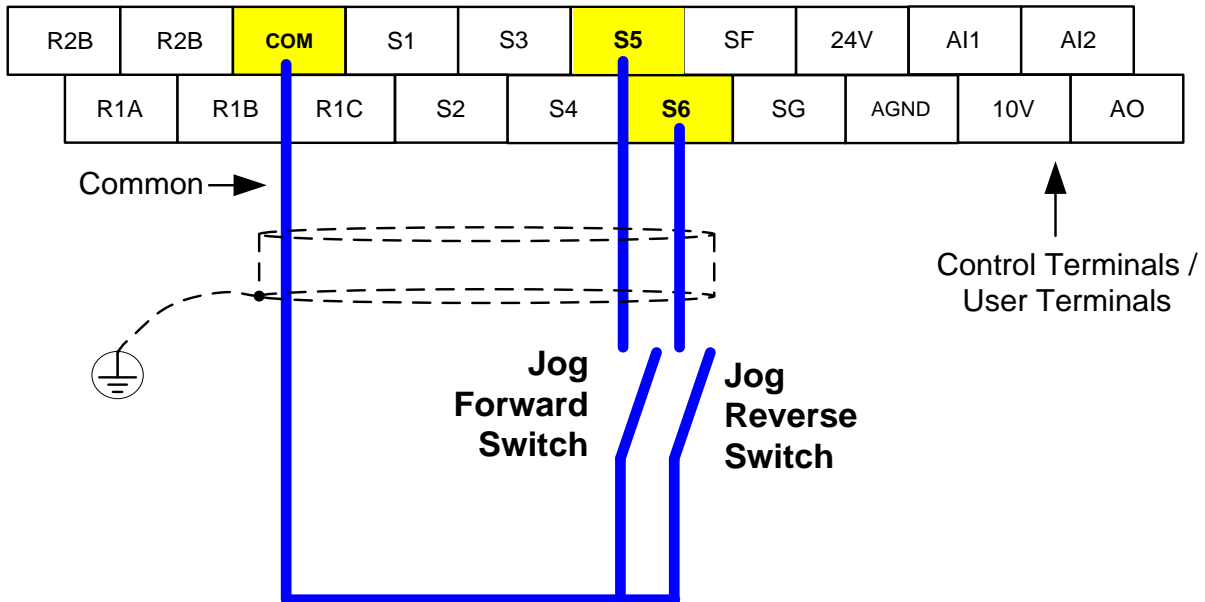


## 8.6 Analog Output Setup

**Signal:** Use parameter 04-11 to select the analog output signal for AO and parameter 04-16 to select the analog output signal for AO2.


**Gain:** Use parameter 04-12 to adjust the gain for AO. Adjust the gain so that the analog output (10V) matches 100% of the selected analog output signal (04-11). Use parameter 05-15 to set slope direction.

**Bias:** Use parameter 04-13 to adjust the bias for AO. To invert the bias use parameter 04-14. Adjust the bias so that the analog output (0V) matches 0% of the selected analog output signal (04-11).

### Example: Analog Output Wiring

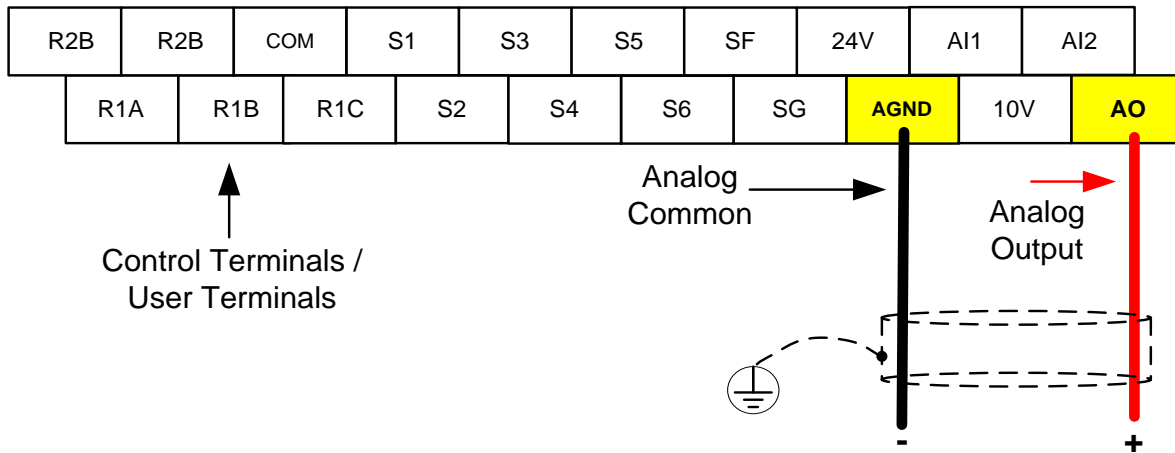

**Example:** Set 04-11 as required according to the table below.

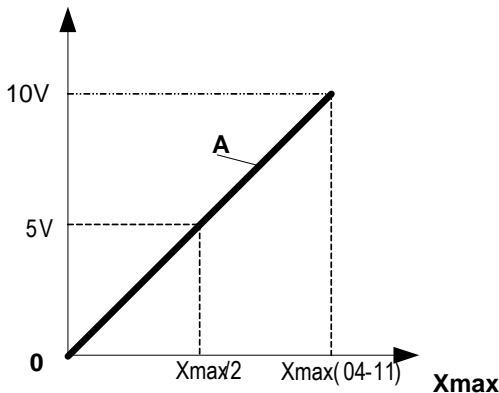

| 04-11      | A                 | Xmax                         |
|------------|-------------------|------------------------------|
| <b>【0】</b> | Output frequency  | upper frequency limit        |
| <b>【1】</b> | Frequency Setting | upper frequency limit        |
| <b>【2】</b> | Output voltage    | Motor Rated Voltage          |
| <b>【3】</b> | DC Bus Voltage    | 220V: 0~400V<br>440V: 0~800V |
| <b>【4】</b> | Output current    | rated current of inverter    |

|              |   |
|--------------|---|
| <b>04-12</b> | <b>AO Gain</b>                            |
| <b>Range</b> | <b>【0 ~ 1000】 %</b>                       |
| <b>04-13</b> | <b>AO Bias</b>                            |
| <b>Range</b> | <b>【0 ~ 100】 %</b>                        |
| <b>04-14</b> | <b>AO Bias Selection</b>                  |
| <b>Range</b> | <b>【0】 : positive      【1】 : Negative</b> |
| <b>04-15</b> | <b>AO Slope</b>                           |
| <b>Range</b> | <b>【0】 : positive      【1】 : Negative</b> |


**Note:** The max output voltage is 10Vdc limited by the inverter hardware. Use external devices that require a maximum of 10Vdc signal.

# 9. Using PID Control for Constant Flow / Pressure Applications

## 9.1 What is PID Control?

The PID function in the inverter can be used to maintain a constant process variable such as pressure, flow, temperature by regulating the output frequency (motor speed). A feedback device (transducer) signal is used to compare the actual process variable to a specified setpoint. The difference between the set-point and feedback signal is called the error signal.

The PID control tries to minimize this error to maintain a constant process variable by regulating the output frequency (motor speed).

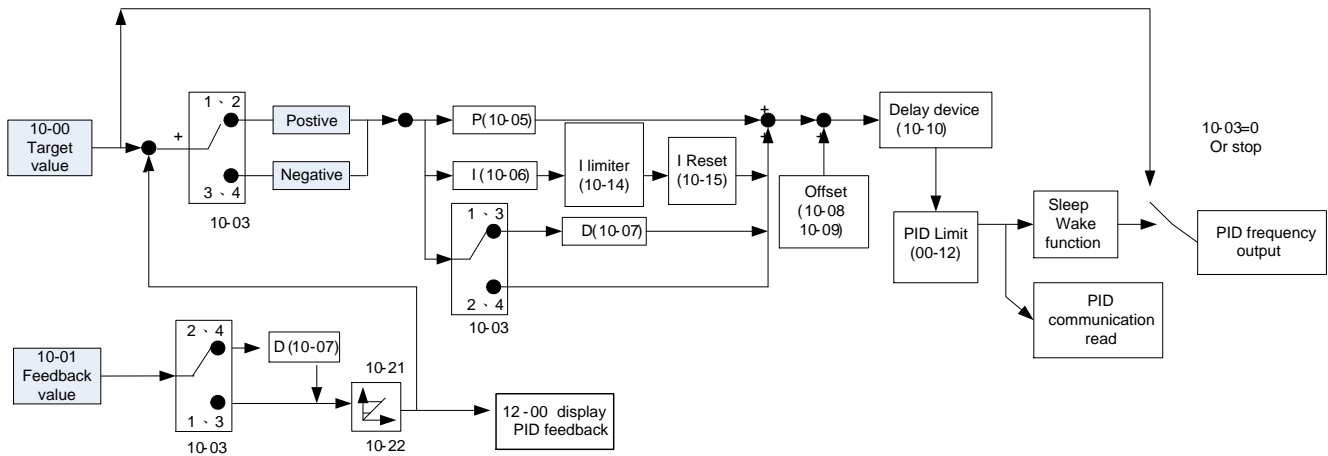

The amplitude of the error can be adjusted with the Proportional Gain parameter 10-05 and is directly related to the output of the PID controller, so the larger gain the larger the output correction.

**Example 1:**

Gain = 1.0

Set-Point = 80%

Feedback = 78%

Error = Set-point - Feedback = 2%

Control Error = Gain x Error = 2%

**Example 2:**

Gain = 2.0

Set-Point = 80%

Feedback = 78%

Error = Set-point - Feedback = 2%

Control Error = Gain x Error = 4%

Please note that an excessive gain can make the system unstable and oscillation may occur.

The response time of the system can be adjusted with the Integral Gain set by parameter 10-06. Increasing the Integral Time will make the system less responsive and decreasing the Integral Gain Time will increase response but may result in instability of the total system.

Slowing the system down too much may be unsatisfactory for the process. The end result is that these two parameters in conjunction with the acceleration (00-14) and deceleration (00-15) times are adjusted to achieve optimum performance for a particular application.

**For typical fan and pump applications a Proportional Gain (10-05) of 2.0 and an Integral Time (10-06) of 5.0 sec. is recommended.**

**10-03 PID control mode**

PID control can be enabled by setting parameter 00-05 to 6 and parameter 10-03 to a value greater than 0.

| 10- 03 | PID Mode Selection                |                           |
|--------|-----------------------------------|---------------------------|
| Range  | <b>【0】</b> :PID Function disabled |                           |
|        | <b>【1】</b> :FWD Characteristic.   | Deviation is D-controlled |
|        | <b>【2】</b> :FWD Characteristic.   | Feedback is D-controlled  |
|        | <b>【3】</b> :REV Characteristic.   | Deviation is D-controlled |
|        | <b>【4】</b> :REV Characteristic.   | Feedback is D-controlled  |

## Commonly used PID control modes

**1:** Forward operation: PID operation enabled, motor speeds increases when feedback signal is smaller than set-point (most fan and pump applications)

**3:** Reverse operation: PID operation enabled, motor slows down when feedback signal is smaller than set-point (e.g. level control applications)

To set parameter 10-03:

- After power-up press the **MODE** key
- Select 10-03 using the arrow keys and up/down keys
- Press **</ENTER** key
- Set parameter 10-03 using the arrow keys and **</ENTER** key to save setting.


**Important:** To use the PID function parameter 00-05 (Main Frequency Source Selection) has to be set to 6 for PID reference.

## 9.2 Connect Transducer Feedback Signal (10-01)

The PID function in the inverter


Depending on the type of feedback transducer used, the inverter can be setup for either 0-10V or a 4-20mA feedback transducer.

### Feedback Signal 4 – 20mA (10-01 = 2)

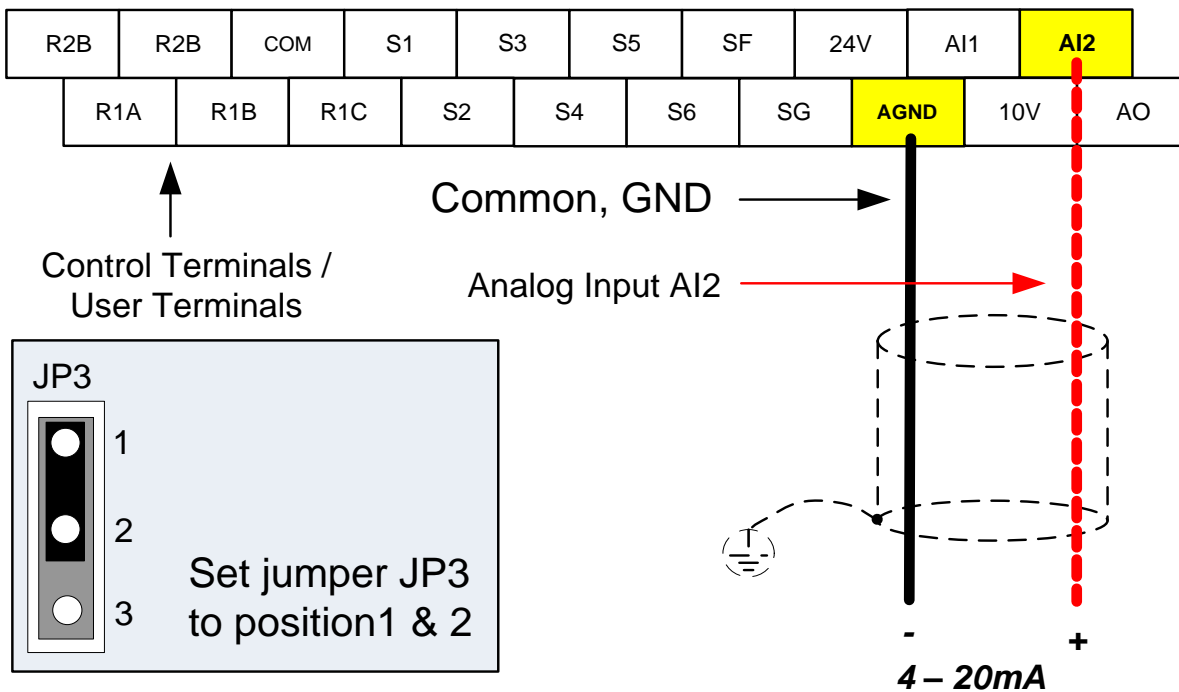



**Feedback Signal 0 – 10V (10-01 = 1)**

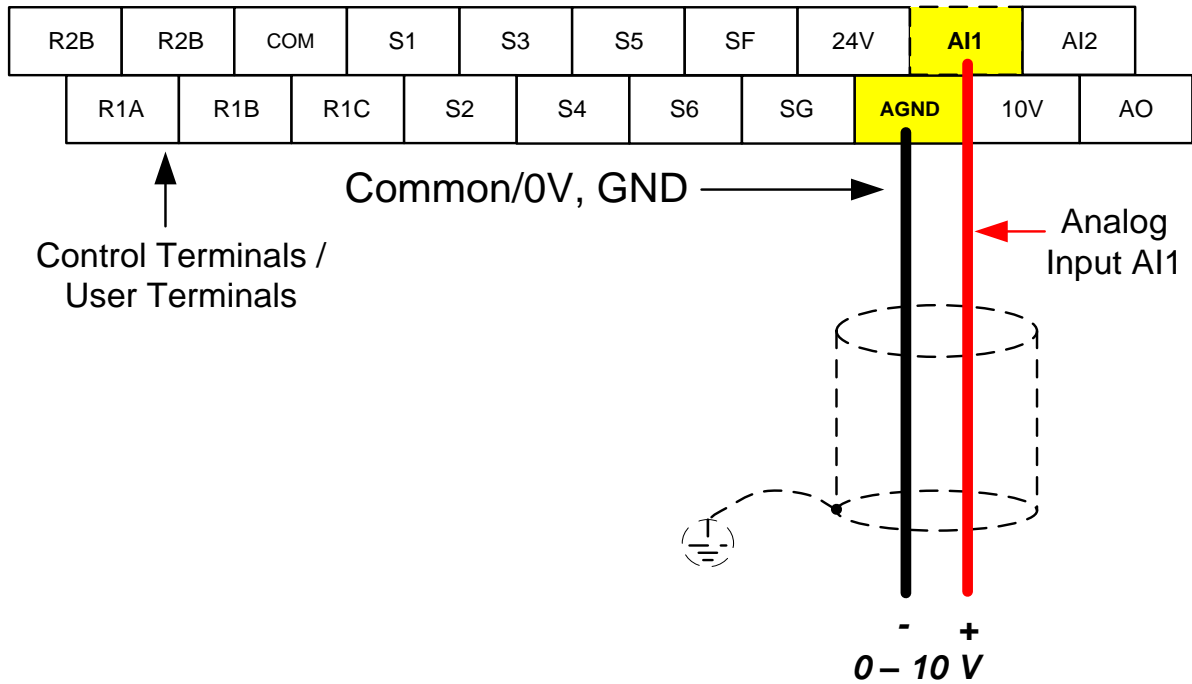

**9.3 Engineering Units**


**PID Feedback Display Scaling**

The PID feedback signal can be scaled to represent actual engineering units. Use parameter 10-21 to set the feedback signal gain for the feedback signal range maximum and parameter 10-22 to the feedback signal minimum.

**Example:**

Feedback signal is a pressure transducer (0-10V/0-20mA) with a range of 0 – 200 PSI  
 0V/0mA = 0 PSI, 10V/20mA = 200 PSI.



Set parameter 10-21 to 200 maximum of transducer range (100%).  
 Set parameter 10-22 to 0 minimum of transducer range (0%).

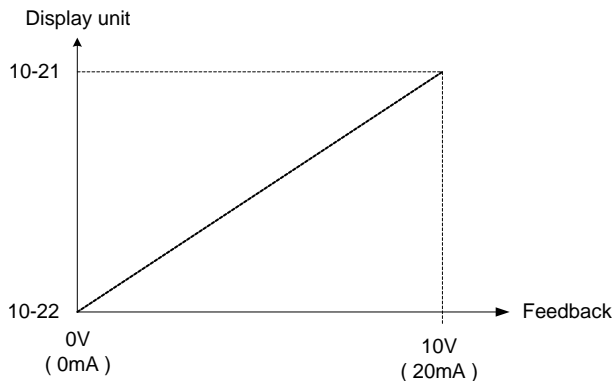

## 9.4 Sleep / Wakeup Function

The PID Sleep function can be used to prevent a system from running at low speeds and is frequently used in pumping application. The PID Sleep function is turned on setting parameter 10-17 to a value greater than 0. The inverter output turns off when the PID output falls below the PID sleep level (10-17) for the time specified in the PID sleep delay time parameter (10-18).

The inverter wakes up from a sleep condition when the PID output (Reference frequency) rises above the PID wake-up frequency (10-19) for the time specified in the PID wake-up delay time (10-20).

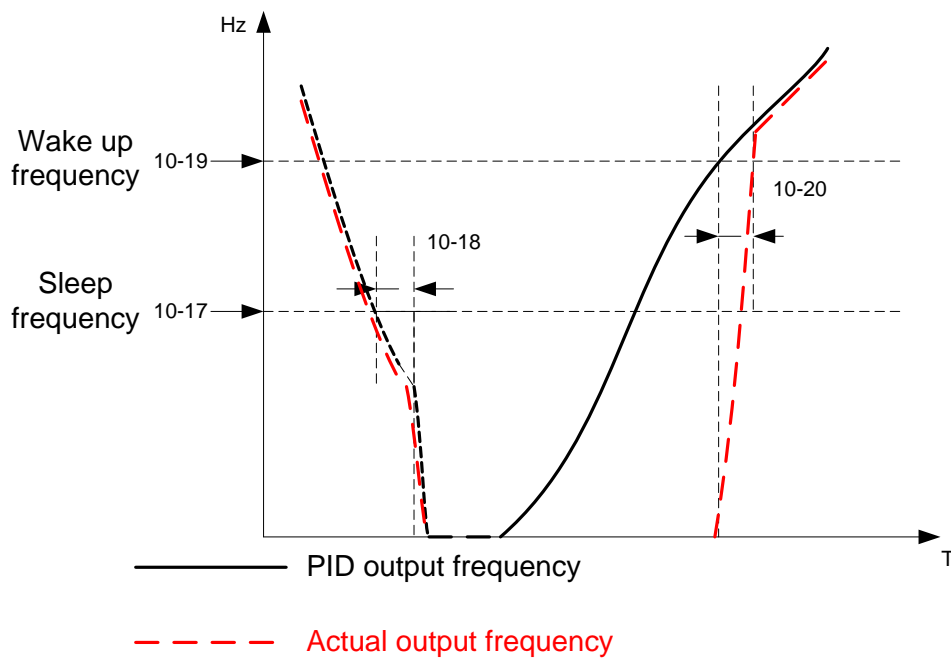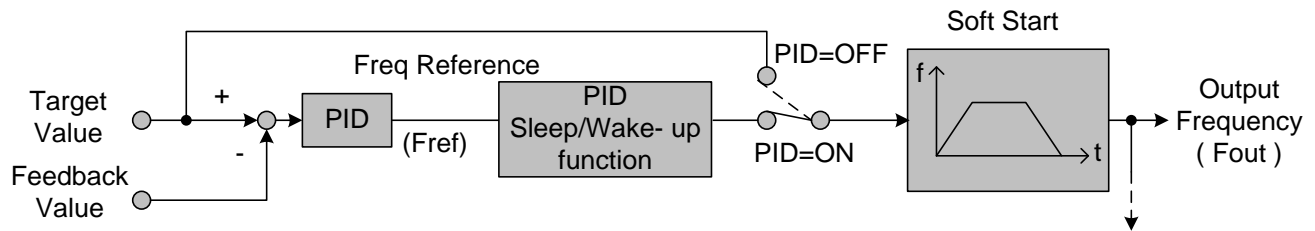

**PID Sleep Function**

# 10. Troubleshooting, Fault Diagnostics and Maintenance

## 10.1 General

Inverter fault detection and early warning / self-diagnosis function. When the inverter detects a fault, a fault message is displayed on the keypad.

When the inverter detects a warning / self-diagnostics error, the digital operator will display a warning or self-diagnostic code, the fault output does not energize in this case. Once the warning is removed, the system will automatically return to its original state.

## 10.2 Fault Detection Function

When a fault occurs, please refer to Table 10.2.1 for possible causes and take appropriate measures.






Use one of the following methods to restart:

1. Set one of multi-function digital input terminals (03-00 ~ 03-05) to 17 (Fault reset); activate input
2. Press the reset button on the keypad.
3. Power down inverter wait until keypad goes blank and power-up the inverter again.

When a fault occurs, the fault message is stored in the fault history (see group 12 parameters).







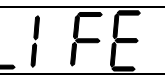
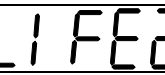
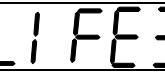
**Table 5.2.1 Fault information and possible solutions**
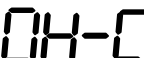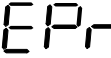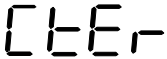
| LED display   | Description   | Cause   | Possible solutions   |
|---|---|---|--|
| <p><b>OV</b><br/><b>Over voltage</b></p> <p><b>OU</b></p> | <p>DC bus voltage exceeds the OV detection level:<br/>410Vdc: 230V class<br/>820Vdc: 460V class</p> <p>(For 440V class, if input voltage 01-14 is set lower than 460V, the OV detection value will be decreased to 700Vdc).</p> | <ul style="list-style-type: none"> <li>• Deceleration time set too short, resulting in regenerative energy flowing back from motor to the inverter.</li> <li>• The inverter input voltage is too high.</li> <li>• Use of power factor correction capacitors.</li> <li>• Excessive braking load.</li> <li>• Braking transistor or resistor defective.</li> <li>• Speed search parameters set incorrectly.</li> </ul> | <ul style="list-style-type: none"> <li>• Increase deceleration time</li> <li>• Reduce input voltage to comply with the input voltage requirements or install an AC line reactor to lower the input voltage.</li> <li>• Remove the power factor correction capacitor.</li> <li>• Use dynamic braking unit.</li> <li>• Replace braking transistor or resistor.</li> <li>• Adjust speed search parameters.</li> </ul> |

| LED display  | Description  | Cause  | Possible solutions  |
|--|--|--|---|
| <b>Inverter faults that cannot be reset</b>  |  |  |   |
| <b>LV<br/>Under voltage</b><br><br>           | DC bus voltage is lower than the UV detection level or the pre-charge contactor is not active while the inverter is running.<br>190Vdc: 230V class;<br>380Vdc: 460V class;<br>The detection value can be adjusted by 07-13). | <ul style="list-style-type: none"> <li>•The input voltage is too low.</li> <li>•Input phase loss.</li> <li>•Acceleration time set too short.</li> <li>•Input voltage fluctuation.</li> <li>•Pre-charge contactor damaged.</li> <li>•DC bus voltage feedback signal value not incorrect.</li> </ul> | <ul style="list-style-type: none"> <li>• Check the input voltage.</li> <li>• Check input wiring.</li> <li>• Increase acceleration time.</li> <li>• Check power source</li> <li>• Replace pre-charge contactor</li> <li>• Replace control board or complete inverter.</li> </ul> |
| <b>OH<br/>Heatsink<br/>overheat</b><br><br>  | The temperature of the heat sink is too high.<br>Note: when OH fault occurs three times within five minutes, it is required to wait 10 minutes before resetting the fault.   | <ul style="list-style-type: none"> <li>•Ambient temperature too high.</li> <li>•cooling fan failed</li> <li>•Carrier frequency set too high.</li> <li>•Load too heavy.</li> </ul>  | <ul style="list-style-type: none"> <li>• Install fan or AC to cool surroundings.</li> <li>• Replace cooling fan.</li> <li>• Reduce carrier frequency.</li> <li>• Reduce load / Measure output current</li> </ul>  |
| <b>OH<br/>Heatsink<br/>overheat</b><br><br> | The temperature of the heat sink is too high.<br>Note: when OH fault occurs three times within five minutes, it is required to wait 10 minutes before resetting the fault.   | <ul style="list-style-type: none"> <li>•Ambient temperature too high.</li> <li>•cooling fan failed</li> <li>•Carrier frequency set too high.</li> <li>•Load too heavy.</li> </ul>  | <ul style="list-style-type: none"> <li>• Install fan or AC to cool surroundings.</li> <li>• Replace cooling fan.</li> <li>• Reduce carrier frequency.</li> <li>• Reduce load / Measure output current</li> </ul>  |
| <b>EEPROM Fault</b><br><br>                 | EEPROM fault   | <ul style="list-style-type: none"> <li>•EEPROM malfunctioned</li> </ul>  | <ul style="list-style-type: none"> <li>• Contact TWMC.</li> </ul>   |
| <b>CT Fault</b><br><br>                     | Input voltage fault  | <ul style="list-style-type: none"> <li>•Abnormal input voltage, too much noise or malfunctioning control board.</li> </ul>   | <ul style="list-style-type: none"> <li>• Check input voltage signal and the voltage on the control board.</li> </ul>  |

## Inverter faults that can be reset manually or via automatic restart
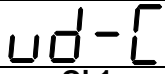
| LED display  | Description  | Cause  | Possible solutions   |
|--|--|--|--|
| <p><b>OC-A<br/>over current at<br/>acceleration</b></p> <p><b>OC-A</b></p>                     | <p>The inverter output current exceeds the overcurrent level (200% of the inverter rated current).</p> | <ul style="list-style-type: none"> <li>•Acceleration / Deceleration time is too short.</li> <li>•Contactor at the inverter output side.</li> <li>•A special motor or applicable capacity is greater than the inverter rated value.</li> <li>•Short circuit or ground fault.</li> </ul> | <ul style="list-style-type: none"> <li>• Extend acceleration / deceleration time.</li> <li>• Check the motor wiring.</li> <li>• Disconnect motor and try running inverter.</li> </ul>  |
|  |  |  |  |
| <p><b>OC-C<br/>over current at<br/>fixed speed</b></p> <p><b>OC-C</b></p>                      | <p>The inverter output current exceeds the overcurrent level (200% of the inverter rated current).</p> | <ul style="list-style-type: none"> <li>•Acceleration / Deceleration time is too short.</li> <li>•Contactor at the inverter output side.</li> <li>•A special motor or applicable capacity is greater than the inverter rated value.</li> <li>•Short circuit or ground fault.</li> </ul> | <ul style="list-style-type: none"> <li>• Extend acceleration / deceleration time.</li> <li>• Check the motor wiring.</li> <li>• Disconnect motor and try running inverter.</li> </ul>  |
|  |  |  |  |
| <p><b>OC-d<br/>over current at<br/>deceleration</b></p> <p><b>OC-d</b></p>                     | <p>The inverter output current exceeds the overcurrent level (200% of the inverter rated current).</p> | <ul style="list-style-type: none"> <li>•Acceleration / Deceleration time is too short.</li> <li>•Contactor at the inverter output side.</li> <li>•A special motor or applicable capacity is greater than the inverter rated value.</li> <li>•Short circuit or ground fault.</li> </ul> | <ul style="list-style-type: none"> <li>• Extend acceleration / deceleration time.</li> <li>• Check the motor wiring.</li> <li>• Disconnect motor and try running inverter.</li> </ul>  |
|  |  |  |  |
| <p><b>OC-S<br/>over current at<br/>start</b></p> <p><b>OC-S</b></p>                            | <p>The inverter output current exceeds the overcurrent level (200% of the inverter rated current).</p> | <ul style="list-style-type: none"> <li>•Acceleration / Deceleration time is too short.</li> <li>•Contactor at the inverter output side.</li> <li>•A special motor or applicable capacity is greater than the inverter rated value.</li> <li>•Short circuit or ground fault.</li> </ul> | <ul style="list-style-type: none"> <li>• Extend acceleration / deceleration time.</li> <li>• Check the motor wiring.</li> <li>• Disconnect motor and try running inverter.</li> </ul>  |
|  |  |  |  |
| <p><b>OV-C<br/>over voltage<br/>during operation<br/>/ deceleration</b></p> <p><b>OU-C</b></p> | <p>Excessive Voltage during operation/ deceleration</p>  | <ul style="list-style-type: none"> <li>•Deceleration time setting too short or excessive load inertia</li> <li>•Power voltage varies widely (fluctuates)</li> </ul>  | <ul style="list-style-type: none"> <li>• Set a longer deceleration time</li> <li>• Consider use of a brake resistor and/or brake module (in case of 400V models)</li> <li>• Consider use of a reactor at the power input side</li> </ul> |
|  |  |  |  |
| <p><b>PF<br/>input phase loss</b></p> <p><b>PF</b></p>   | <p>Input phase Loss</p>  | <ul style="list-style-type: none"> <li>•Abnormal fluctuations in the main circuit voltage</li> </ul>   | <ul style="list-style-type: none"> <li>• Check the main circuit power supply wiring.</li> <li>• Check the power supply voltage</li> </ul>  |
|  |  |  |  |
| <p><b>OC<br/>over current</b></p> <p><b>OC</b></p>   | <p>The inverter output current exceeds the overcurrent level (200% of the inverter rated current).</p> | <ul style="list-style-type: none"> <li>•Acceleration / Deceleration time is too short.</li> <li>•Contactor at the inverter output side.</li> <li>•A special motor or applicable capacity is greater than the inverter rated value.</li> <li>•Short circuit or ground fault.</li> </ul> | <ul style="list-style-type: none"> <li>• Extend acceleration / deceleration time.</li> <li>• Check the motor wiring.</li> <li>• Disconnect motor and try running inverter.</li> </ul>  |
|  |  |  |  |
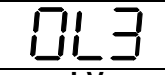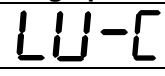
| LED display   | Description  | Cause  | Possible solutions  |
|---|--|--|---|
| <b>Ud-C</b><br><b>Under Current</b><br>              | Output under current detection   | <ul style="list-style-type: none"> <li>• Output current &lt; Output under current detection level.</li> </ul>  | <ul style="list-style-type: none"> <li>• Set level according to application.</li> </ul>   |
| <b>OL1</b><br><b>Motor overload</b><br>              | Internal motor overload protection tripped, active when protection curve 08-05 = xxx1. | <ul style="list-style-type: none"> <li>• Voltage setting V/F mode too high, resulting in over-excitation of the motor.</li> <li>• Motor rated current (02-01) set incorrectly.</li> <li>• Load too heavy.</li> </ul> | <ul style="list-style-type: none"> <li>• Check V/f curve.</li> <li>• Check motor rated current</li> <li>• Check and reduce motor load, check and operation duty cycle.</li> </ul> |
| <b>OL2</b><br><b>Motor overload</b><br>              | Internal motor overload protection tripped, active when protection curve 08-05 = xxx1. | <ul style="list-style-type: none"> <li>• Voltage setting V/F mode too high, resulting in over-excitation of the motor.</li> <li>• Motor rated current (02-01) set incorrectly.</li> <li>• Load too heavy.</li> </ul> | <ul style="list-style-type: none"> <li>• Check V/f curve.</li> <li>• Check motor rated current</li> <li>• Check and reduce motor load, check and operation duty cycle.</li> </ul> |
| <b>OL3</b><br><b>Over Torque</b><br>                 | Over torque  | <ul style="list-style-type: none"> <li>• Motor load too big</li> <li>• Parameter 8-15, 8-16 not set correctly</li> </ul>   | <ul style="list-style-type: none"> <li>• Increase inverter size</li> <li>• Adjust parameter 08-15, 08-16.</li> </ul>  |
| <b>LV</b><br><b>low voltage during operation</b><br> | Voltage too low during operation   | <ul style="list-style-type: none"> <li>• Power voltage too low</li> <li>• Input power voltage fluctuates too much</li> </ul>   | <ol style="list-style-type: none"> <li>1. Improve power quality</li> <li>2. Consider adding a reactor at the power input side</li> </ol>  |
| <b>OVSP</b><br><b>Over Speed</b><br>               | Motor speed too high   | <ul style="list-style-type: none"> <li>• Motor rotation speed greatly exceeds set speed</li> </ul>   | <ol style="list-style-type: none"> <li>1. Motor load too big</li> <li>2. Check set speed</li> </ol>   |
| <b>LIFE 1</b><br>                                  | Inrush current suppression circuit life expectancy alarm                               | <ul style="list-style-type: none"> <li>• Inrush current suppression circuit maintenance required</li> </ul>  | <ol style="list-style-type: none"> <li>1. Consult factory</li> </ol>  |
| <b>LIFE 2</b><br>                                  | Control Circuit Capacitor life expectancy alarm  | <ul style="list-style-type: none"> <li>• Control Circuit Capacitors maintenance required</li> </ul>  | <ol style="list-style-type: none"> <li>1. Consult factory</li> </ol>  |
| <b>LIFE 3</b><br>                                  | Main Circuit Capacitor life expectancy alarm   | <ul style="list-style-type: none"> <li>• DC-Bus Capacitors maintenance required</li> </ul>   | <ol style="list-style-type: none"> <li>1. Consult factory</li> </ol>  |

## Keypad Operation Error Codes

| LED display           | Description  | Cause   | Possible solutions  |
|-----------------------|--|---|---|
| <b>LOC<br/>Locked</b> | 1.Parameter already locked<br>2.Motor direction locked<br>3.Parameter password (13-07) enabled | <ul style="list-style-type: none"> <li>Attempt to modify frequency parameter while 13-06&gt;0.</li> <li>Attempt to reverse direction when 11-00=1</li> <li>Parameter (13 - 07) enabled, set the correct password will show LOC.</li> </ul>              | <ul style="list-style-type: none"> <li>Adjust 13-06</li> <li>Adjust 11-00</li> </ul>  |
| <b>LOC</b>            |  |   |   |
| <b>Err1</b>           | Keypad operation error   | <ul style="list-style-type: none"> <li>Press ▲ or ▼ while 00-05/00-06&gt;0 or running at preset speed.</li> <li>Attempting to modify a parameter that cannot be modified during operation (refer to the parameter list)</li> </ul>                      | <ul style="list-style-type: none"> <li>The ▲ or ▼ is available for modifying the parameter only when 00-05/00-06=0</li> <li>Modify the parameter in STOP mode.</li> </ul> |
| <b>Err1</b>           |  |   |   |
| <b>Err2</b>           | Parameter setting error  | <ul style="list-style-type: none"> <li>00-13 is within the range of (11-08 ±11-11) or (11-09±11-11) or (11-10±11-11)</li> <li>00-12≤00-13</li> <li>Set 00-05 and 00-06 to the same value</li> <li>When 01-00≠7, modify parameter 01-01~01-09</li> </ul> | <ul style="list-style-type: none"> <li>Modify 11-08~11-10 or 11-11 Set 00-12&gt;00-13</li> </ul>  |
| <b>Err2</b>           |  |   |   |
| <b>Err4</b>           | CPU performed an illegal interrupt   | <ul style="list-style-type: none"> <li>External noise</li> </ul>  | <ul style="list-style-type: none"> <li>Consult factory</li> </ul>   |
| <b>Err4</b>           |  |   |   |
| <b>Err5</b>           | Modification of parameter is not available in communication                                    | <ul style="list-style-type: none"> <li>Control command sent during communication</li> <li>Attempt to modify the function 09-02~ 09-05 during communication</li> </ul>   | <ul style="list-style-type: none"> <li>Issue enable command before communication</li> <li>Set parameters 09-02~09-05 function before communication</li> </ul>             |
| <b>Err5</b>           |  |   |   |
| <b>Err6</b>           | Communication failed   | <ul style="list-style-type: none"> <li>Wiring error</li> <li>Communication parameter setting error.</li> <li>Incorrect communication protocol</li> </ul>  | <ul style="list-style-type: none"> <li>Check hardware and wiring</li> <li>Check Functions(09-00~09- 05)</li> </ul>  |
| <b>Err6</b>           |  |   |   |
| <b>Err7</b>           | Parameter conflict   | <ul style="list-style-type: none"> <li>Attempt to modify parameter 13-00/13-08.</li> <li>Voltage and current detection circuit not working properly.</li> </ul>   | <ul style="list-style-type: none"> <li>Consult factory if unable to reset inverter.</li> </ul>  |
| <b>Err7</b>           |  |   |   |

## Special Condition Error Codes

| LED display  | Fault   | Description   |
|--------------|---|---|
| StP0         | Zero speed at stop  | Occurs when preset frequency <0.1Hz   |
| StP0<br>StP0 |   |   |
| StP1         | Fail to start directly<br>On power up.                                | <ul style="list-style-type: none"> <li>If the inverter is set for external terminal control mode (00-02/00-03=1) and direct start is disabled (07-04=1)</li> <li>The inverter cannot be started and will flash STP1.</li> <li>The run input is active at power-up, refer to descriptions of (07-04).</li> </ul> |
| StP1<br>StP1 |   |   |
| StP2         | Keypad Stop<br>Operated when<br>inverter in external<br>Control mode. | <ul style="list-style-type: none"> <li>If the Stop key is pressed while the inverter is set to external control mode (00-02/00-03=1) then 'STP2' flashes after stop.</li> <li>Release and re-activate the run contact to restart the inverter.</li> </ul>   |
| StP2<br>StP2 |   |   |
| E.S.         | External<br>Rapid stop  | When external rapid stop input is activated the inverter will decelerate to stop and the display will flash with E.S. message.  |
| E.S.<br>E.S. |   |   |
| b.b.         | External base block   | When external base block input is activated the inverter stops immediately and then the display will flash with b.b. message.   |
| b.b.<br>b.b. |   |   |
| PdEr         | PID feedback loss   | PID feedback loss is detected.  |
| PdEr<br>PdEr |   |   |
| PdEr         | Auto-tuning error   | <ul style="list-style-type: none"> <li>Motor nameplate data incorrect.</li> <li>Emergency stop activated while during auto-tuning.</li> </ul>   |
| PdEr<br>AdEr |   |   |
| Flre         | Fire Mode   | <ul style="list-style-type: none"> <li>Software version &lt; 1.1, fire mode is enabled when 08-17 = 1</li> <li>Software version &gt;= 1.1, fire mode is enabled when 03-00 ~ 03-05 = 28</li> <li>Keypad display shows FlrE</li> <li>In fire mode inverter will run at full speed.</li> </ul>                    |
| FlrE<br>FlrE |   |   |



### 10.3 General Troubleshooting

| Status   | Check   | Possible Solution   |
|--|---|---|
| <b>Motor runs in wrong direction</b>           | Check inverter output wiring.   | Wiring must match U, V, and W terminals of the motor.   |
|  | Check control terminal wiring.  | Check for correct wiring.   |
| <b>Unable to regulate motor speed.</b>         | Check control terminal wiring.  | Check for correct wiring.   |
|  | Check operation mode.   | Check the Frequency Source set in parameters 00-05/00-06.   |
|  | Excessive load.   | Reduce the load.  |
| <b>Motor running speed too high or too low</b> | Check motor data (poles, voltage...).   | Confirm the motor specifications.   |
|  | Check gear ratio.   | Confirm gear ratio.   |
|  | Check maximum output frequency 00-12/01-02.   | Confirm maximum output frequency  |
| <b>Motor speed unstable</b>                    | Excessive load.   | Reduce the load.  |
|  | Motor load fluctuates.  | 1. Minimize the variation of the load.<br>2. Consider increasing inverter size and the motor.                     |
|  | Input voltage unstable.   | 1. Consider adding an AC reactor at the input power side when using single-phase power.                           |
|  |   | 2. Check wiring when using three-phase power.   |
| <b>Motor does not run</b>                      | Check input power connected and input terminals.<br>Check if charging indicator is lit. | 1. Turn input power on.<br>2. Cycle input power.<br>3. Input voltage not correct.<br>4. Input wiring not fastened |
|  | Check output voltage across output terminals T1, T2, and T3.                            | Cycle input power.  |
|  | Check motor overload settings.  | Reduce motor load.  |
|  | Are there any abnormalities in the inverter?  | Check wiring and correct if necessary.  |
|  | Check forward or reverse run command.   |   |
|  | Check analog frequency reference signal.  | Correct analog input signal.  |
|  | Check operation mode setting 00-03.   | Run inverter through via the keypad   |

## 10.4 Routine and Periodic Inspection

To ensure stable and safe inverter operation it is recommended to perform inverter maintenance at regular intervals. Use the checklist below as a guideline for inspection.

Disconnect power and wait approximately 5 minutes to make sure no voltage is present on the output terminals before carrying out any inspection or maintenance.

| Items                                      | Details   | Checking period |       | Methods                                   | Criteria  | Remedies  |
|--|---|-----------------|-------|---|---|---|
|  |   | Daily           | 1Year |   |   |   |
| <b>Environment &amp; Ground connection</b> |   |                 |       |   |   |   |
| Ambient conditions on site                 | Confirm ambient temperature and relative humidity on site | ☉               |       | Measure with thermometer and hygrometer   | Temperature: -10 – 40°C (14-120°F)<br>Humidity: Below 95%RH | Improve the ambient or relocate the drive to a better area. |
|  | Are there flammable materials close to the inverter?      | ☉               |       | Visual check                              | Keep area clear   |   |
| Installation Grounding                     | Any unusual vibration from surrounding machine            | ☉               |       | Visual, hearing check                     | Keep area clear   | Secure screws   |
|  | Is the grounding resistance correct?                      |                 | ☉     | Measure the resistance with a multi-meter | 200Vclass: below 100Ω                                       | Improve the grounding if needed.                            |
| <b>Terminals &amp; Wiring</b>              |   |                 |       |   |   |   |
| Connection terminals                       | Check for loose terminals                                 |                 | ☉     | Visual check<br>Check with a screwdriver  | Correct installation requirement                            | Secure terminals and remove rust                            |
|  | Check for damage to base of inverter                      |                 | ☉     |   |   |   |
|  | Check for corroded Terminals                              |                 | ☉     |   |   |   |
| Wiring                                     | Check for broken wires                                    |                 | ☉     | Visual check                              | Correct wiring requirement                                  | Rectify as necessary  |
|  | Check wire insulation                                     |                 | ☉     |   |   |   |
| <b>Input Voltage</b>                       |   |                 |       |   |   |   |
| Input power voltage                        | Check input volatge                                       | ☉               |       | Measure the voltage with a multi-meter    | Voltage must conform with the spec.                         | Improve input voltage if necessary.                         |

| Circuit boards and components |  |   |   |                            |   |                                    |
|-------------------------------|--|---|---|----------------------------|---|------------------------------------|
| Printed circuit board         | Check for damage to PCBs                           |   | ⊙ | Visual check               | Correct component condition                   | Clean or replace the circuit board |
|                               | Check for discolored, overheated, or burned parts  |   | ⊙ |                            |   |                                    |
| Capacitor                     | Check for unusual odor or leakage                  | ⊙ |   |                            |   |                                    |
|                               | Check for any physical damage or protrusion        |   | ⊙ |                            |   |                                    |
| Power component               | Check for any dust or debris                       |   | ⊙ | Measure with a multi-meter | No short circuit or faulty three-phase output | Clean components                   |
|                               | Check resistance between each terminals            |   | ⊙ |                            |   | Consult factory                    |
| Peripheral device             |  |   |   |                            |   |                                    |
| Rheostat                      | Whether rheostat wiring or connector are damaged   |   | ⊙ | Visual check               | No abnormalities                              | Replacement rheostat               |
| Electromagnetic Contactor     | Check contacts and connections for any abnormality | ⊙ |   |                            |   |                                    |
|                               | Unusual vibration and noise                        | ⊙ |   | hearing check              |   |                                    |
| Reactor                       | Is there any abnormalities                         | ⊙ |   | Visual check               | Replacement Reactor                           |                                    |
| Cooling System                |  |   |   |                            |   |                                    |
| Cooling fan                   | Unusual vibration and noise                        |   | ⊙ | Visual or hearing check    | Correct cooling                               | Consult with the supplier          |
|                               | Excessive dust or debris                           | ⊙ |   | Visual check               |   | Clean the fan                      |
| Heat sink                     | Excessive dust or debris                           | ⊙ |   |                            |   | Clean up debris or dust            |
| Ventilation Path              | Is the ventilation path blocked                    | ⊙ |   |                            |   | Clear the path                     |

## 10.5 Routine Maintenance


To ensure stable and safe inverter operation it is recommended to perform routine inverter maintenance at regular intervals. Use the checklist below as a guideline for inspection.

### 1. Maintenance Check List


|   |
|---|
| <ul style="list-style-type: none"><li>• Ensure that temperature and humidity where the inverter is installed falls within the specification, make sure correct ventilation is provided.</li></ul> |
| <ul style="list-style-type: none"><li>• For replacement of a failed or damaged inverter consult factory.</li></ul>  |
| <ul style="list-style-type: none"><li>• Ensure that the installation area is free from dust and any other debris.</li></ul>   |
| <ul style="list-style-type: none"><li>• Check and ensure that the ground connections are secure and correct.</li></ul>  |
| <ul style="list-style-type: none"><li>• Terminal screws cannot be loose, tighten terminal for power input and output of the inverter with power turned off.</li></ul>                             |
| <ul style="list-style-type: none"><li>• Do not perform any insulation test on the control circuit.</li></ul>  |

### 2. Insulation test method

#### Single Phase

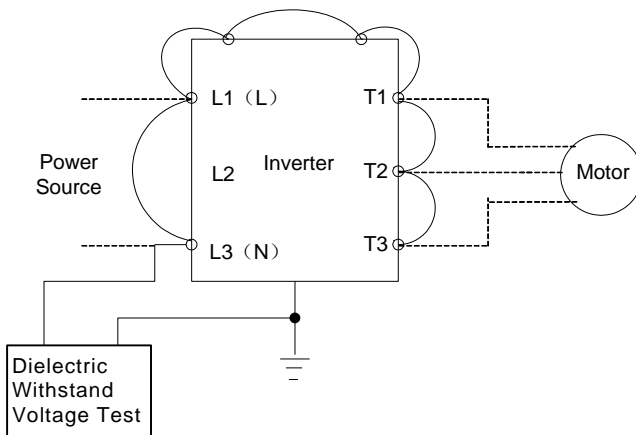

#### Three Phase

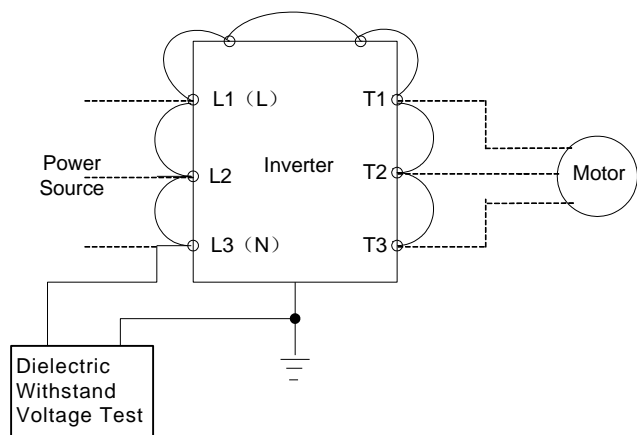

## 11. Commonly used parameters

|              |   |
|--------------|---|
| <b>00-02</b> | <b>Main Run Command Source Selection</b>  |
| <b>00-03</b> | <b>Alternative Run Command Source Selection</b>   |
| <b>Range</b> | <b>【0】 : Keypad control</b><br><b>【1】 : External terminal control</b><br><b>【2】 : Communication control</b><br><b>【3】 : PLC</b> |

**Note:** To switch the command source between the setting of main (00-02) and alternative (00-03) assign one of the DI (S1 to S6) to be the “Run Command Switch Over” (03-00~03-05=12).

### 00-02=0: Keypad Control

Use the keypad to start and stop the inverter and set direction with the forward / reverse key. Refer to section 4-1 for details on the keypad.

### 00-02=1: External Terminal Control


External terminals are used to start and stop the inverter and select motor direction. There are three different types: 2-wire and 3-wire operation and 2-wire self holding (latching) mode.

#### ■ 2-wire operation

For 2-wire operation, set 03-00 (S1 terminal selection) to 0 and 03-01 (S2 terminal selection) to 1

| Terminal S1 | Terminal S2 | Operation                                    |
|-------------|-------------|--|
| Open        | Open        | Stop Inverter                                |
| Closed      | Open        | Run Forward                                  |
| Open        | Closed      | Run Reverse                                  |
| Closed      | Closed      | Stop Inverter, Display EF9 Alarm after 500ms |


Figure 11.1 Wiring example of 2-wire

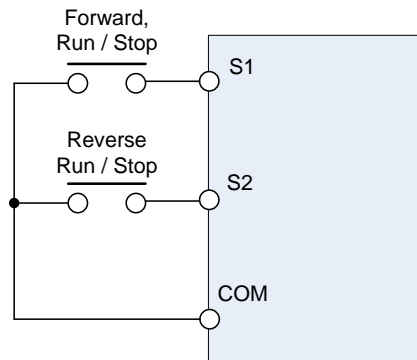


### ■ 3-wire operation

Set parameter 00-04 to 3 for 3-wire program initialization, multi-function input terminal S1 is set to run operation, S2 for stop operation and S3 for forward/reverse command.

**Note:** Terminal S1 must be closed for a minimum of 50ms to activate operation.

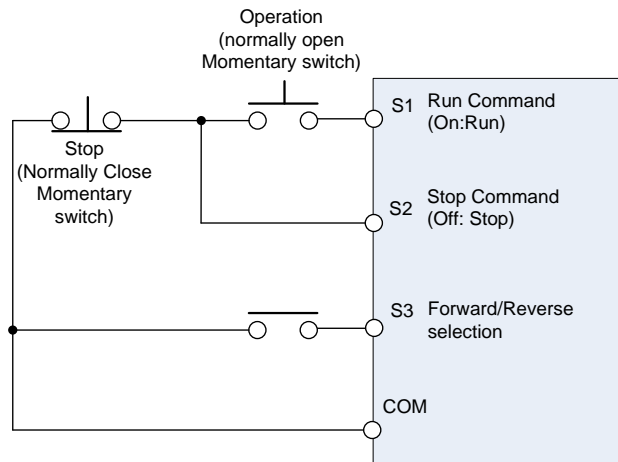

**Figure 11.2 Wiring example of 3-wire**

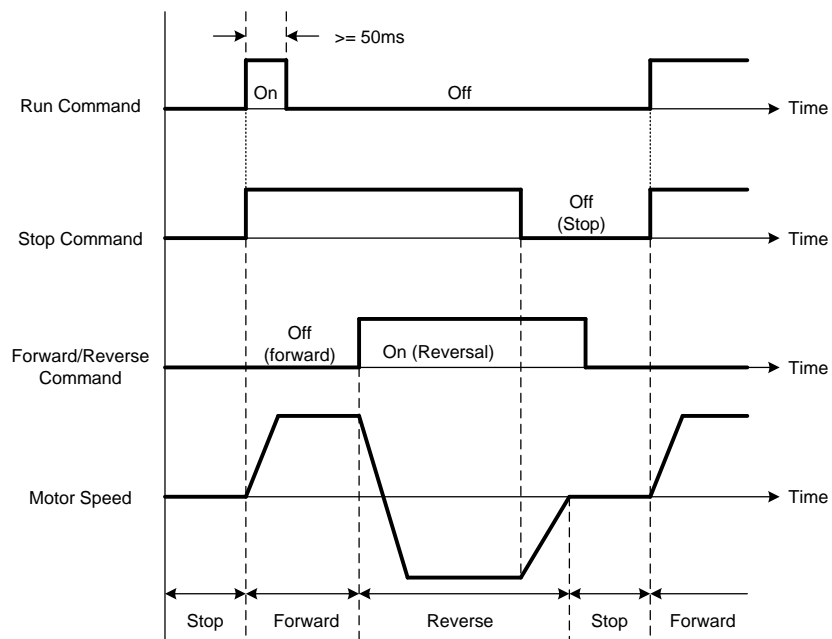

**Figure 11.3 3-wire operation**

### 00-03=2: Communication control

The inverter is controlled by the RS-485 port. Refer to parameter group 9 for communication setup.

### 00-03=3: PLC control

|              |  |
|--------------|--|
| <b>00-05</b> | <b>Main Frequency Command Source Selection</b>   |
| <b>00-06</b> | <b>Alternative Frequency Source Selection</b>  |
| <b>Range</b> | <b>【0】 :Up/Down on Keypad</b><br><b>【1】 :Potentiometer on Keypad</b><br><b>【2】 :External AI1 Analog Signal Input</b><br><b>【3】 :External AI2 Analog Signal Input</b><br><b>【4】 :External Up/Down Frequency Control</b><br><b>【5】 :Communication Setting Frequency</b><br><b>【6】 :PID Output Frequency</b><br><b>【7】 :Pulse Input</b> |

**00-05/00-06= 0:** Keypad

Use the keypad to enter the frequency reference or by setting parameter 05-01 (frequency reference 1). Note that once the frequency command is switched to alternative frequency reference and 00-06 is set to 0, the frequency can be adjusted using parameter 05-01.

**00-05/00-06= 1:** Potentiometer on Keypad



Use the keypad potentiometer to set frequency reference


**00-05/00-06= 2, 3:** External Analog Input AI1 / External Analog Input AI2

Set any of the multi-function terminals (03-00~03-05) to 13, to switch between main and alternate frequency.

Use analog reference from analog input AI1 or AI2 to set the frequency reference (as shown in Figure 4.3.4). Refer to parameter 04-00 to select the signal type.

|              |   |                            |                                       |
|--------------|---|----------------------------|---------------------------------------|
| <b>04-00</b> | Analog Input Signal Type Select (AI1/AI2) | <b>AI1</b>                 | <b>AI2</b>                            |
|              |   | (0): 0~10V (0~20mA)        | 0~10V (0~20mA)                        |
|              |   | <b>(1): 0~10V (0~20mA)</b> | <b>2~10V (4~20mA) Factory Default</b> |
|              |   | (2): 2~10V (4~20mA)        | 0~10V (0~20mA)                        |
|              |   | (3): 2~10V (4~20mA)        | 2~10V (4~20mA)                        |

|                |   |                                |                                    |
|----------------|---|--------------------------------|------------------------------------|
| <b>JP2/JP3</b> |  | External signal type selection | 0~20mA / 4~20mA<br>Analog signal   |
|                |  |                                | 0~10VDC / 2~10VDC<br>Analog signal |

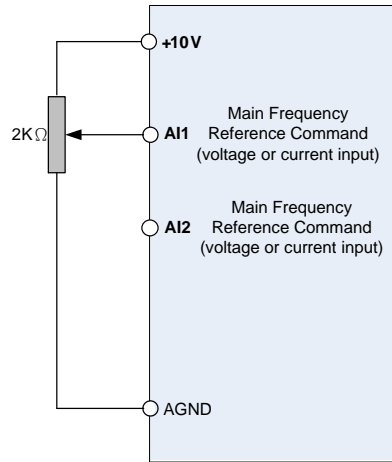

**Figure 11.4 Analog input as main frequency reference command**

**00-05/00-06= 4: Terminal UP / DOWN**

The inverter accelerates with the UP command closed and decelerates with the DOWN command closed. Please refer to parameter 03-00 ~ 03-05 for additional information.

**Note:** To use this function both the UP and DOWN command have to be set to any of the input terminals.

**00-05/00-06= 5: Communication Control**

The frequency reference command is set via the RS-485 communication port using the MODBUS RTU.

Refer to parameter group 9 for additional information.

**00-05/00-06= 6: PID Output**

Enables PID control, reference frequency is controlled by the PID function, refer to chapter 10 or parameter group 10 for PID setup.

**00-05/00-06=7: Pulse Input**

Frequency reference from an external pulse input. Can be used only with multi-function input terminal S3 (03-02 = 25 or 26). See parameter group 3 multi-function input selections 25 and 26.



|              |                            |
|--------------|----------------------------|
| <b>00-14</b> | <b>Acceleration Time 1</b> |
| <b>Range</b> | <b>【0.1~3600.0】 Sec</b>    |
| <b>00-15</b> | <b>Deceleration Time 1</b> |
| <b>Range</b> | <b>【0.1~3600.0】 Sec</b>    |


**Notes:**

- Acceleration time is the time required to accelerate from 0 to 100% of maximum output frequency.
- Deceleration time is the time required to decelerate from 100 to 0% of maximum output frequency.
- Maximum frequency is set by parameter 01-02.
- If parameter 01-00=18, Maximum output frequency is set by parameter 01-02.
- If parameter 01-00≠18, Maximum output frequency = 50.00 or 60.00 depending on initialization mode.

Actual acceleration and deceleration time is calculated as follows:

$$\text{Actual acceleration time} = \frac{(00-14) \times (\text{set frequency} - \text{the minimum starting frequency})}{\text{Maximum output frequency}}$$

$$\text{Actual deceleration time} = \frac{(00-15) \times (\text{set frequency} - \text{the minimum starting frequency})}{\text{Maximum output frequency}}$$

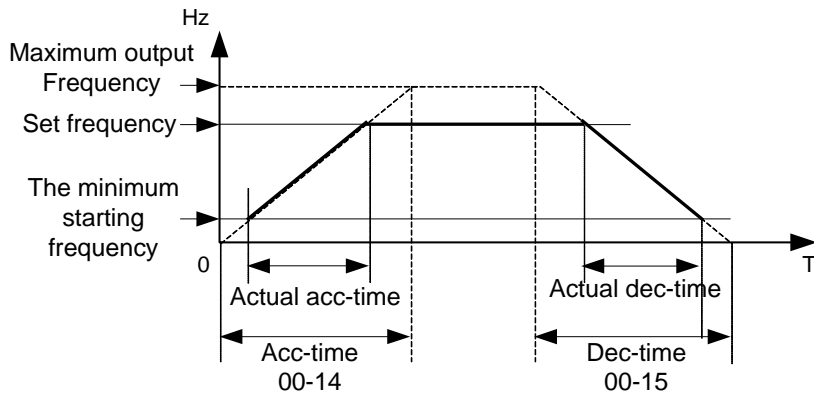

**Figure 11.5 Acceleration / Deceleration Ramp**

|              |                                |
|--------------|--------------------------------|
| <b>01-00</b> | <b>Volts/Hz Patterns (V/F)</b> |
| <b>Range</b> | <b>【0~18】</b>                  |

The V/F curve selection is enabled for V/F mode. Make sure to set the inverter input voltage parameter 01-14.

There are three ways to set V/F curve:

- (1) 01-00 = 0 to 17: choose any of the 18 predefined curves (0 to 17).
- (2) 01-00 = 18, use 01-02~01-09 and 01-12 ~ 01-13.

The default parameters (01-02 ~ 01-09 and 01-12 ~ 01-13) are the same when 01-00 is set to 18 and 01-00 is set to 0 (50Hz) or 9 (60Hz) depending on the initialization mode.

Parameters 01-02 ~ 01-13 are automatically set when any of the predefined V/F curves are selected.

This parameter will be affected to reset by the initialization parameter (13-08).

Consider the following items as the conditions for selecting a V/F pattern.

- (1) The voltage and frequency characteristic of motor.
- (2) The maximum speed of motor.

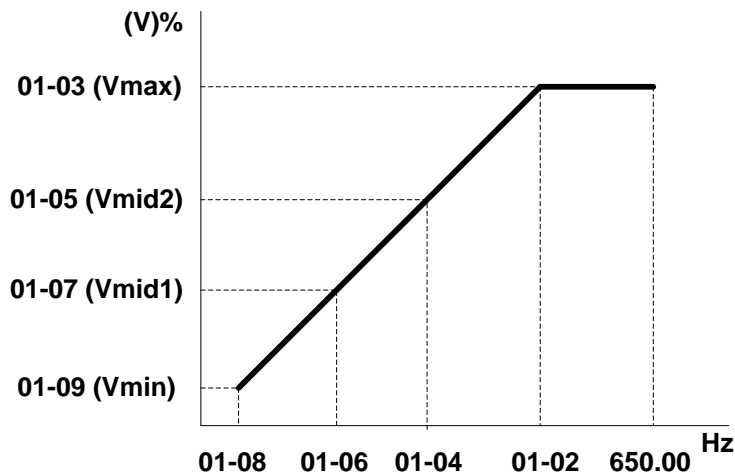
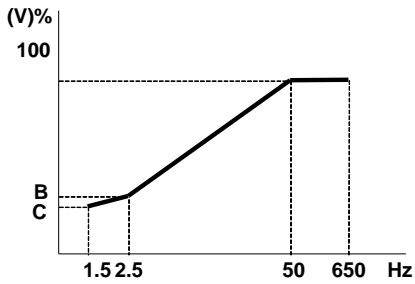
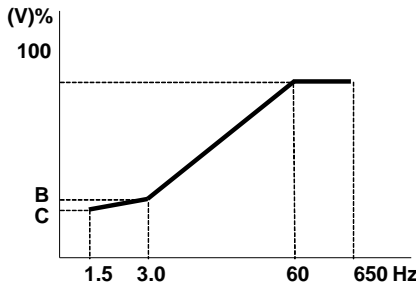
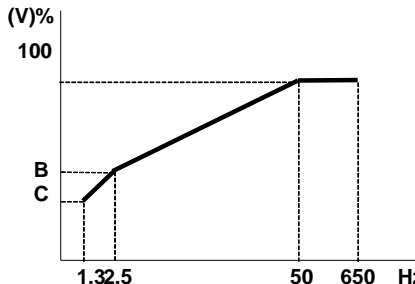
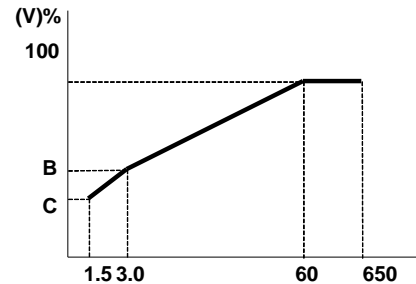
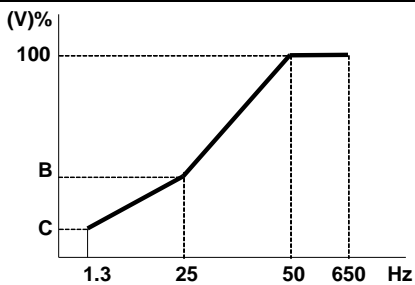
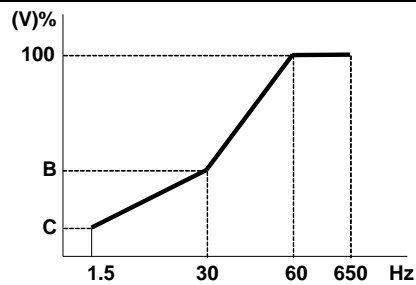
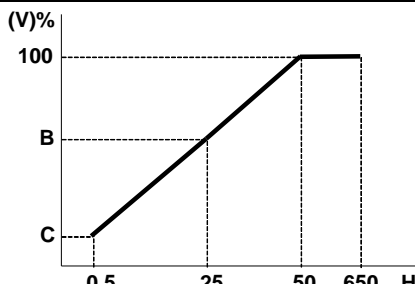
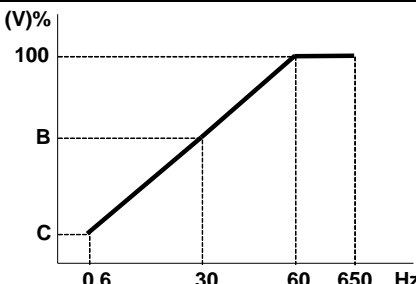


Figure 11.6 V/f Pattern

| TYPE              | 50Hz          |   | 60Hz          |   |
|-------------------|---------------|---|---------------|---|
| Function          | 01-00         | V/F pattern   | 01-00         | V/F pattern   |
| General Use       | = <b>【0】</b>  |    | = <b>【9】</b>  |    |
|                   | = <b>【1】</b>  |    | = <b>【10】</b> |    |
|                   | = <b>【2】</b>  |   | = <b>【11】</b> |   |
| = <b>【3】</b>      | = <b>【12】</b> |   |               |   |
| Decreasing torque | = <b>【4】</b>  |  | = <b>【13】</b> |  |
|                   | = <b>【5】</b>  |   | = <b>【14】</b> |   |
| Decreasing torque | = <b>【6】</b>  |  | = <b>【15】</b> |  |
|                   | = <b>【7】</b>  |   | = <b>【16】</b> |   |
|                   | = <b>【8】</b>  |   | = <b>【17】</b> |   |

(V) 100% is the maximum output voltage. B, C point preset % settings will be as table below:


| 01-00  | B (Xb) | C (Xc) |
|--------|--------|--------|
| 0 / 9  | 7.5%   | 4.5%   |
| 1 / 10 | 10.0%  | 7.0%   |
| 2      | 11.0%  | 8.5%   |
| 3      | 12.0%  | 9.5%   |
| 4      | 17.5%  | 4.0%   |
| 5      | 25.0%  | 5.0%   |
| 11     | 11.0%  | 8.0%   |
| 12     | 12.0%  | 9.0%   |
| 13     | 20.5%  | 7.0%   |
| 14     | 28.5%  | 8.0%   |
| 6 / 15 | 45.0%  | 1.0%   |
| 7 / 16 | 55.0%  | 1.0%   |
| 8 / 17 | 65.0%  | 1.0%   |

|       |   |
|-------|---|
| 01-01 | V/F Max Voltage                         |
| Range | 【230V:170.0~264.0, 460V: 323.0~528.0】 V |
| 01-02 | Maximum Frequency                       |
| Range | 【0.20 ~ 650.00】 Hz                      |
| 01-03 | Maximum Frequency Voltage Ratio         |
| Range | 【0.0 ~ 100.0】 %                         |
| 01-04 | Medium Frequency 2                      |
| Range | 【0.10 ~ 650.00】 Hz                      |
| 01-05 | Medium Frequency Voltage Ratio 2        |
| Range | 【0.0 ~ 100.0】 %                         |
| 01-06 | Medium Frequency 1                      |
| Range | 【0.10 ~ 650.00】 Hz                      |
| 01-07 | Medium Frequency Voltage Ratio 1        |
| Range | 【0.0 ~ 100.0】 %                         |
| 01-08 | Minimum Frequency                       |
| Range | 【0.10 ~ 650.00】 Hz                      |
| 01-09 | Minimum Frequency Voltage Ratio         |
| Range | 【0.0 ~ 100.0】 %                         |

**Notes:**

- Max output frequency is set automatically when parameter 01-00 ≠ 18.
- Maximum output frequency is limited by 01-12, frequency upper limit when 01-00 ≠ 18.
- Maximum output frequency is set by parameter 01-02 when 01-00 = 18.



|       |   |
|-------|---|
| 03-00 | Multifunction Input Term. S1  |
| 03-01 | Multifunction Input Term. S2  |
| 03-02 | Multifunction Input Term. S3  |
| 03-03 | Multifunction Input Term. S4  |
| 03-04 | Multifunction Input Term. S5  |
| 03-05 | Multifunction Input Term. S6  |
| Range | <p> <b>【0】</b> :Forward/Stop Command----- (Parameters 00-02/00-03=1&amp; 00-04)<br/> <b>【1】</b> :Reverse/Stop Command----- (Parameters 00-02/00-03=1&amp; 00-04)<br/> <b>【2】</b> :Speed Selection 1<br/> <b>【3】</b> :Speed Selection 2<br/> <b>【4】</b> :Speed Selection 3<br/> <b>【5】</b> :Speed Selection 4<br/> <b>【6】</b> :JOG Forward Command----- ( Parameters 00-18~00-20)<br/> <b>【7】</b> :JOG Reverse Command----- ( Parameters 00-18~00-20)<br/> <b>【8】</b> :Up Command----- ( Parameters 00-05/00-06=4&amp; 03-06/03-07)<br/> <b>【9】</b> :Down Command----- ( Parameters 00-05/00-06=4&amp; 03-06/03-07)<br/> <b>【10】</b> : 2<sup>nd</sup> Acc/Dec Times<br/> <b>【11】</b> : Disable Acc/Dec<br/> <b>【12】</b> : Main/ Alternative Run Source Select---- ( Parameters 00-02/00-03)<br/> <b>【13】</b> : Main/ Alternative Frequency Command Select---- ( Parameters 00-05/00-06)<br/> <b>【14】</b> : Rapid Stop (controlled deceleration stop)<br/> <b>【15】</b> : Base Block (Coast to stop)<br/> <b>【16】</b> : Disable PID Function ----- ( Parameter Group 10)<br/> <b>【17】</b> : Reset<br/> <b>【18】</b> : Enable Auto Run Mode----- ( Parameter Group 6)<br/> <b>【19】</b> : Speed Search<br/> <b>【20】</b> : Energy Saving(V/F)<br/> <b>【21】</b> : Reset PID integral value to Zero<br/> <b>【22】</b> : Counter Input<br/> <b>【23】</b> : Counter Reset<br/> <b>【24】</b> : PLC Input<br/> <b>【25】</b> : Pulse Input-Width Measure (S3)<br/> <b>【26】</b> : Pulse Input-Frequency Measure (S3)<br/> <b>【27】</b> : Enable KEB Function<br/> <b>【28】</b> : Fire mode function (Valid for software issued after rev. 1.1 ) </p> |

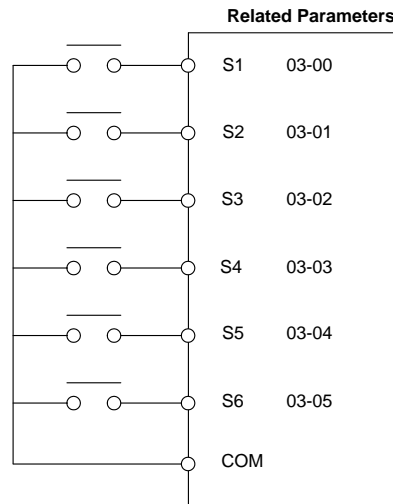

## 2-Wire control method

**Example:** FWD/STOP and REV/STOP from two inputs (S1 & S2)

Set 00-04= **【0】** ; S1:03-00= **【0】** (FWD/STOP); S2:03-01= **【1】** (REV/STOP);

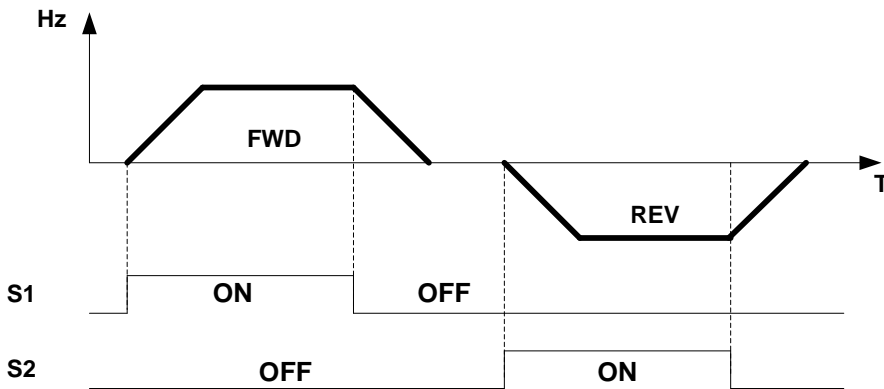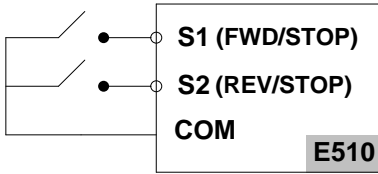


**Note:** If both forward and reverse commands are active the inverter treats this as a STOP command.


## 3-Wire control method

**Example:** Two separate push buttons for RUN & STOP and two position selector switch for FWD/REV

Set 00-04 = **【2】** , (3 wire control mode), to set terminals S1, S2 and S3 for 3-Wire control

When 3-Wire control mode is selected the setting for parameters 03-00, 03-01 and 03-02 are not active.

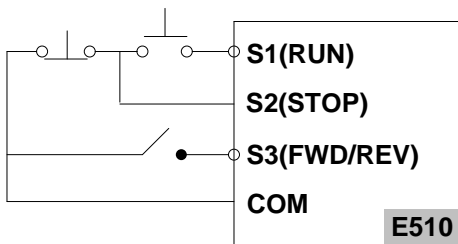

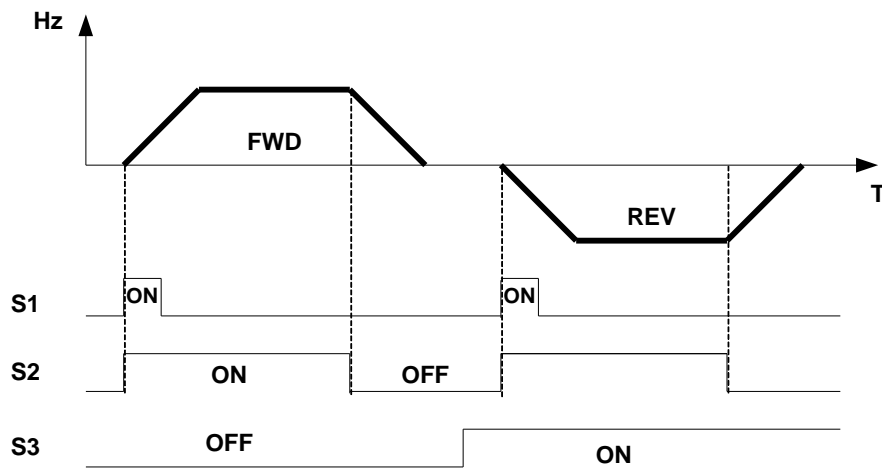

**03-00~03-05 = [5, 4, 3, 2] Preset speed selections**

Digital input S1 to S6 can be used to select between 16 different preset speeds (Preset speed 0 to 15).

Four speed selection bits are available and can be assigned to any of the digital input. The selected preset speed is based on the combination of the speed selection bits shown in the table below.

**Example:** Input S3 set for speed selection 1 bit, [03-02] = 2, Input S4 set for speed select 2 bit, [03-03] = 3, Input S5 set for speed select 3 bit, [03-04] = 4 and input S6 set for speed select 4 bit, [03-05] = 5.

| Preset speed | Function setting and state of any of the four inputs S1 ~ S6 |                       |                       |                       | Preset Frequency | Acceleration time | Deceleration time |
|--------------|--|-----------------------|-----------------------|-----------------------|------------------|-------------------|-------------------|
|              | Speed Select 4 (Sx=5)  | Speed Select 3 (Sx=4) | Speed Select 2 (Sx=3) | Speed Select 1 (Sx=2) |                  |                   |                   |
| speed 0      | OFF  | OFF                   | OFF                   | OFF                   | 05-01            | 05-17             | 05-18             |
| speed 1      | OFF  | OFF                   | OFF                   | ON                    | 05-02            | 05-19             | 05-20             |
| speed 2      | OFF  | OFF                   | ON                    | OFF                   | 05-03            | 05-21             | 05-22             |
| speed 3      | OFF  | OFF                   | ON                    | ON                    | 05-04            | 05-23             | 05-24             |
| speed 4      | OFF  | ON                    | OFF                   | OFF                   | 05-05            | 05-25             | 05-26             |
| speed 5      | OFF  | ON                    | OFF                   | ON                    | 05-06            | 05-27             | 05-28             |
| speed 6      | OFF  | ON                    | ON                    | OFF                   | 05-07            | 05-29             | 05-30             |
| speed 7      | OFF  | ON                    | ON                    | ON                    | 05-08            | 05-31             | 05-32             |
| speed 8      | ON   | OFF                   | OFF                   | OFF                   | 05-09            | 05-33             | 05-34             |
| speed 9      | ON   | OFF                   | OFF                   | ON                    | 05-10            | 05-35             | 05-36             |
| speed 10     | ON   | OFF                   | ON                    | OFF                   | 05-11            | 05-37             | 05-38             |
| speed 11     | ON   | OFF                   | ON                    | ON                    | 05-12            | 05-39             | 05-40             |
| speed 12     | ON   | ON                    | ON                    | ON                    | 05-13            | 05-41             | 05-42             |
| speed 13     | ON   | ON                    | ON                    | ON                    | 05-14            | 05-43             | 05-44             |
| speed 14     | ON   | ON                    | ON                    | ON                    | 05-15            | 05-45             | 05-46             |
| speed 15     | ON   | ON                    | ON                    | ON                    | 05-16            | 05-47             | 05-48             |

**03-0X = 【06】** : Forward jog run command, uses jog frequency parameter 00-18.

**Note:**

- Jog command has a higher priority than other frequency reference commands.
- Jog command uses stop mode set in parameter 07-09 when Jog command is active > 500ms.

**03-0X = 【07】** : Reverse jog run command, uses jog frequency parameter 00-18.


**Note:**

- Jog command has a higher priority than other frequency reference commands.
- Jog command uses stop mode set in parameter 07-09 when Jog command is active > 500ms.

**Note:** If Forward and Reverse Jog are active at the same time the inverter enters stop mode.

**03-0X = 【08】** : UP frequency command; set parameter 00-05 Frequency command to 4 to activate. When ON frequency reference increased by value set in parameter 03-06. If the input is kept on continuously, the frequency command increases accordingly until the upper frequency limit is reached.

**03-0X = 【09】** : Down frequency command; set parameter 00-05 Frequency command to 4 to activate. When ON frequency reference decreased by value set in parameter 03-06. If the input is kept on continuously, the frequency command decreases accordingly and in relation to settings for parameter 03-06 and 3-07 until zero speed is reached.

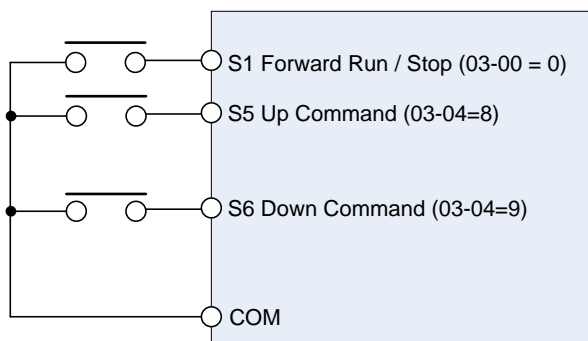

|                                      |               |                |      |      |
|--------------------------------------|---------------|----------------|------|------|
| <b>UP Command</b><br>(Terminal S5)   | 1             | 0              | 0    | 1    |
| <b>Down Command</b><br>(Terminal S6) | 0             | 1              | 0    | 1    |
| <b>Operation</b>                     | Accel<br>(UP) | Decel<br>(DWN) | Hold | Hold |


**03-00~03-05= 【10】** 2nd Acc/Dec time

When active the acceleration and deceleration time will be set according to value set in parameter 00-16 (acceleration time 2) and 00-17 (deceleration time 2).

When not-active the acceleration and deceleration time will be set according to value set in parameter 00-14(acceleration time 1) and 00-15 (deceleration time 1).




**Example:** 00-12 (Frequency upper limit) =60Hz  
 03-00= 0 (Terminal S1 FWD/STOP)  
 00-14 (accelerating time 1) = 10 sec  
 00-16 (accelerating time 2) =5 sec

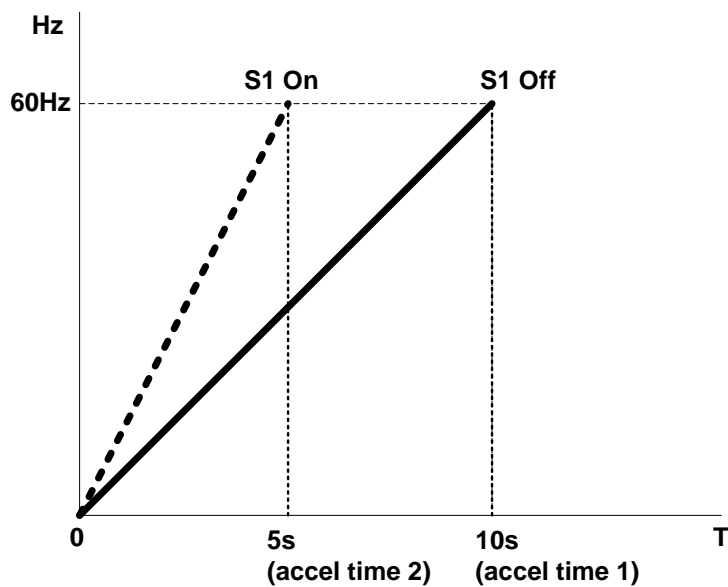

**03-00-03-05= 【11】 Disable Acc/Dec function**

When activated suspends the acceleration / deceleration operation and maintains the output frequency at current level.

Accel/Decel & Enable/Disable timing diagram using terminal S1 and parameter 03-00 = 11.

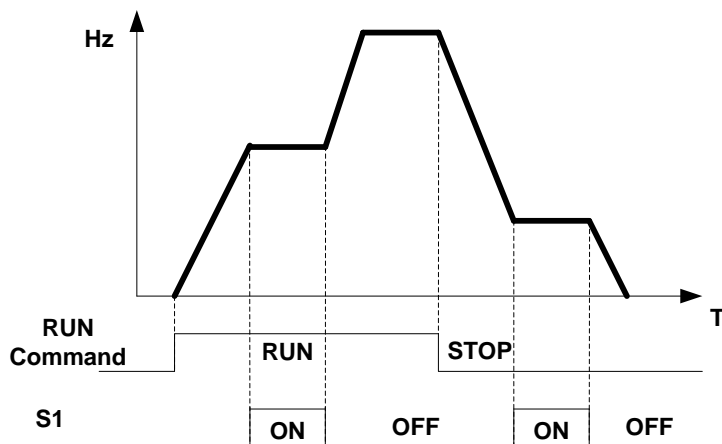

**03-00-03-05= 【12】 Main / Alternative Run Source Select**

When active, the run command source is set by parameter 00-03(Alternative Run source). When Input is off run command source is set by parameter 00-02 (Main run source).

**03-00~03-05= 【13】 Main/ Alternative Frequency Source Select**

When active the Alternative Frequency Source parameter 00-06 is used, otherwise Main Frequency Source is used parameter 00-05.

**03-00~03-05= 【14】 Rapid Stop (controlled deceleration stop)**

When active inverter decelerates to stop using deceleration time 2.

**03-00~03-05= 【15】 Base Block (Coast to stop)**

When active the inverter output is turned off.

**03-00~03-05= 【16】 Disable PID Function**

When active PID function is disabled.

**03-00~03-05= 【17】 Reset**

When active inverter resets active fault (same function as the Reset button on the keypad).

**03-00~03-05= 【18】 Auto \_ Run Mode**

When active the programmable auto- sequencer function is enabled, Refer to description of parameter group 6.

**03-00~03-05= 【19】 Speed Search Stop**

When active the inverter performs a speed-search by detecting the current speed of the motor and accelerating from there to the target speed.

**03-00~03-05= 【20】 Energy-saving operation**

When active the inverter output voltage is gradually decreased to match the required torque demand and as a result saves energy. Only for variable torque applications such as fans and pumps that require less torque when operation speed is reached. When input is turned off the output voltage gradually increases again back to the original output voltage.

**Note:** Acceleration and deceleration times in energy saving operation is identical to that of speed search operation.


**03-00~03-05= 【21】 Reset PID Integral value to Zero**

When active resets the PID integral value zero.

**03-00~03-05= 【22】 Counter Input**

Input used as counter input, set related parameters 03-21 ~03-22.

Count status can be viewed by setting parameter 12-00 to 8

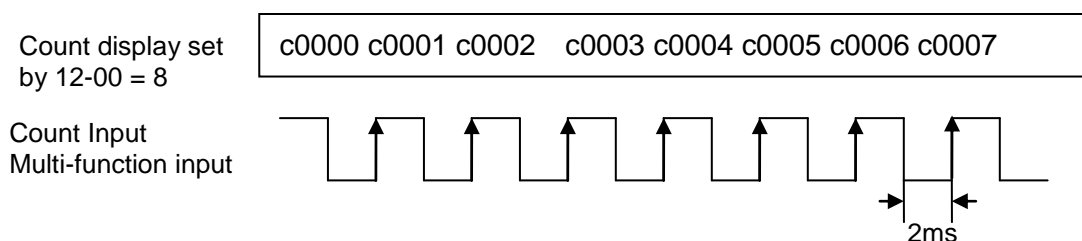

**03-00~03-05= 【23】 Counter Reset**

When active resets counter to 0.

**03-00~03-05= 【24】 PLC Input**

Input used for PLC logic.

**03-02= 【25】 Pulse Input-Width Measure (Available for S3 Input only)**

When 03-02=25, S3 is used for pulse width measurement.

Related parameters:

00-05=7 (Pulsed Speed Control)

03-27= 0.01~0.20 kHz (Pulse Input Frequency)

03-28=0.01~9.99

Inverter Frequency = duty cycle x (00-12) x (03-28) Hz (Limited by the Frequency Upper limit)

To adjust speed through pulse input duty cycle, set parameters as follows:

00-05=7; 03-02=25; 03-27=pulse input frequency; 03-28=1 (as per actual need)

When pulse input frequency is 200Hz, set 03-27=0.20 (must be correct). Along with the duty cycle of this 200Hz pulse input, inverter frequency is varied.

**Example 1:**

Pulse input frequency is 200Hz (03-27=0.20), duty cycle is 50%, frequency upper limit 50Hz (00-12=50.00), and 03-28=1. Inverter frequency is  $50\% \times 50.00 \times 1 = 25.00$  Hz

**Example 2:**

Pulse input frequency is 100Hz (03-27=0.10), duty cycle is 30%, frequency upper limit 50Hz (00-12=50.00), and 03-28=2. Inverter frequency is  $30\% \times 50.00 \times 2 = 30.00$  Hz

**Example 3:**

Pulse input frequency is 100Hz (03-27=0.10), duty cycle is 15%, frequency upper limit 650Hz (00-12=650.00), and 03-28=5. Inverter frequency is  $15\% \times 650.00 \times 5 = 487.50$  Hz

**Notes:**

- In this mode, pulse input frequency range is 0.01 kHz to 10.00 kHz.
- The examples above are based on a NPN input configuration. If PNP is used, the relationship between duty cycle and inverter frequency is reversed, so a 20% duty cycle equals 80% inverter frequency

**03-02= 【26】 Pulse Input-Frequency Measure (S3)**

When 03-02=26, S3 is used for frequency measurement.

Related Parameters:

00-05=7 (Pulsed Speed Control)

03-02=26 (S3 is the pulse input- frequency measurement)

03-28=0.01~9.99

Inverter Frequency =  $f \times (3-28)$  Hz, f: Pulse Input Frequency Hz (Limited by the Frequency Upper limit)

Set the following parameters to use pulse input for speed command:

00-05=7

03-02=26

03-28=1 (adjust if required)

03-27: Not used.

**Example 1:**

Pulse input frequency is 20Hz, frequency upper limit is 50Hz (00-12=50.00), and 03-28=1.

Inverter frequency is 20.00Hz

**Example 2:**

Pulse input frequency is 45Hz, frequency upper limit is 50Hz (00-12=50.00), and 03-28=1.

Inverter frequency is 45.00Hz

**Example 3:**

Pulse input frequency is 55Hz, frequency upper limit is 50Hz (00-12=50.00), and 03-28=1.

Inverter frequency is 50.00Hz

**Example 4:**

Pulse input frequency is 2000Hz, frequency upper limit is 650Hz (00-12=650.00), and 03-28=0.2.

Inverter frequency is  $2000 \times 0.2 = 400.00$ Hz

**Notes:**

- In this mode, pulse input frequency range is 0.01 kHz to 200Hz.
- Pulse input can only be selected for terminal S3
- PLC common is COM terminal on TM2

**03-00~03-05= 【27】 Enable KEB Function**

When active enables KEB (Kinetic Energy Braking) during acceleration. Refer to the parameter description of 07-14.

### 03-00~03-05= 【28】 Fire Mode Function

When active inverter runs at maximum speed (parameter 00-12) ignoring any protective functions. Fire Mode function can be used for applications following a fire where it is necessary for a motor to continue running without interruption.

**Example:** Smoke exhaust fans used in buildings for fire evacuation.

## ⚠ Caution

- The correct use of this function is the responsibility of the installer of the fire safety system. TWMC bears no responsibility for direct or indirect damages or loss incurred as a result of using this function.
- Warranty is void when inverter damage is caused by using Fire Mode.

### Notes:

- To enable Fire Mode function set parameter 08-17 = 1
- The fire Mode function is activated by using one of the multifunction inputs S1 to S6 to a value of 28. (Parameter 03-00~03-05).
- Fire mode can also be enabled by setting the functions of S1 to S6 via communication.

### When Fire Mode is active:

- The keypad shows FlrE, and Fire Mode activation is recorded in the inverter fault log.
- The inverter will run up to the maximum frequency set in 00-12.
- The inverter will keep running unless main power is lost or the inverter breaks down.
- When Fire Mode is activated, all protection functions and alarms (e.g. ES, BB, OV, OC ...), will be ignored.
- STOP key on the keypad is disabled during Fire Mode operation.
- To reset fire mode: turn power off, remove fire mode input signal, and power-up inverter.

|       |  |
|-------|--|
| 03-11 | Multifunction Output Relay RY 1 functions. ( Terminals R1C,R1B, R1A )  |
| 03-12 | Multifunction Output Relay RY 2 functions. ( Terminals R2B, R2A )  |
| Range | <b>【0】</b> :Run<br><b>【1】</b> :Fault<br><b>【2】</b> :Set Frequency within the preset range. -----( refer to 03-14)<br><b>【3】</b> :Set Frequency reached. As set by (3-13±3-14) ----- ( refer to 03-13/03-14)<br><b>【4】</b> :Output Frequency Detection 1 (> 03-13) -----( refer to 03-13)<br><b>【5】</b> :Output Frequency Detection 2 (< 03-13) -----( refer to 03-13)<br><b>【6】</b> :Auto-restart<br><b>【7】</b> :Momentary AC Power Loss----- ( refer to 07-00)<br><b>【8】</b> :Rapid Stop ( Decelerate to Stop)<br><b>【9】</b> :Base Block Stop Mode<br><b>【10】</b> :Motor Overload Protection (OL1)<br><b>【11】</b> :Drive Overload Protection (OL2)<br><b>【12】</b> :Over Torque Threshold Level (OL3)<br><b>【13】</b> :Preset Current level Reached ----- ( refer to 03-15/03-16)<br><b>【14】</b> :Preset Brake Frequency Reached ----- (refer to 03-17/03-18)<br><b>【15】</b> :PID Feedback Signal Loss<br><b>【16】</b> :Single pre-set count (3-22)<br><b>【17】</b> :Dual pre-set count (3-22~23)<br><b>【18】</b> :PLC status indicator (00-02)<br><b>【19】</b> :PLC control<br><b>【20】</b> :Zero Speed |
| 03-13 | Frequency Reached Level  |
| Range | <b>【0.00~650.00】</b> Hz  |
| 03-14 | Frequency Reached Detection Range (±)  |
| Range | <b>【0.00~30.00】</b> Hz   |

**Output relay RY function descriptions:**

03-11/03-12 = **【0】** : Run

Output is active when run command is ON or output frequency is greater than 0


03-11/03-12 = **【1】** : Fault

Output is active during fault condition.

03-11/03-12 = **【2】** Set Frequency within the preset range

Output is active when the output frequency falls within the frequency reference minus the frequency detection width (03-14).

When Output Freq. = Preset Freq. Reached Setting (03-13) - Preset Freq.  
Reached Detection Range (03-14), Relay Output will be ON

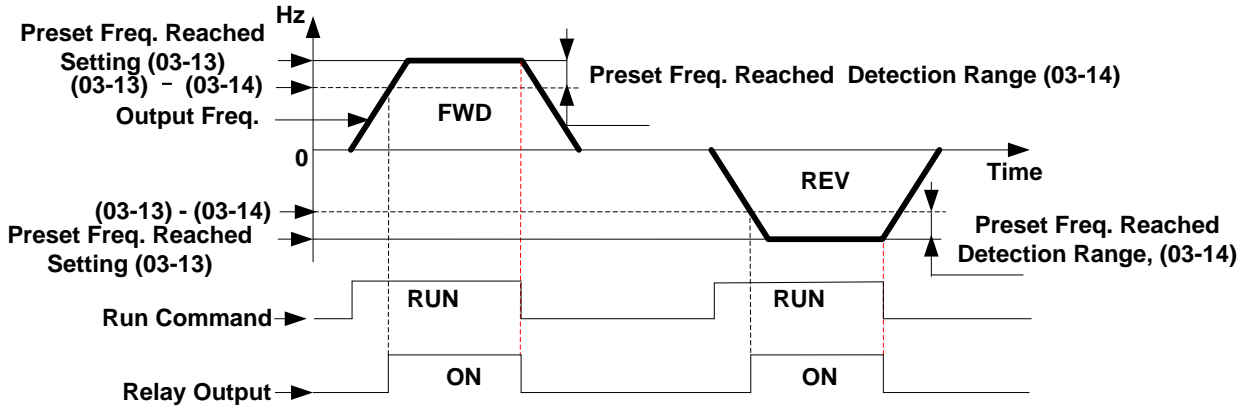


**Example:** Sets 03-13=30 and 03-14=5, Relay is ON when output frequency is  $\geq 25$ Hz and  $\leq 30$ Hz.

**03-11=【3】 : Set Frequency reached**

Output is active when the output frequency falls within the frequency detection width (03-14) of the set frequency detection level (03-13).


When, Freq. Detection Range Lower Limit < Setting Freq. < Freq. Detection Range Upper Limit  
and Detection Range Lower Limit < Output Freq. < Freq. Detection Range Upper Limit  
Relay output is ON (Allowable tolerance  $\pm 0.01$ )

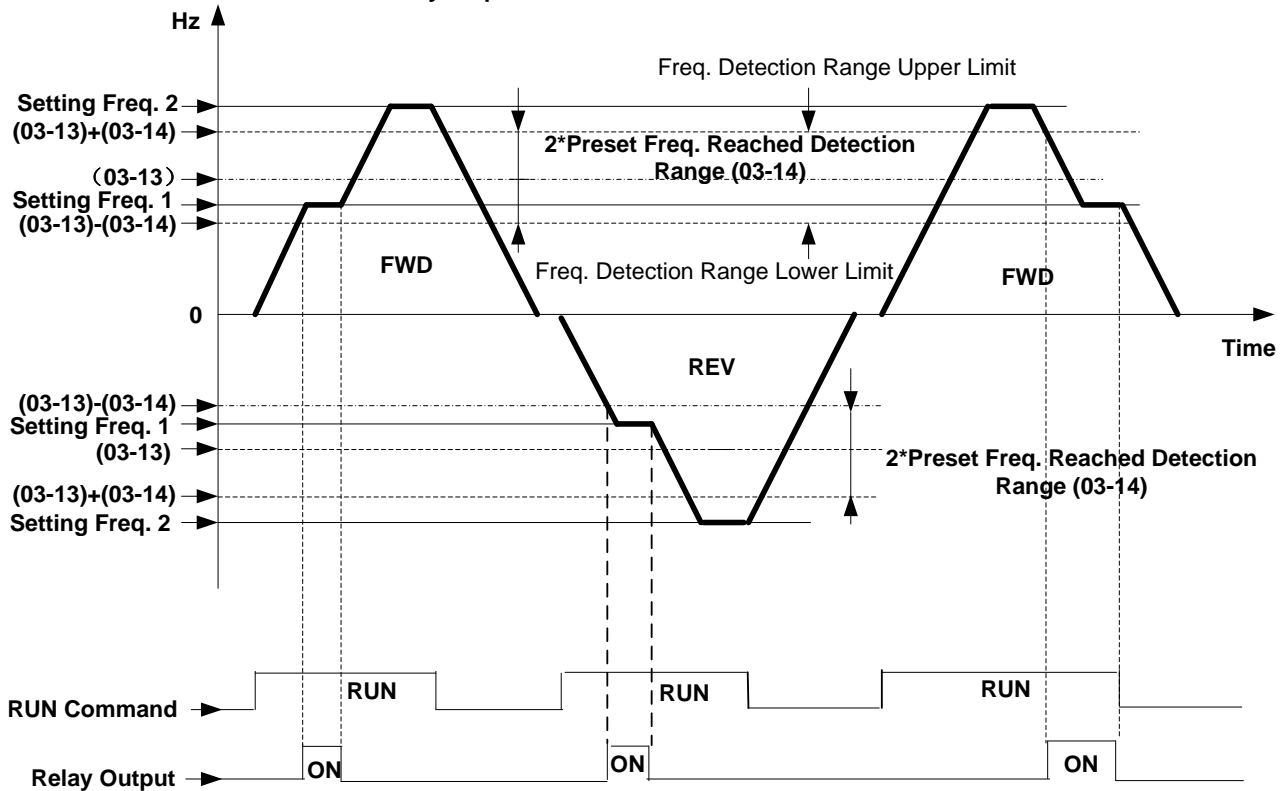

**03-11=【4】 : Output Frequency Detection 1**

Output is active when the output frequency rises above the frequency detection level (03-13) and deactivates when the output frequency falls below frequency detection level (03-13).


When Output Frequency > Preset Frequency Reached Setting (03-13),  
Relay output is ON

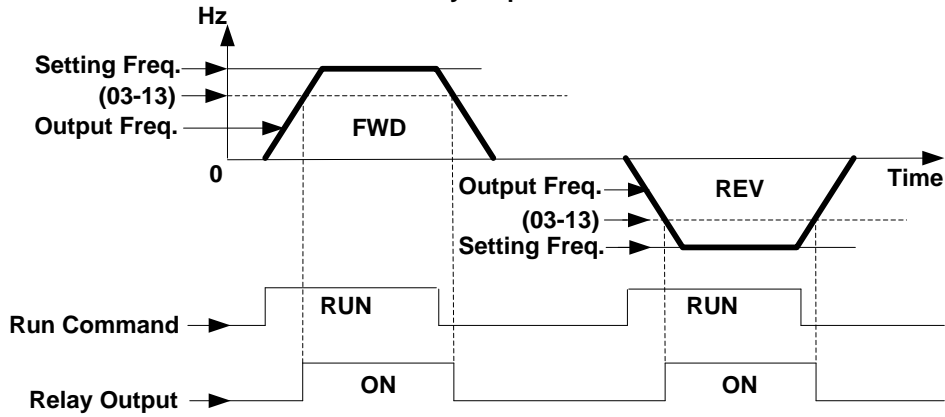

**03-11=【5】** : Output Frequency Detection 2

Output is active when the output frequency is below the frequency detection level (03-13) and turns off when the output frequency falls below frequency detection level (03-13).

When Output Freq.<Preset Freq. Reached Setting (03-13),  
Relay output will be ON

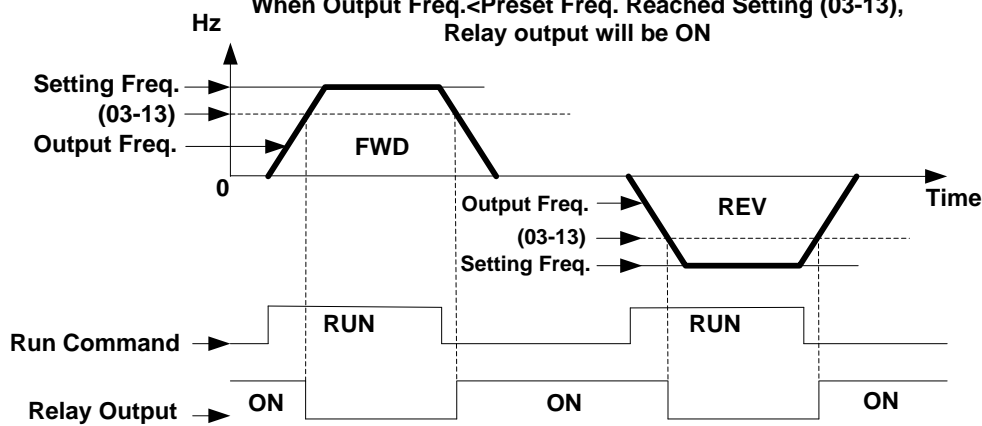


|       |                                       |
|-------|---------------------------------------|
| 03-13 | Frequency Reached Level               |
| Range | 【0.00~650.00】 Hz                      |
| 03-14 | Frequency Reached Detection Range (±) |
| Range | 【0.00~30.00】 Hz                       |



03-11/03-12= **【20】** : Zero Speed

|     |   |
|-----|---|
| Off | Output Frequency => Minimum Frequency (01-08, Fmin) |
| On  | Output Frequency < Minimum Frequency (01-08, Fmin)  |

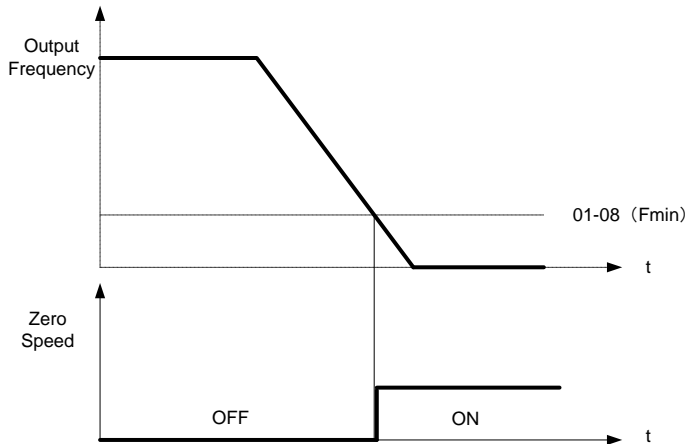

| 04-00 | Analog Voltage & Current Input Selections AI1/AI2 |                |
|-------|---|----------------|
| Range | AI1   | AI2            |
|       | <b>【0】</b> : 0~10V (0~20mA)                       | 0~10V (0~20mA) |
|       | <b>【1】</b> : 0~10V (0~20mA)                       | 2~10V (4~20mA) |
|       | <b>【2】</b> : 2~10V (4~20mA)                       | 0~10V (0~20mA) |
|       | <b>【3】</b> : 2~10V (4~20mA)                       | 2~10V (4~20mA) |

- Use JP2/JP3 to select analog signal type (voltage or current input).
- Parameter 04-00 must be set according to JP2 / JP3 setting.

**Analog input scaling:**

■ **Current Input Mode**

$$AI (0\sim 20mA) : F (Hz) = \frac{I (mA)}{20(mA)} \times (00 - 12)$$

$$AI (4\sim 20mA) : F (Hz) = \frac{I - 4(mA)}{20 - 4(mA)} \times (00 - 12), I \geq 4$$

■ **Voltage Input Mode**

$$AI (0\sim 10V) : F (Hz) = \frac{V (v)}{10(v)} \times (00 - 12)$$

$$AI (2\sim 10V) : F (Hz) = \frac{V - 2(v)}{10 - 2(v)} \times (00 - 12), V \geq 2$$

|              |  |
|--------------|--|
| <b>04-01</b> | <b>AI1 Signal Verification Scan Rate</b> |
| <b>Range</b> | <b>【1~200】 2msec</b>                     |
| <b>04-02</b> | <b>AI1 Gain</b>                          |
| <b>Range</b> | <b>【0 ~ 1000】 %</b>                      |
| <b>04-03</b> | <b>AI1 Bias</b>                          |
| <b>Range</b> | <b>【0~ 100】 %</b>                        |
| <b>04-04</b> | <b>AI1 Bias Selection</b>                |
| <b>Range</b> | <b>【0】 : Positive 【1】 : Negative</b>     |
| <b>04-05</b> | <b>AI1 Slope</b>                         |
| <b>Range</b> | <b>【0】 : Positive 【1】 : Negative</b>     |
| <b>04-06</b> | <b>AI2 signal verification Scan Rate</b> |
| <b>Range</b> | <b>【1~200】 2msec</b>                     |
| <b>04-07</b> | <b>AI2 Gain</b>                          |
| <b>Range</b> | <b>【0 ~ 1000】 %</b>                      |
| <b>04-08</b> | <b>AI2 Bias</b>                          |
| <b>Range</b> | <b>【0 ~ 100】 %</b>                       |
| <b>04-09</b> | <b>AI2 Bias Selection</b>                |
| <b>Range</b> | <b>【0】 : Positive 【1】 : Negative</b>     |
| <b>04-10</b> | <b>AI2 Slope</b>                         |
| <b>Range</b> | <b>【0】 : Positive 【1】 : Negative</b>     |

Set 04-01 and 04-06 for analog signal verification.

All analog inputs (AI1, AI2) have a 1<sup>st</sup> order programmable input filter that can be adjusted when noise is present on each of the incoming analog signal to prevent erratic drive control. Inverter reads the average values of A/D signal once per (04-01/04-06 x 2ms).

**Note:** Increasing the filter time causes the drive operation to become more stable but less responsive to change to the analog input.

AI1 Analog Voltage input scaling examples by adjusting Gain, Bias & Slope parameters (04-02~04-05)



(1) **Positive Bias type** (04-04= 0), Bias (04-03) and Slope (04-05).

**Figure1:**

|          | <b>04-02</b> | <b>04-03</b> | <b>04-04</b> | <b>04-05</b> |
|----------|--------------|--------------|--------------|--------------|
| <b>A</b> | 100%         | 50%          | 0            | 0            |
| <b>B</b> | 100%         | 0%           | 0            | 0            |

**Figure2:**

|          | <b>04-02</b> | <b>04-03</b> | <b>04-04</b> | <b>04-05</b> |
|----------|--------------|--------------|--------------|--------------|
| <b>C</b> | 100%         | 50%          | 0            | 1            |
| <b>D</b> | 100%         | 0%           | 0            | 1            |

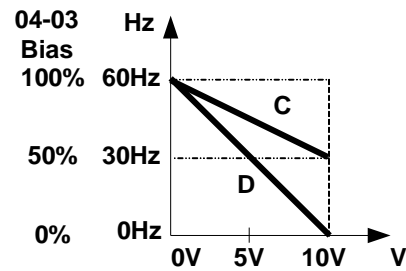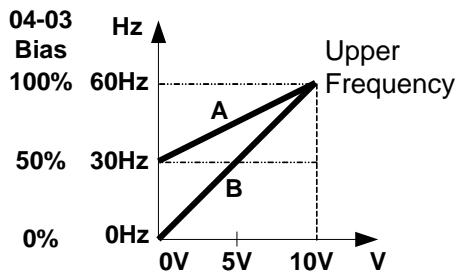



(2) **Negative Bias type** (04-04= 1), Bias (04-03) and Slope (04-05).

Figure3:

|   | 04-02 | 04-03 | 04-04 | 04-05 |
|---|-------|-------|-------|-------|
| E | 100%  | 20%   | 1     | 0     |

Figure4:

|   | 04-02 | 04-03 | 04-04 | 04-05 |
|---|-------|-------|-------|-------|
| F | 100%  | 50%   | 1     | 1     |

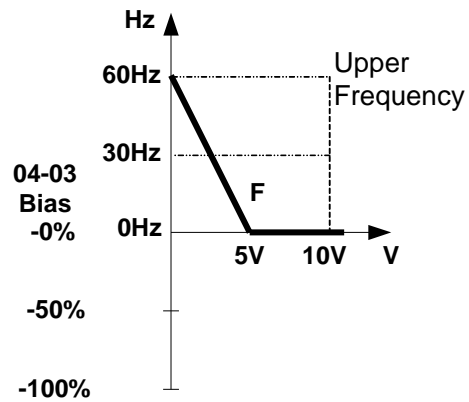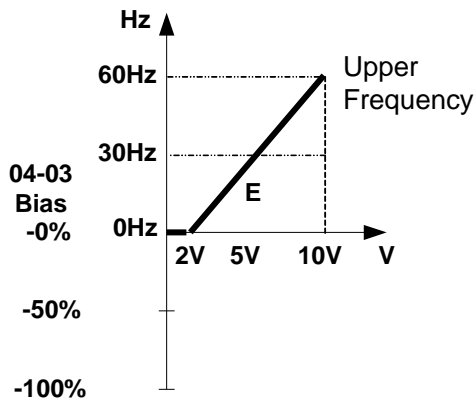



(3) **Offset bias set to 0% (04-03) and effect of modifying Analog Gain (04-02), Bias type (04-04) and slope type (04-05) are shown in shown Fig 5&6.**

Figure5:

|    | 04-02 | 04-03 | 04-04 | 04-05 |
|----|-------|-------|-------|-------|
| A' | 50%   | 0%    | 0/1   | 0     |
| B' | 200%  | 0%    | 0/1   | 0     |

Figure6:

|    | 04-02 | 04-03 | 04-04 | 04-05 |
|----|-------|-------|-------|-------|
| C' | 50%   | 0%    | 0/1   | 1     |
| D' | 200%  | 0%    | 0/1   | 1     |

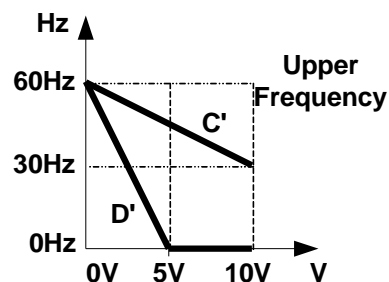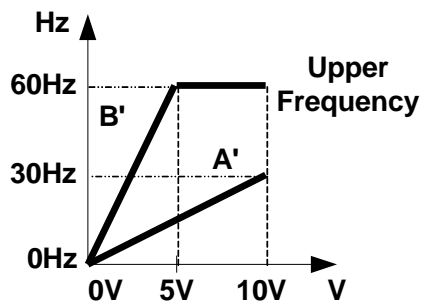

(4) Various other examples of analog input scaling and modification are shown in following figures 7,8,9 & 10.

Figure7:

|   | 04-02 | 04-03 | 04-04 | 04-05 |
|---|-------|-------|-------|-------|
| a | 50%   | 50%   | 0     | 0     |
| b | 200%  | 50%   | 0     | 0     |

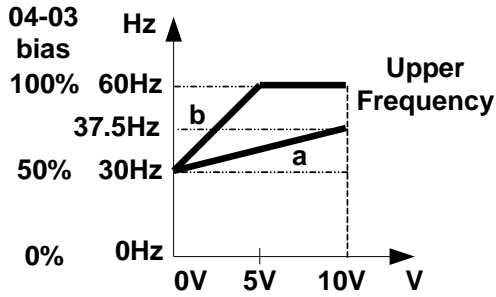


Figure8:

|   | 04-02 | 04-03 | 04-04 | 04-05 |
|---|-------|-------|-------|-------|
| c | 50%   | 50%   | 0     | 1     |
| d | 200%  | 50%   | 0     | 1     |

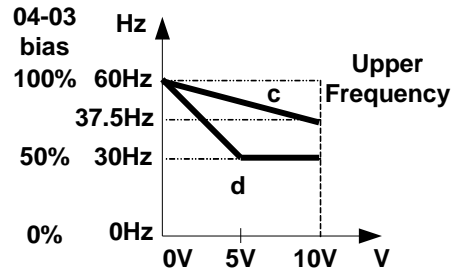


Figure9:

|   | 04-02 | 04-03 | 04-04 | 04-05 |
|---|-------|-------|-------|-------|
| e | 50%   | 20%   | 1     | 0     |
| f | 200%  | 20%   | 1     | 0     |


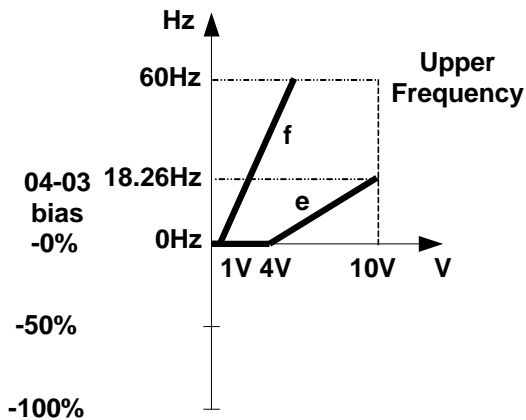



Figure10:

|   | 04-02 | 04-03 | 04-04 | 04-05 |
|---|-------|-------|-------|-------|
| g | 50%   | 50%   | 1     | 1     |
| h | 200%  | 0%    | 0     | 1     |

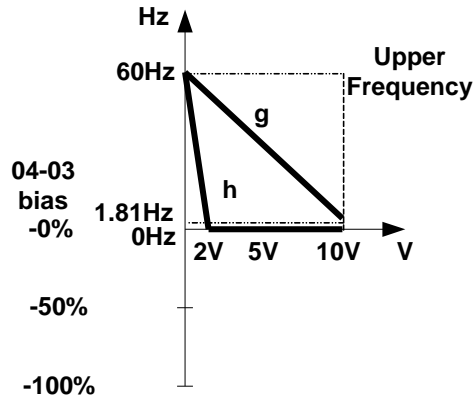

|              |   |
|--------------|---|
| <b>04-11</b> | <b>Analog Output (AO) Function Selection.</b>   |
| <b>Range</b> | <b>【0】</b> :Output Frequency<br><b>【1】</b> :Frequency Command<br><b>【2】</b> :Output Voltage<br><b>【3】</b> :DC Bus Voltage<br><b>【4】</b> :Output Current |

**Example:** Set 04-11 as required according to the table below.

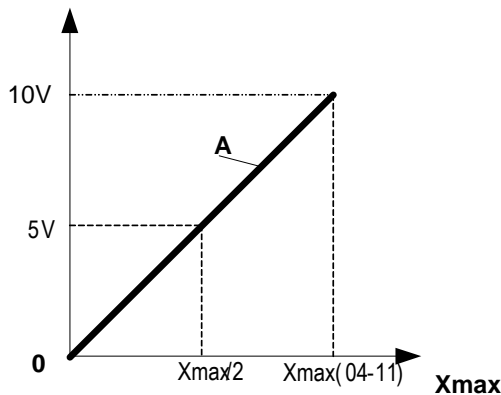

| <b>04-11</b> | <b>A</b>          | <b>Xmax</b>                      |
|--------------|-------------------|----------------------------------|
| <b>【0】</b>   | Output frequency  | upper frequency limit            |
| <b>【1】</b>   | Frequency Setting | upper frequency limit            |
| <b>【2】</b>   | Output voltage    | Motor Rated Voltage              |
| <b>【3】</b>   | DC Bus Voltage    | 230V: 0~400VDC<br>460V: 0~800VDC |
| <b>【4】</b>   | Output current    | rated current of inverter        |

|              |   |
|--------------|---|
| <b>04-12</b> | <b>AO Gain</b>                            |
| <b>Range</b> | <b>【0 ~ 1000】 %</b>                       |
| <b>04-13</b> | <b>AO Bias</b>                            |
| <b>Range</b> | <b>【0 ~ 100】 %</b>                        |
| <b>04-14</b> | <b>AO Bias Selection</b>                  |
| <b>Range</b> | <b>【0】 : positive      【1】 : Negative</b> |
| <b>04-15</b> | <b>AO Slope</b>                           |
| <b>Range</b> | <b>【0】 : positive      【1】 : Negative</b> |
| <b>04-16</b> | <b>F-Gain</b>                             |
| <b>Range</b> | <b>【0】 : Invalid      【1】 : Effective</b> |

- Set Analog output function (04-11).
- Output level is 0-10Vdc.
- Output voltage level can be scaled and adjusted with parameters 04-12 to 04-15 if needed.
- The analog output scaling is the same as examples shown previously for Analog Voltage Input (AI1) parameters 4-02 to 4-05.

**Note:** The max output voltage is 10Vdc based on the inverter hardware. Use external devices that require a maximum of 10Vdc signal.

|              |   |
|--------------|---|
| <b>07-00</b> | <b>Momentary power loss and restart</b>   |
| <b>Range</b> | <b>【0】</b> :Momentary Power Loss and Restart Disable<br><b>【1】</b> :Momentary Power Loss and Restart Enable |

Inverter output will be turned off during a sudden drop in input voltage below the under voltage level.

**07-00=0:** Inverter trips on “UV” fault on power loss and will not restart.

**07-00=1:** Inverter resumes operation at half of the output frequency before power-loss after power has been restored. There is no limitation on the number of restarts.

The momentary power loss function is enabled as long as the inverter CPU still has power and the inverter will restart when power is restored based on the setting of parameters 00-02, 07-04 and status of External run command.

**Caution:** After a power loss and Run mode is set to External Run (00-02=1) and Direct start on power up is enabled (07-04=0) the inverter will automatically start when power is restored.

To ensure safety of operators and to avoid any damages to the machinery, all necessary safety measure must be taken and an inverter input disconnect switch must be used.

|              |  |
|--------------|--|
| <b>07-01</b> | <b>Auto Restart Delay Time</b>         |
| <b>Range</b> | <b>【0.0~800.0】 s</b>                   |
| <b>07-02</b> | <b>Number of Auto Restart Attempts</b> |
| <b>Range</b> | <b>【0~10】</b>                          |

**Automatic restart operation:**

07-02= **【0】** , the inverter will not perform an automatic restart

07-02> **【0】** , 07-01= **【0】**

Fault is detected. The inverter turns off the output, displays the fault on the keypad and waits 0.5 sec. before accepting another run / automatic restart command.

07-02> **【0】** , 07-01> **【0】**

Active fault is reset and a speed search operation is performed. The time between each fault restart attempt is set by parameter 07-01.

When the total number of restart attempts has exceed the number of automatic restart attempts set in parameter 07-02, the inverter will turn off the output and the fault contact is activated.

When the automatic restart function is enabled the internal automatic restart attempt counter is reset based on the following actions:

1. No fault occurs in 10 minutes or longer after the automatic restart
2. Reset command to clear fault via input terminal or using the keypad
3. Power to the inverter is turned off and back on again

The automatic restart function can be used for the following faults. Please note that when the fault is not listed in the table the inverter will not attempt an automatic restart.

- OC-S** Over current at start
- OV-C** Over voltage during operation / deceleration
- PF** Input phase loss
- OC** Over current
- OL1** Motor overload
- OL2** Motor overload
- OL3** Over Torque
- LV** Low voltage during operation
- OVSP** Over Speed
- LIFE 1** Maintenance required input surge protection circuit
- LIFE 2** Maintenance required control Circuit main capacitors
- LIFE 3** Maintenance required DC-bus capacitors

**Note: Auto restart after a fault will not function during DC injection braking or decelerating to stop.**

| 08-00 | Trip Prevention Selection  |
|-------|--|
| Range | <b>【xxxx0】</b> :Enable Trip Prevention During Acceleration<br><b>【xxxx1】</b> :Disable Trip Prevention During Acceleration<br><b>【xx0x】</b> :Enable Trip Prevention During Deceleration<br><b>【xx1x】</b> :Disable Trip Prevention During Deceleration<br><b>【xx0xx】</b> :Enable Trip Prevention in Run Mode<br><b>【xx1xx】</b> :Disable Trip Prevention in Run Mode<br><b>【x0xxx】</b> :Enable over voltage Prevention in Run Mode<br><b>【x1xxx】</b> :Disable over voltage Prevention in Run Mode |

| 08-01 | Trip Prevention Level During Acceleration |
|-------|---|
| Range | <b>【50 ~ 200】</b> %                       |

- Trip prevention adjustment level during acceleration to prevent over current (OC-A) trips.
- If trip prevention during acceleration is enabled and an over current condition occurs due to a heavy load, the acceleration is put on hold until the output current drops below the setting of parameter 08-01 after which acceleration resumes.

| 08-02 | Trip Prevention Level During Deceleration |
|-------|---|
| Range | <b>【50 ~ 200】</b> %                       |

- Trip prevention adjustment level during deceleration to prevent over Voltage (OV-C) trips.
- If trip prevention during deceleration is enabled and an over voltage condition occurs during stopping due to the load (regenerative energy), deceleration is put on hold until the output current level falls below the setting of parameter 08-02 after which deceleration resumes.

| 08-03 | Trip Prevention Level During Continuous Run Mode |
|-------|--|
| Range | <b>【50 ~ 200】</b> %                              |

- Trip prevention adjustment level during continuous Run to prevent over current (OC-C) trips.
- If trip prevention during continuous Run is enabled and an over current occurs due the load such as a sudden transient load, the output frequency is reduced by decelerating to a lower speed until the over current level falls

below the setting of parameter 08-0301 after which acceleration resumes back to the target frequency.

|              |  |
|--------------|--|
| <b>08-04</b> | <b>Over Voltage Prevention Level During Run Mode</b>                     |
| <b>Range</b> | <b>【350.0VDC~390.0VDC】 (230V class) 【700.0VDC~780.0VDC】 (460V class)</b> |

- Over voltage prevention level can be set by parameter 08-04 if needed.
- When the DC bus voltage rises above level set in 08-04 an over voltage fault will occur.

|              |  |
|--------------|--|
| <b>08-05</b> | <b>Electronic Motor Overload Protection Operation Mode (OL1)</b> |
| <b>Range</b> | <b>【0】 : Disable<br/>【1】 : Enable</b>                            |

The electronic motor overload protection function estimates the motor overload level based on the output current, output frequency, motor characteristics and time. The motor overload trip time depends on the motor rated current when the output current is greater than motor FLA.

|              |  |
|--------------|--|
| <b>12-00</b> | <b>Display Mode</b>  |
| <b>Range</b> | <b>0 0 0 0 0</b><br><b>MSD            LSD</b><br><b>00000~88888    Each digit can be set from 0 to 8 as listed below.</b><br><b>【0】 :Disable display(frequency&amp; parameters)</b><br><b>【1】 :output Current</b><br><b>【2】 :output Voltage</b><br><b>【3】 :DC voltage</b><br><b>【4】 :Temperature</b><br><b>【5】 :PID feedback</b><br><b>【6】 :AI1</b><br><b>【7】 :AI2</b><br><b>【8】 :Count Status</b> |

**Note:** The highest bit is used for power-up monitor. The 4 least significant bits can be used to customize the display sequence see chapter 4.1.3.

|              |   |
|--------------|---|
| <b>12-01</b> | <b>PID Feedback Display format</b>  |
| <b>Range</b> | <b>【0】 :Displayed in Integer (xxx)</b><br><b>【1】 :One Decimal Place (xx.x)</b><br><b>【2】 :Two Decimal Places (x.xx)</b> |

|              |   |
|--------------|---|
| <b>12-02</b> | <b>PID Feedback Display Unit Setting</b>                                    |
| <b>Range</b> | <b>【0】 :xxx--</b><br><b>【1】 :xxxpb(pressure)</b><br><b>【2】 :xxxfl(flow)</b> |

|              |   |
|--------------|---|
| <b>12-03</b> | <b>Custom Units (Line Speed) Display Mode</b> |
| <b>Range</b> | <b>【0~65535】 Rpm</b>                          |

Set motor rated RPM for the inverter to display the actual motor speed based on the output frequency.  
 Motor synchronous speed = 120 x Rated frequency ÷ Number of poles.




|              |  |
|--------------|--|
| <b>12-04</b> | <b>Custom Units (Line Speed) Display Mode</b>  |
| <b>Range</b> | <b>【0】</b> :Drive Output Frequency is Displayed<br><b>【1】</b> :Line Speed is Displayed in Integer (xxxxx)<br><b>【2】</b> :Line Speed is Displayed with One Decimal Place (xxxx.x)<br><b>【3】</b> :Line Speed is Displayed with Two Decimal Places (xxx.xx)<br><b>【4】</b> :Line Speed is Displayed with Three Decimal Places (xx.xxx) |

**12-04≠0**, line speed is displayed while the inverter is running or stopped.


|              |  |
|--------------|--|
| <b>12-05</b> | <b>Inputs and output Logic status display (S1 to S6) &amp; RY1~2</b> |
| <b>Range</b> | <b>Read only(Panel read only)</b>                                    |

Terminals S1-S6 are represented using two segments of each digit. Segment turns on when input is active. The bottom segments of each of the first three digits are used to represent the digital outputs (R1, R2, DO1). Segments turn on when output is active.

**Example1:** S1~S6 are ON

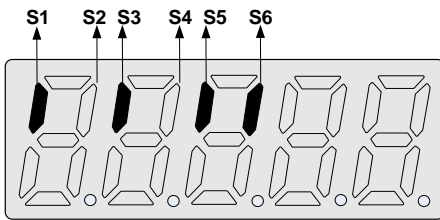

**Example2:** RY1, RY2 and PLC are ON

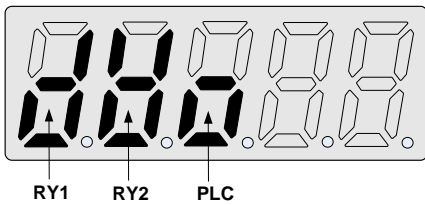

|              |  |
|--------------|--|
| <b>13-02</b> | <b>Fault Log Display (Latest 3 faults)</b> |
| <b>Range</b> | ----                                       |

Last three faults are stored using FIFO mechanism, whenever a new fault occurs the previous faults are pushed down. Example: Fault stored in 2.xxx is moved to 3.xxx and 1.xxx is moved to 2.xxx. The most recent fault will be stored on position 1.xxx.

**Notes:**

- Use Up ▲ and Down ▼ keys to scroll between the fault registers.
- Pressing the reset key when parameter 13-02 is displayed will clear all three fault registers and the display for each register will change to 1. ---, 2. ---, 3. ---.
- Fault log content 1.OC-C'; means that most recent fault is OC-C, etc...

|              |   |
|--------------|---|
| <b>13-08</b> | <b>Reset Drive to Factory Settings</b>  |
| <b>Range</b> | <b>【1150】 : Reset to factory setting. 50Hz system</b><br><b>【1160】 : Reset to factory setting. 60 Hz system.</b><br><b>【1112】 : RESET PLC</b> |

Use parameter 13-08 to initialize the inverter to factory default. It is recommended to write down the modified parameters before initializing the inverter. After initialization, the value of 13-08 will return to zero automatically.

## Appendix: UL Instructions

### Danger

#### Electric Shock Hazard

**Do not connect or disconnect wiring while the power is on.  
Failure to comply will result in death or serious injury.**

### Warning

#### Electric Shock Hazard

**Do not operate equipment with covers removed.**

Failure to comply could result in death or serious injury.

The diagrams in this section may show inverters without covers or safety shields to show details. Be sure to reinstall covers or shields before operating the inverters and run the inverters according to the instructions described in this manual.

**Always ground the motor-side grounding terminal.**

Improper equipment grounding could result in death or serious injury by contacting the motor case.

**Do not touch any terminals before the capacitors have fully discharged.**

Failure to comply could result in death or serious injury.

Before wiring terminals, disconnect all power to the equipment. The internal capacitor remains charged even after the power supply is turned off. After shutting off the power, wait for at least the amount of time specified on the inverter before touching any components.

**Do not allow unqualified personnel to perform work on the inverter.**

Failure to comply could result in death or serious injury.

Installation, maintenance, inspection, and servicing must be performed only by authorized personnel familiar with installation, adjustment, and maintenance of inverters.

**Do not perform work on the inverter while wearing loose clothing, jewelry, or lack of eye protection.**

Failure to comply could result in death or serious injury.

Remove all metal objects such as watches and rings, secure loose clothing, and wear eye protection before beginning work on the inverter.

**Do not remove covers or touch circuit boards while the power is on.**

Failure to comply could result in death or serious injury.

## Warning

### Fire Hazard

**Tighten all terminal screws to the specified tightening torque.**

Loose electrical connections could result in death or serious injury by fire due to overheating of electrical connections.

**Do not use an improper voltage source.**

Failure to comply could result in death or serious injury by fire.

Verify that the rated voltage of the inverter matches the voltage of the incoming power supply before applying power.

**Do not use improper combustible materials.**

Failure to comply could result in death or serious injury by fire. Attach the inverter to metal or other noncombustible material.

## NOTICE

**Observe proper electrostatic discharge procedures (ESD) when handling the inverter and circuit boards.**

Failure to comply may result in ESD damage to the inverter circuitry.

**Never connect or disconnect the motor from the inverter while the inverter is outputting voltage.**

Improper equipment sequencing could result in damage to the inverter.

**Do not use unshielded cable for control wiring.**

Failure to comply may cause electrical interference resulting in poor system performance. Use shielded twisted-pair wires and ground the shield to the ground terminal of the inverter.

**Do not modify the inverter circuitry.**

Failure to comply could result in damage to the inverter and will void warranty. TECO is not responsible for any modification of the product made by the user. This product must not be modified.

**Check all the wiring to ensure that all connections are correct after installing the inverter and connecting any other devices.**

Failure to comply could result in damage to the inverter.

## ❖ **UL Standards**

The UL/cUL mark applies to products in the United States and Canada and it means that UL has performed product testing and evaluation and determined that their stringent standards for product safety have been met. For a product to receive UL certification, all components inside that product must also receive UL certification.



## ❖ **UL Standards Compliance**

This inverter is tested in accordance with UL standard UL508C and complies with UL requirements. To ensure continued compliance when using this inverter in combination with other equipment, meet the following conditions:

### ■ **Installation Area**

Do not install the inverter to an area greater than pollution severity 2 (UL standard).

## ■ Main Circuit Terminal Wiring

UL approval requires crimp terminals when wiring the inverter's main circuit terminals. Use crimping tools as specified by the crimp terminal manufacturer. TECO recommends crimp terminals made by NICHIFU for the insulation cap.

The table below matches inverter models with crimp terminals and insulation caps. Orders can be placed with a TECO representative or directly with the TECO sales department.

### Closed-Loop Crimp Terminal Size

| Drive Model | Wire Gauge<br>mm <sup>2</sup> , (AWG) |                       | Terminal | Crimp<br>Terminal | Tool             | Insulation Cap |
|-------------|---------------------------------------|-----------------------|----------|-------------------|------------------|----------------|
|             | R/L1 / S/L2 /<br>T/L3                 | U/T1 / V/T2 /<br>W/T3 |          |                   |                  |                |
| E510        |                                       |                       | Screws   | Model No.         | Machine No.      | Model No.      |
| 201         | 2.1 (14)                              |                       | M3.5     | R2-3.5            | Nichifu NH 1 / 9 | TIC 2          |
| 202         | 3.3(12)                               |                       | M4       | R3.5-4            | Nichifu NH 1 / 9 | TIC 3.5        |
| 202-H3      | 2.1 (14)                              |                       | M3.5     | R2-3.5            | Nichifu NH 1 / 9 | TIC 2          |
| 205         | 5.3(10)                               |                       | M4       | R5.5-4            | Nichifu NH 1 / 9 | TIC 5.5        |
| 210         | 8.4(8)                                |                       | M5       | R8-5              | Nichifu NH 1 / 9 | TIC 8          |
| 220         | 21.2(4)                               |                       | M5       | R22-5             | Nichifu NOP 150H | TIC 22         |
| 402         | 2.1 (14)                              |                       | M3.5     | R2.3.5            | Nichifu NH 1 / 9 | TIC 2          |
| 405         | 2.1 (14)                              |                       | M4       | R2.3.5            | Nichifu NH 1 / 9 | TIC 2          |
| 415         | 8.4(8)                                |                       | M5       | R8-5              | Nichifu NH 1 / 9 | TIC 8          |
| 425         | 8.4(8)                                |                       | M5       | R8-5              | Nichifu NH 1 / 9 | TIC 8          |

#### ❖ Type 1

During installation, all conduit hole plugs shall be removed, and all conduit holes shall be used.

### Recommended Input Fuse Selection

| Drive Model E510 | Fuse Type                                      |                        |
|------------------|--|------------------------|
|                  | Manufacturer: Bussmann / FERRAZ SHAWMUT        |                        |
|                  | Model  | Fuse Ampere Rating (A) |
|                  | <b>230 V Class Single / Three-Phase Drives</b> |                        |
| 2P5-HXXX         | Bussmann 20CT                                  | 690V 20A               |
| 201-HXXX         | Bussmann 20CT                                  | 690V 20A               |
| 202-HXXX         | Bussmann 35FE                                  | 690V 35A               |
| 203-HXXX         | Bussmann 50FE                                  | 690V 50A               |
| 2P5-H3XX         | Bussmann 20CT                                  | 690V 20A               |
| 201-H3XX         | Bussmann 20CT                                  | 690V 20A               |
| 202-H3XX         | Bussmann 20CT                                  | 690V 20A               |
| 203-H3XX         | Bussmann 30FE                                  | 690V 30A               |
| 205-XXXX         | Bussmann 50FE                                  | 690V 50A               |
| 208-XXXX         | Bussmann 63FE                                  | 690V 63A               |
| 210-XXXX         | FERRAZ SHAWMUT A50QS100-4                      | 500V 100A              |
| 215-XXXX         | Bussmann 120FEE / FERRAZ<br>A50QS150-4         | 690V 120A / 500V 150A  |
| 220-XXXX         | FERRAZ SHAWMUT A50QS150-4                      | 500V 150A              |

| Drive Model E510 | Fuse Type                               |                        |
|------------------|---|------------------------|
|                  | Manufacturer: Bussmann / FERRAZ SHAWMUT |                        |
|                  | Model                                   | Fuse Ampere Rating (A) |
|                  | <b>460 V Class Three-Phase Drives</b>   |                        |
| 401-XXXX         | Bussmann 10CT                           | 690V 10A               |
| 402-XXXX         | Bussmann 16CT                           | 690V 16A               |
| 403-XXXX         | Bussmann 16CT                           | 690V 16A               |
| 405-XXXX         | Bussmann 25ET                           | 690V 25A               |
| 408-XXXX         | Bussmann 40FE                           | 690V 40A               |
| 410-XXXX         | Bussmann 50FE                           | 690V 50A               |
| 415-XXXX         | Bussmann 63FE                           | 690V 63A               |
| 420-XXXX         | Bussmann 80FE                           | 690V 80A               |
| 425-XXXX         | FERRAZ SHAWMUT A50QS100-4               | 500V 100A              |

#### Motor Over Temperature Protection

Motor over temperature protection shall be provided in the end use application.

#### ■ Field Wiring Terminals

All input and output field wiring terminals not located within the motor circuit shall be marked to indicate the proper connections that are to be made to each terminal and indicate that copper conductors, rated 75°C are to be used.

#### ■ Inverter Short-Circuit Rating

This inverter has undergone the UL short-circuit test, which certifies that during a short circuit in the power supply the current flow will not rise above value. Please see electrical ratings for maximum voltage and table below for current.

- The MCCB and breaker protection and fuse ratings (refer to the preceding table) shall be equal to or greater than the short-circuit tolerance of the power supply being used.
- Suitable for use on a circuit capable of delivering not more than (A) RMS symmetrical amperes for (HP) HP in 240 / 480 V class drives motor overload protection.

| Horse Power ( HP ) | Current ( A ) | Voltage ( V ) |
|--------------------|---------------|---------------|
| 1 - 50             | 5,000         | 240 / 480     |
| 51 - 200           | 10,000        | 240 / 480     |
| 201 - 400          | 18,000        | 240 / 480     |
| 401 - 600          | 30,000        | 240 / 480     |

#### ❖ Inverter Motor Overload Protection

Set parameter 02-01 (motor rated current) to the appropriate value to enable motor overload protection. The internal motor overload protection is UL listed and in accordance with the NEC and CEC.

#### ■ 02-01 Motor Rated Current

Setting Range Model Dependent  
Factory Default: Model Dependent

The motor rated current parameter (02-01) protects the motor. The motor protection parameter 08-05 is set as factory default. Set 02-01 to the full load amps (FLA) as shown on the nameplate of the motor.



## ■ 08-05 Motor Overload Protection Selection

The inverter has an electronic overload protection function (OL1) based on time, output current, and output frequency, which protects the motor from overheating. The electronic thermal overload function is UL-recognized, so it does not require an external thermal overload relay for single motor operation.

This parameter selects the motor overload curve used according to the type of motor applied.

|              |  |
|--------------|--|
| <b>08-05</b> | <b>Selection for motor overload protection (OL1)</b> |
| <b>Range</b> | <b>0: Disabled</b><br><b>1: Enabled</b>              |

Sets motor overload protection function in parameter 08-05 according to the applicable motor.

**08-05 = 0:** Disables the motor overload protection function when two or more motors are connected to a single inverter. Use an alternative method to provide separate overload protection for each motor such as connecting a thermal overload relay to the power line of each motor.

**08-05 = 1:** The motor overload protection function should be set to hot start protection characteristic curve when the power supply is turned on and off frequently, because the thermal values are reset each time when the power is turned off.

## ■ 08-06 Motor Overload Operation Selection

|              |   |
|--------------|---|
| <b>08-06</b> | <b>Start-up mode of overload protection operation (OL1)</b>   |
| <b>Range</b> | <b>0: Coast-to-Stop After Overload Protection is Activated</b><br><b>1: Drive Will Not Trip when Overload Protection is Activated (OL1)</b> |

**08-06=0:** When the inverter detects a motor overload the inverter output is turned off and the OL1 fault message will flash on the keypad. Press RESET button on the keypad or activate the reset function through the multi-function inputs to reset the OL1 fault.

**08-06=1:** When the inverter detects a motor overload the inverter will continue running and the OL1 alarm message will flash on the keypad until the motor current falls within the normal operating range.

## ■ 08-11 Motor Type Selection

|              |   |
|--------------|---|
| <b>08-11</b> | <b>Start-up mode of overload protection operation (OL1)</b> |
| <b>Range</b> | <b>0: Standard Motor</b><br><b>1: Inverter Duty Motor</b>   |

**08-11=0:** For motors with forced cooling

**08-12=1:** For motors without forced cooling

■ **08-12 Motor Overload Protection Curve**

|              |  |
|--------------|--|
| <b>08-12</b> | <b>Start-up mode of overload protection operation (OL1)</b>  |
| <b>Range</b> | <b>0:</b> Motor Overload Protection for General loads (OL=103 %) (150% for 1 Minute)<br><b>1:</b> Motor Over load Protection for HVAC (Fan & Pump) (OL=113%) (123% for 1 Minute) |

**08-12=0:** For constant torque applications with a load less than 103% of the motor rated current. If the load is greater than 150% of the motor rated current, the motor will run for 1 minute before faulting on motor overload.

**08-12=1:** For variable torque applications (Fan, Pumps...) with a load less than 113% of the motor rated current. If the load is greater than 123% of the motor rated current, the motor will run for 1 minute before faulting on motor overload.

**TECO**   **Westinghouse**

---

***INVERTER***

**E510**

**Distributor**

Teco-Westinghouse Motor Company  
5100 N. IH-35  
Round Rock, Texas 78681  
1-800-279-4007

**[www.tecowestinghouse.com](http://www.tecowestinghouse.com)**

**Ver 01: 2015.05**

Downloaded from Dealers Industrial Equipment -- Visit <https://DealersElectric.com> or call (908) 688-1966 for all of your Teco needs!